


INSTALLATION MANUAL

ELECTRONIC MODULAR SWITCHING SYSTEM

KX-T61610B

EASA-PHONE

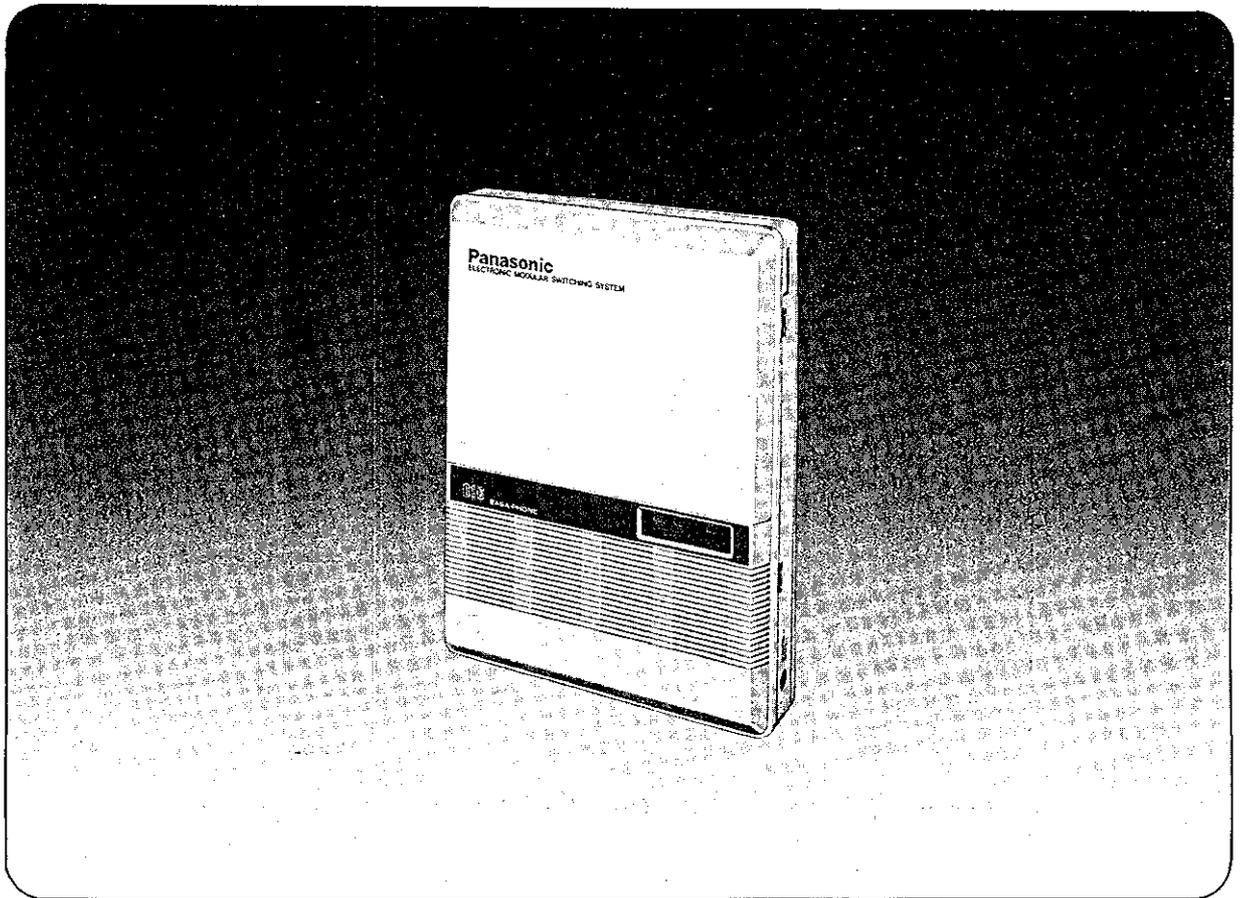

Panasonic

Please read this manual before connecting the KX-T61610B

Thank you for purchasing the Panasonic Model KX-T61610B,
Electronic Modular Switching System (EMSS).

System Component

	Model No.	Description
Service unit	KX-T61610B	Electronic Modular Switching System
Telephone	KX-T61620 KX-T61630 KX-T61650	EMSS Proprietary Telephone EMSS Proprietary Telephone with LCD EMSS Proprietary Telephone
Optional equipment	KX-T61640 KX-T30860 KX-T30865 KX-T30890 KX-A16B KX-A21	DSS Console Doorphone Adaptor Doorphone Headset System Back-up Unit Cable Kit with Terminal

NOTICE: In this INSTALLATION MANUAL, KX-T61610B is abbreviated to KX-T61610.

The serial number of this product may be found on the label affixed to the bottom of the unit. You should note the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.: **KX-T61610B**

SERIAL NO.:

—For your future reference—

DATE OF PURCHASE _____

NAME OF DEALER _____

DEALER'S ADDRESS _____

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



73/23/EEC
89/336/EEC
92/31/EEC
93/68/EEC

TABLE OF CONTENTS

Name and Location	2-1
Installation	2-2
Connection	2-4
Frame Ground Connection	2-5
Rechargeable Battery Installation	2-5
Connection of The Central Office Line	2-6
Connection of the Extension (for Proprietary Telephone KX-T61620/KX-T61630/KX-T61650/KX-T30820/KX-T30830/ KX-T30850)	2-7
Connection of a Standard Telephone to Extensions	2-8
Connection with the Optional KX-A21	2-9
Connection of the DSS Console (KX-T61640) to an Extension	2-11
External Music Source	2-13
Paging Equipment	2-13
Connection of The Optional Doorphone (KX-T30865)	2-14
To Connect a Polarity Sensitive Telephone	2-15
Power Supply	2-16
To Connect Optional System Back-up Unit (KX-A16B)	2-16
To Connect Printer	2-17
Programming	
Programming Instructions	3-1
Example of Programming	3-3
	Default
Date and Time Setting	3-4
	87 JAN. 01 THU 12:00 AM
System Speed Dialing Entry	3-5
	has not been stored
DSS Console Assignment	3-8
	Console has not been assigned
CO Connection Assignment	3-10
	has been added
Dial Mode (Tone/Pulse) Selection	3-11
	PULSE
Switching Mode (Day/Night Service)	3-12
	manual mode
Starting Time (Day/Night Service)	3-13
	day service 9:AM night service 5:PM
Flexible Day Outward Dialing Assignment	3-15
	all CO's have been assigned on all extensions
Flexible Night Outward Dialing Assignment	3-16
	all CO's have been assigned on all extensions
Flexible Day Ringing Assignment	3-17
	all CO's have been assigned on all extensions
Flexible Night Ringing Assignment	3-18
	all CO's have been assigned on all extensions
Toll Restriction—Class Assignment	3-19
	Class 1
Toll Restriction—Area Code Selection	3-20
	has not been stored

<i>Automatic Answering (Automatic/Manual)</i>		
<i>Selection</i>	<i>Auto Answer</i>	3-21
<i>Host PBX Access Codes Assignment</i>	<i>has not been stored</i>	3-22
<i>Preferred CO Line Assignment</i>	<i>non-assignment</i>	3-23
<i>Programmable Call Waiting</i>	<i>has been removed</i>	3-24
<i>Delayed Ringing Assignment</i>	<i>all CO's have been not delayed on all extensions</i>	3-25
<i>Delayed Ringing Count Selection</i>	<i>After 2 rings</i>	3-26
<i>Intercom Alerting Mode</i>	<i>Tone Call</i>	3-27
<i>Programmable Doorphone</i>	<i>D-Phone 1, 2</i>	3-28
<i>Dial Call Pickup Group Assignment</i>	<i>Pickup-G:1</i>	3-29
<i>Account Code Input Mode</i>	<i>Option</i>	3-30
<i>Duration Time Count Start Mode</i>	<i>5S after dial</i>	3-31
<i>SMDR Communication Parameters</i>	<i>(see pages)</i>	3-32
<i>System Data Dump</i>	<i>System parameters</i>	3-37
<i>SMDR Incoming/Outgoing Selection</i>	<i>Outgoing: ON Incoming: ON</i>	3-40
<i>Hold Time Reminder</i>	<i>3 minutes</i>	3-41
<i>Hold Recall Time Set</i>	<i>30 sec</i>	3-42
<i>Programmable External Paging Access Tone</i>	<i>has been added</i>	3-43
<i>Programmable Secret Speed Dial</i>	<i>No Secret</i>	3-44
<i>Hookswitch Flash Timing</i>	<i>600 msec</i>	3-45
<i>Disconnect Time</i>	<i>1.5 sec</i>	3-46
<i>Calling Party Control (CPC) Signal</i>	<i>has been added</i>	3-47
<i>DSS Button Mode</i>	<i>without transfer</i>	3-48
<i>Transfer Recall Time</i>	<i>30 sec</i>	3-49
<i>M3/FWD Selection (for KX-T30850, KX-T61650)</i>	<i>feature button</i>	3-50
<i>Programmable Executive Override</i>	<i>has not been added</i>	3-51
<i>Automatic Designated CO Line Access</i>	<i>all CO's have been assigned on all extensions</i>	3-52
<i>Programmable Call Waiting Tone</i>	<i>Tone 1</i>	3-53

**Detailed Feature for EMSS Proprietary Telephone
(KX-T61630, KX-T61620, KX-T61650, KX-T30830,
KX-T30820, KX-T30850)**

To Make Calls

<i>Inter Office Calling (Intercom)</i>	4-1
<i>Outward Dialing</i>	4-2
<i>Speed Dialing</i>	4-3
<i>One Touch Dialing</i>	4-4
<i>Calling Doorphone</i>	4-6
<i>Distinctive Dial Tone</i>	4-6

When a Line is Busy	
Automatic Call Back Busy—(Camp-on)	4-7
Busy Station Signaling	4-8
Last Number Redial	4-8
To Receive Calls	
Answer	4-9
Automatic Answer—Intercom	4-9
Dial Call Pickup	4-10
Directed Call Pickup	4-10
Call Park Retrieve	4-11
Doorphone	4-12
Distinctive Ring Tone	4-12
While Having a Conversation	
Call on Hold	4-13
Call on Exclusive Hold	4-14
Conference	4-15
Call Waiting	4-16
Call Transfer	4-17
Call Splitting-Between CO and Intercom	4-18
Call Splitting-Intercom	4-19
Paging	
Paging All Extensions	4-19
Paging Group	4-20
Paging—External	4-20
Paging And Transfer	4-21
Paging—Answer	4-21
Use of Other Features	
Background Music	4-22
Mute Operation	4-23
One Touch Access for System Features	4-23
External Feature Access	4-24
Account Code	4-25
DSS Console	4-27
Pulse/Tone Conversion	4-29
Time Setting	4-29
Auto CO Hunting	4-30
Executive Override	4-31
Flexible CO Button	4-32
Flexible DSS Button	4-32
Intercom Alerting Mode	4-33
Busy Lamp Field	4-33
Power Failure Transfer	4-34
Duration Time of Call Display	4-34
Lockout	4-34
Mixed Station Dialing	4-34

Station Programming

<i>Dial Call Pickup Deny</i>	4-35
<i>Call Forwarding</i>	4-36
<i>Do not Disturb</i>	4-38
<i>Data Line Security</i>	4-39
<i>Saved Number Redial</i>	4-39
<i>Flexible Night Service</i>	4-40
<i>Station Program Clear</i>	4-41

Operation for a Standard Telephone

<i>To Make Calls</i>	5-1
<i>When a Line is Busy</i>	5-2
<i>To Receive Calls</i>	5-3
<i>While Having a Conversation</i>	5-4
<i>Paging</i>	5-5
<i>Use of Other Features</i>	5-7
<i>Station Programming</i>	5-9

Troubleshooting

<i>During Installation</i>	6-1
<i>During Connection</i>	6-2
<i>During Operation</i>	6-3
<i>Reset Button</i>	6-3
<i>DTMF Receiver Check</i>	6-4

<i>Table of System Features</i>	6-5
---------------------------------------	-----

<i>List of Tones</i>	6-6
----------------------------	-----

<i>List of Ring Tones</i>	6-6
---------------------------------	-----

<i>Others</i>	6-7
---------------------	-----


<i>Specification</i>	6-8
----------------------------	-----

<i>Phone Number Directory</i>	6-9
-------------------------------------	-----


<i>Programming Table</i>	6-11
--------------------------------	------

<i>Quick Reference Card for Standard Telephone</i>	6-19
--	------

NAME AND LOCATION

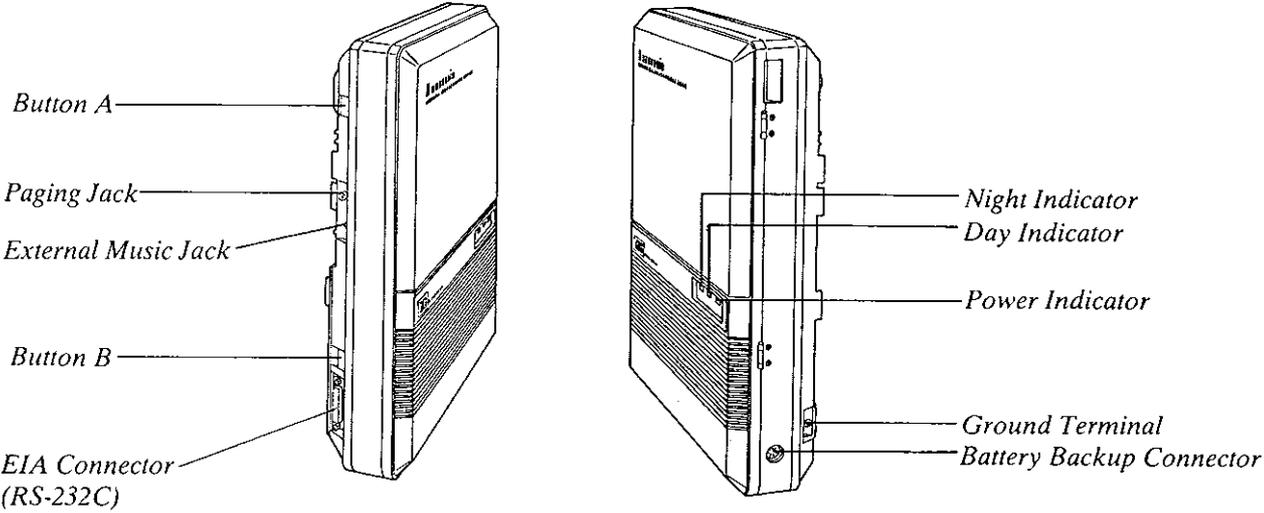

Push Buttons A and B simultaneously to open Front Cover.

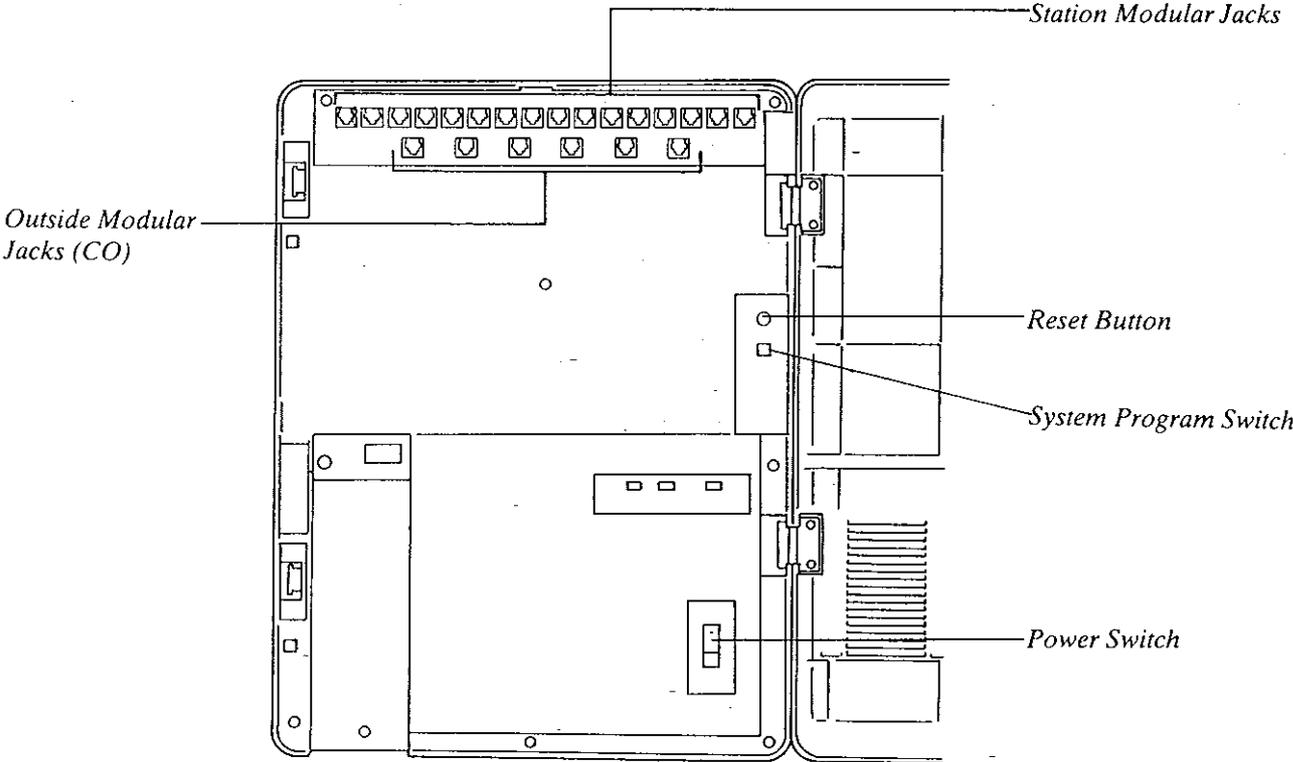

INSTALLATION

Installation

Cautions

- Avoid installing in the following places. (Doing so may result in malfunction, noise, or discoloration.)
 1. In direct sunlight and hot, cold, or humid places. (Temperature range: 32°F–104°F)
 2. Sulfuric gases produced in areas where there are thermal springs, etc. may damage the equipment or contacts.
 3. Places in which shocks or vibrations are frequent or strong.
 4. Dusty places, or places where water or oil may come into contact with the unit.
 5. Near high-frequency sewing machines or electric welders.
 6. On or near computers, telexes, or other office equipment, as well as microwave ovens or air conditioners. (It is preferable not to install in the same room with the above equipment.)
 7. Near radio broadcast antennas (including short wave).
 8. Install at least 1.8 m from radios and televisions. (both the electronic modular switching system and EMSS proprietary telephones)
 9. Do not obstruct area around the electronic modular switching system. (for reasons of maintenance and inspection—be especially careful to allow space for cooling above and at the sides of the electronic modular switching system)

Wiring


Cautions

1. Do not wire the telephone cable in parallel with the AC power source, computer, telex etc. If the cables run near those wires, shield the cables with metal tube or use shield cables and ground the shields.
2. When cables run on the floor, use protectors or the like to protect the wires where they may be stepped on. Avoid wiring under carpets.
3. Avoid using the same power supply outlet for computers, telexes, and other office equipment. Otherwise, the KX-T61610's system operation may be interrupted by the induction noise from such equipments.


The wall where the KX-T61610 is to be mounted must be able to support a weight of KX-T61610. If screws other than the ones supplied are used, use the same-sized diameter screws as the enclosed ones.

To Wall Mount:


1. Place the templet (included) on the wall to mark the 3 screw positions.

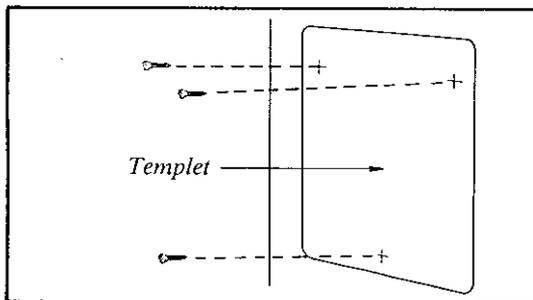

2. Install the 3 screws into the wall.

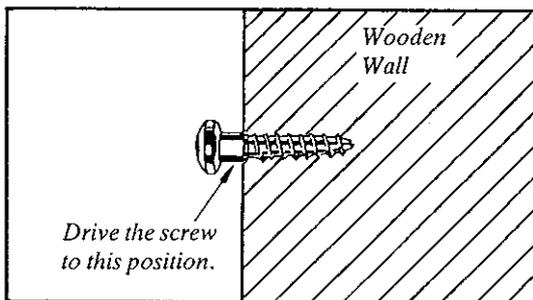


3. Hook the unit on the screw heads.

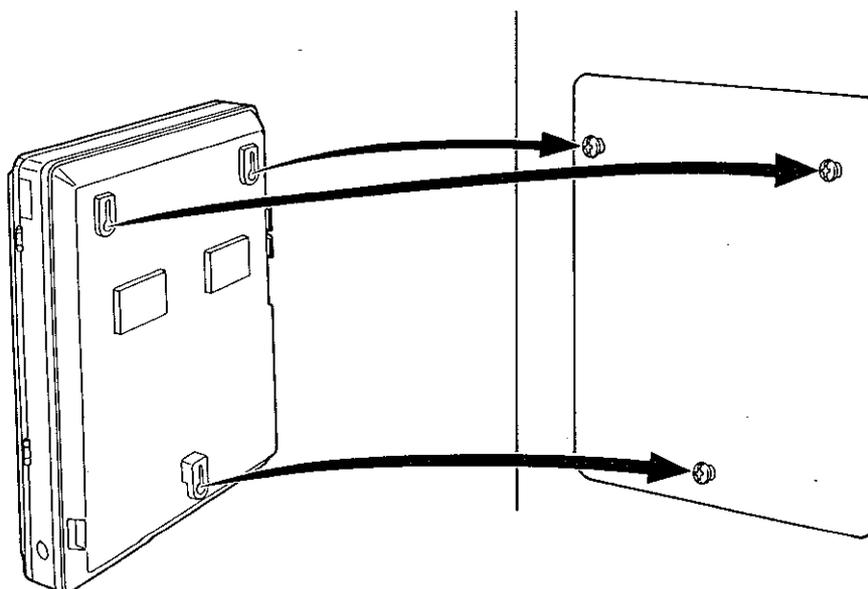


To Mount on Concrete or Mortar Walls:

1. Place the templet (included) to mark 3 screw positions.
2. Drill 3 holes and drive the anchor plugs (included) with a hammer, flush to the wall.

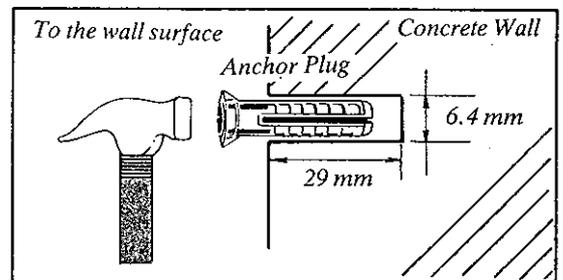

3. Install the 3 screws into the anchor plugs.

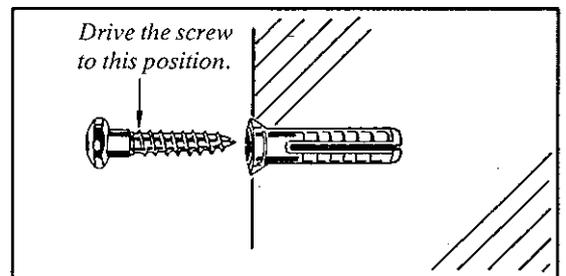


4. Hook the unit on the screw heads.

CONNECTION


The socket-outlet shall be installed near the equipment and shall be easily accessible.

After all the connections are completed, turn the Power Switch ON.





If an extension does not operate properly (for example: The LCD of the KX-T61630/ KX-T30830 does not display properly.), disconnect the telephone from the extension line and then connect again, or turn OFF the power switch of the KX-T61610 and then ON again.

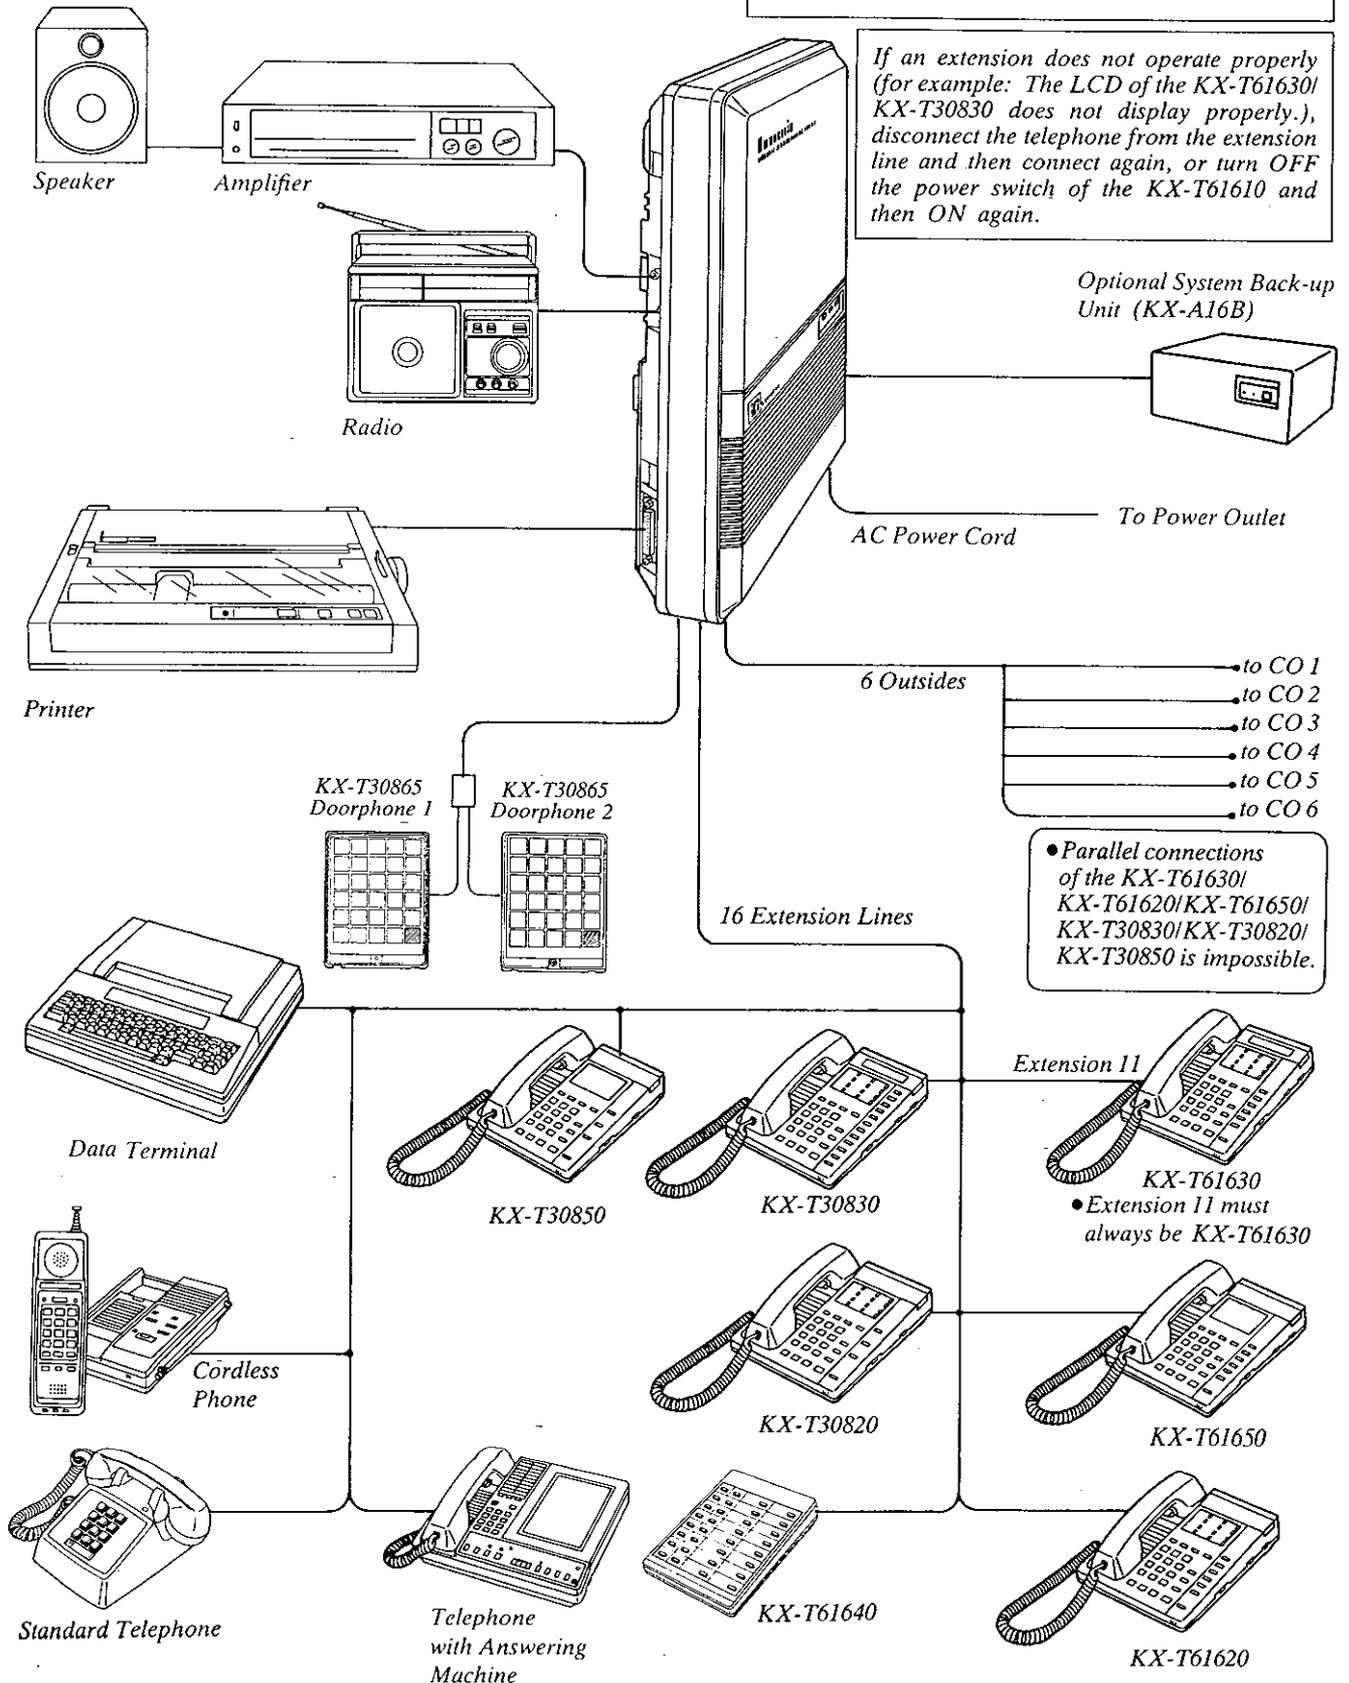

Frame Ground Connection

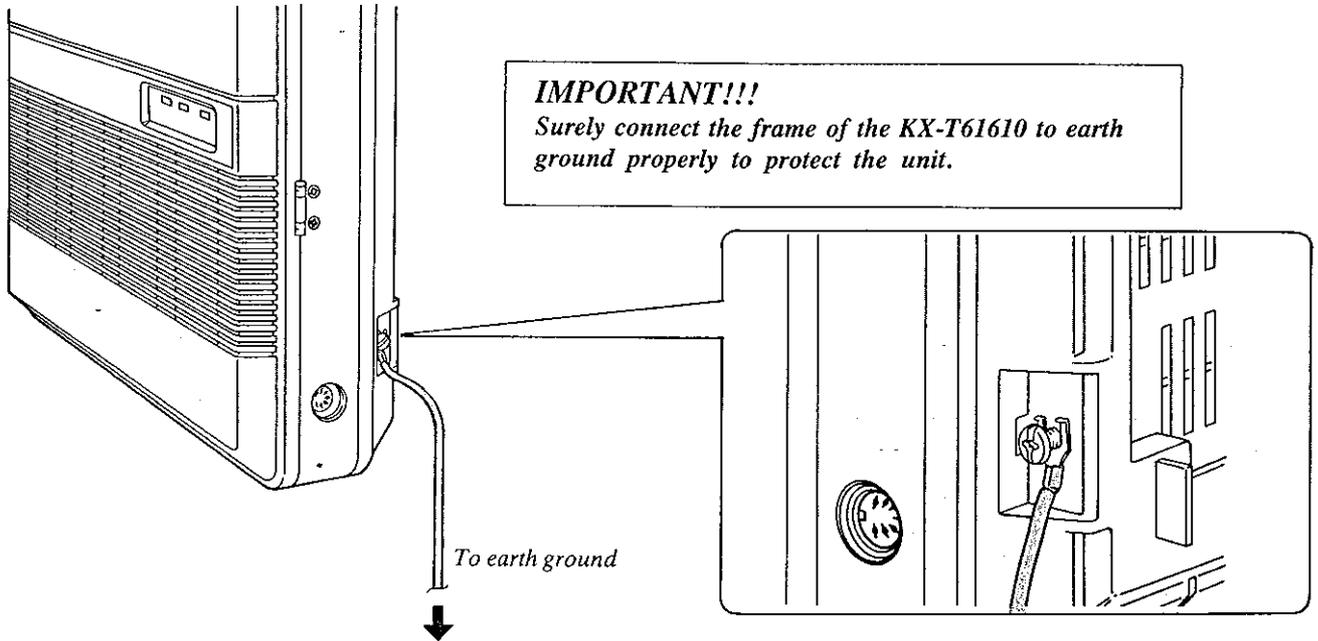


Rechargeable Battery Installation

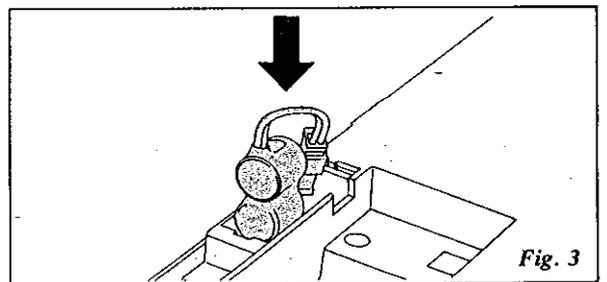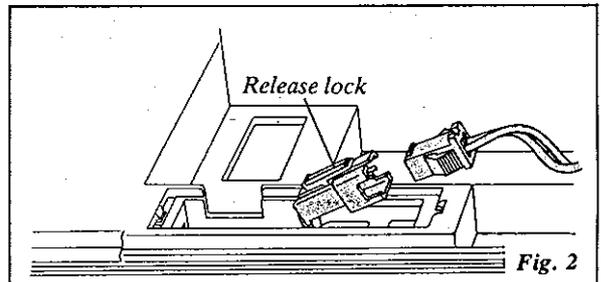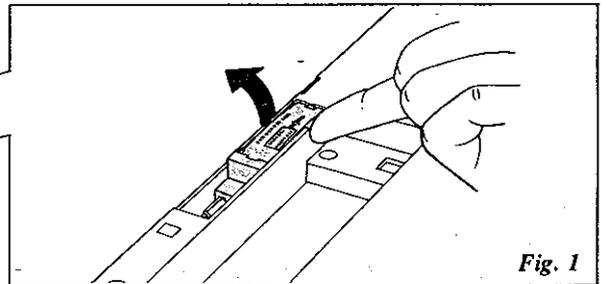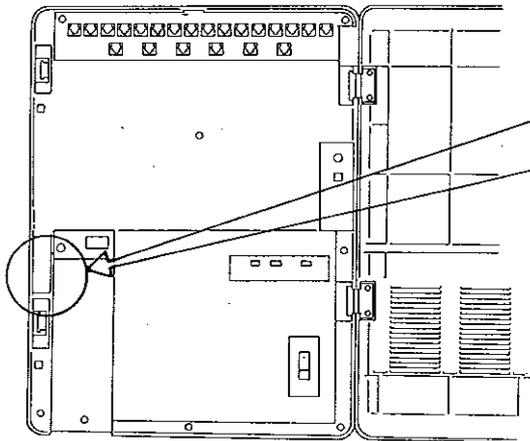

1. Remove the battery cover from the compartment. (Fig. 1)
2. Connect the battery (included). (Fig. 2)
3. Install the battery into the battery compartment. (Fig. 3)

*Replace the battery every 5 years with (P-01H-F2G1). To remove connector, depress to release and slide (pull) apart connector. (Fig. 2)

Connection of The Central Office Line

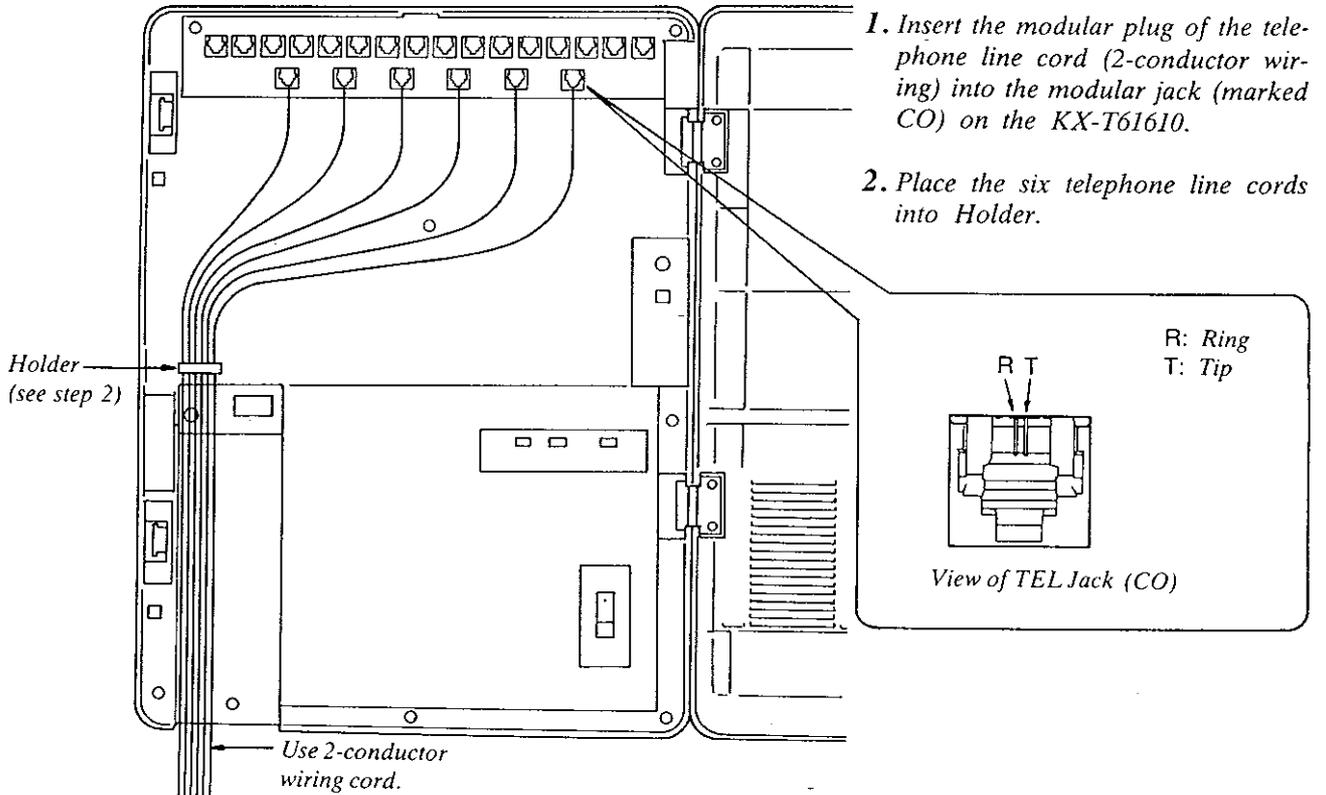


To Terminal Board or Modular Jacks
from the Central Office (CO).

Caution

Mis-connection may cause the KX-T61610 to operate improperly.

See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

**Connection of The Extension (for Proprietary Telephone KX-T61620/
KX-T61630/KX-T61650/KX-T30820/KX-T30830/KX-T30850)**

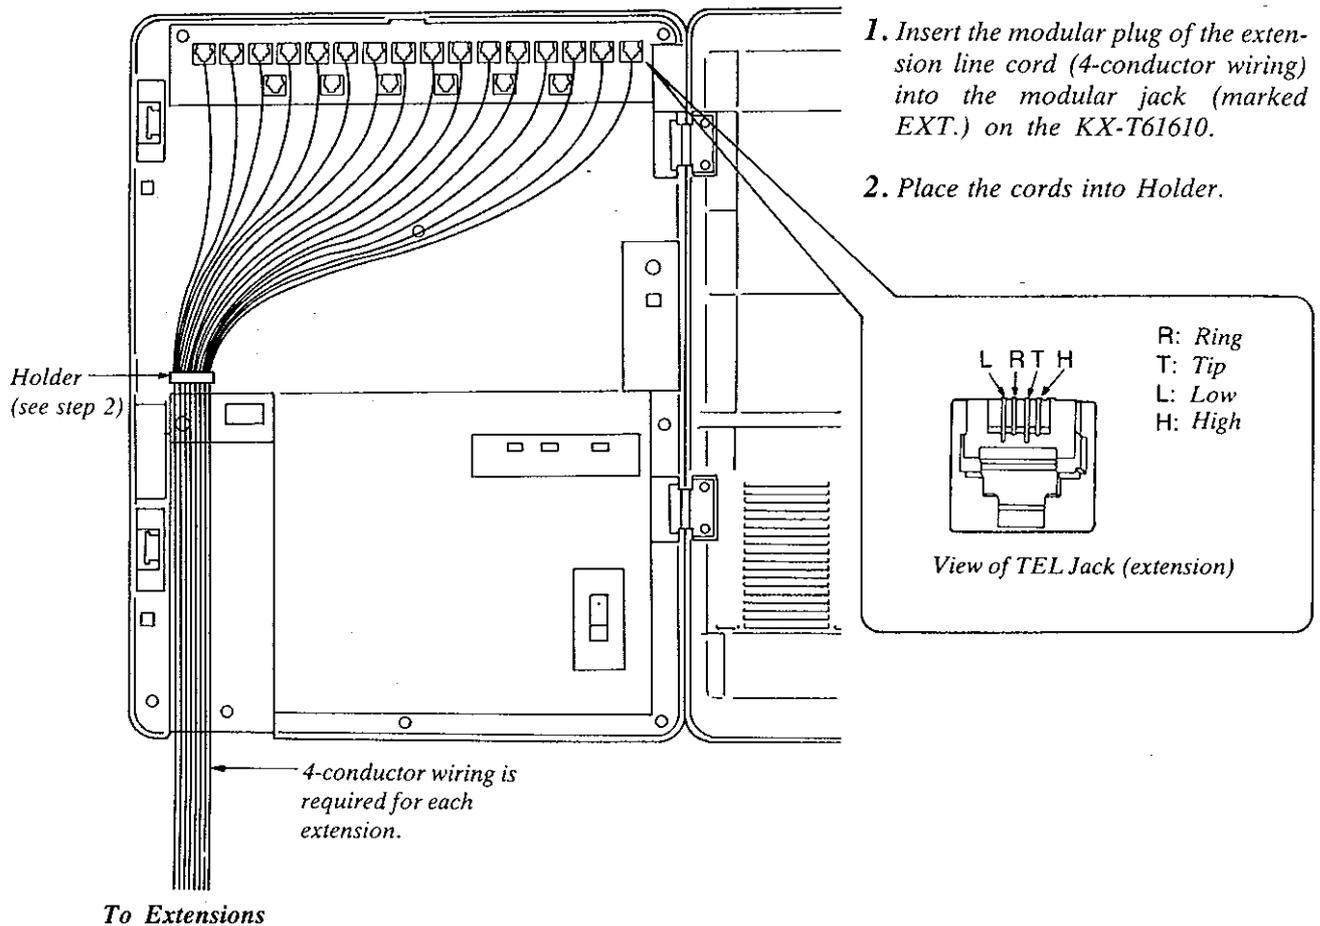


- The inner 2 wires (red, green) are for Tip and Ring and the outer 2 wires (black and yellow) are for Low and High (DATA).
- The max. length of the extension line cord that connects the KX-T61610 and the extension is shown below.
26 AWG: Under 140 m
24 AWG: Under 230 m
22 AWG: Under 360 m

Caution

Mis-connection may cause the KX-T61610 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

Connection of a Standard Telephone to Extensions

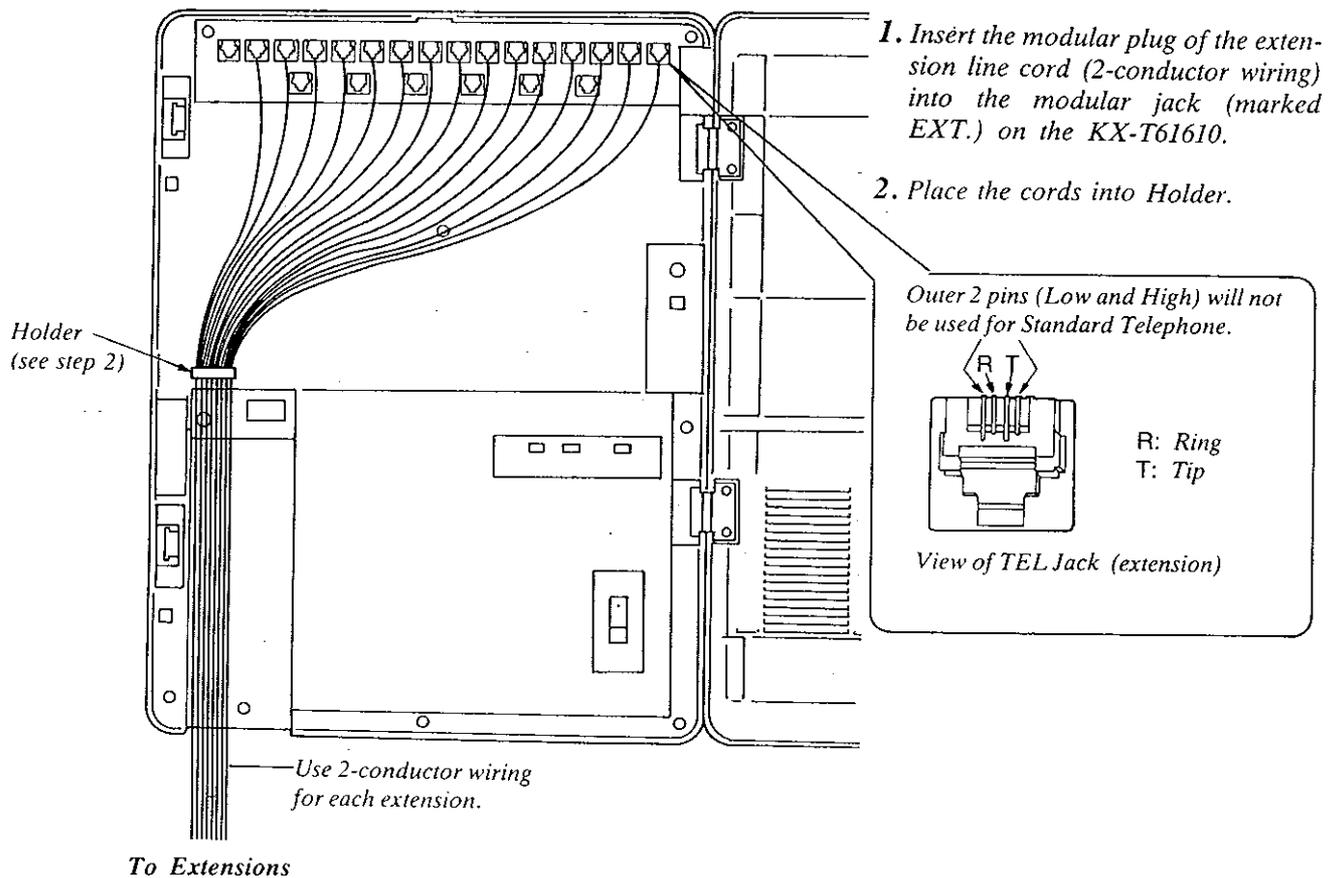

- The max. length of the extension line cord that connects the KX-T61610 and the extension is shown below.
 26 AWG: Under 700 m
 24 AWG: Under 1130 m
 22 AWG: Under 1800 m
- If a telephone or answering machine with an A-A1 relay is connected to the KX-T61610, set the A-A1 relay switch of the telephone or answering machine to OFF.

Caution

Mis-connection may cause the KX-T61610 to operate improperly.
 See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

Connection with the Optional KX-A21 (Cable Kit with Terminal)

The optional KX-A21 enables you to connect 6 CO Lines and 16 extensions to your Electronic Modular Switching System, KX-T61610.

The KX-A21 consists of the followings:

- Connector (CS205TN) 4
- TEL cord A (2-pin) 6
- TEL cord B (4-pin) 16

- Please read the Connecting Instructions for KX-A21.
- Connect the CO Line cords and extension line cords observing the diagrams shown below carefully.

■ Connection to the CO Lines

T/R	C.O.	1	2	3	4	5	6
T (green)		1	3	5	7	9	11
R (red)		2	4	6	8	10	12


Diagram 1.

■ Connection to the extensions


T/R	Ext.	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
H (Black)		20	4	8	12	16	20	4	8	12	16	20	4	8	12	16	20
T (Red)		19	3	7	11	15	19	3	7	11	15	19	3	7	11	15	19
R (Green)		18	2	6	10	14	18	2	6	10	14	18	2	6	10	14	18
L (Yellow)		17	1	5	9	13	17	1	5	9	13	17	1	5	9	13	17

Diagram 2.


CONNECTING TOOL

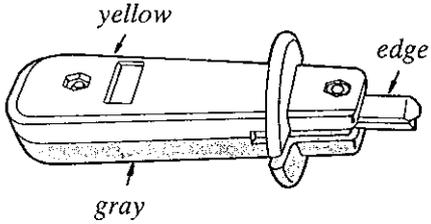

After connecting the cord to the clip terminal, use the optional Connecting Tool as shown to cut the extra cord. The edge is on the yellow side.

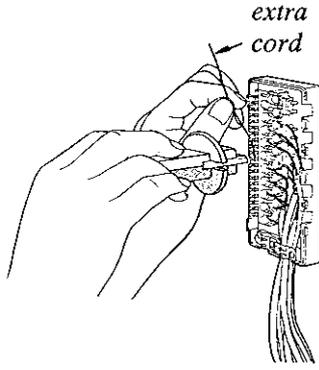

Connection with the Optional KX-A21 (Cable Kit with Terminal)

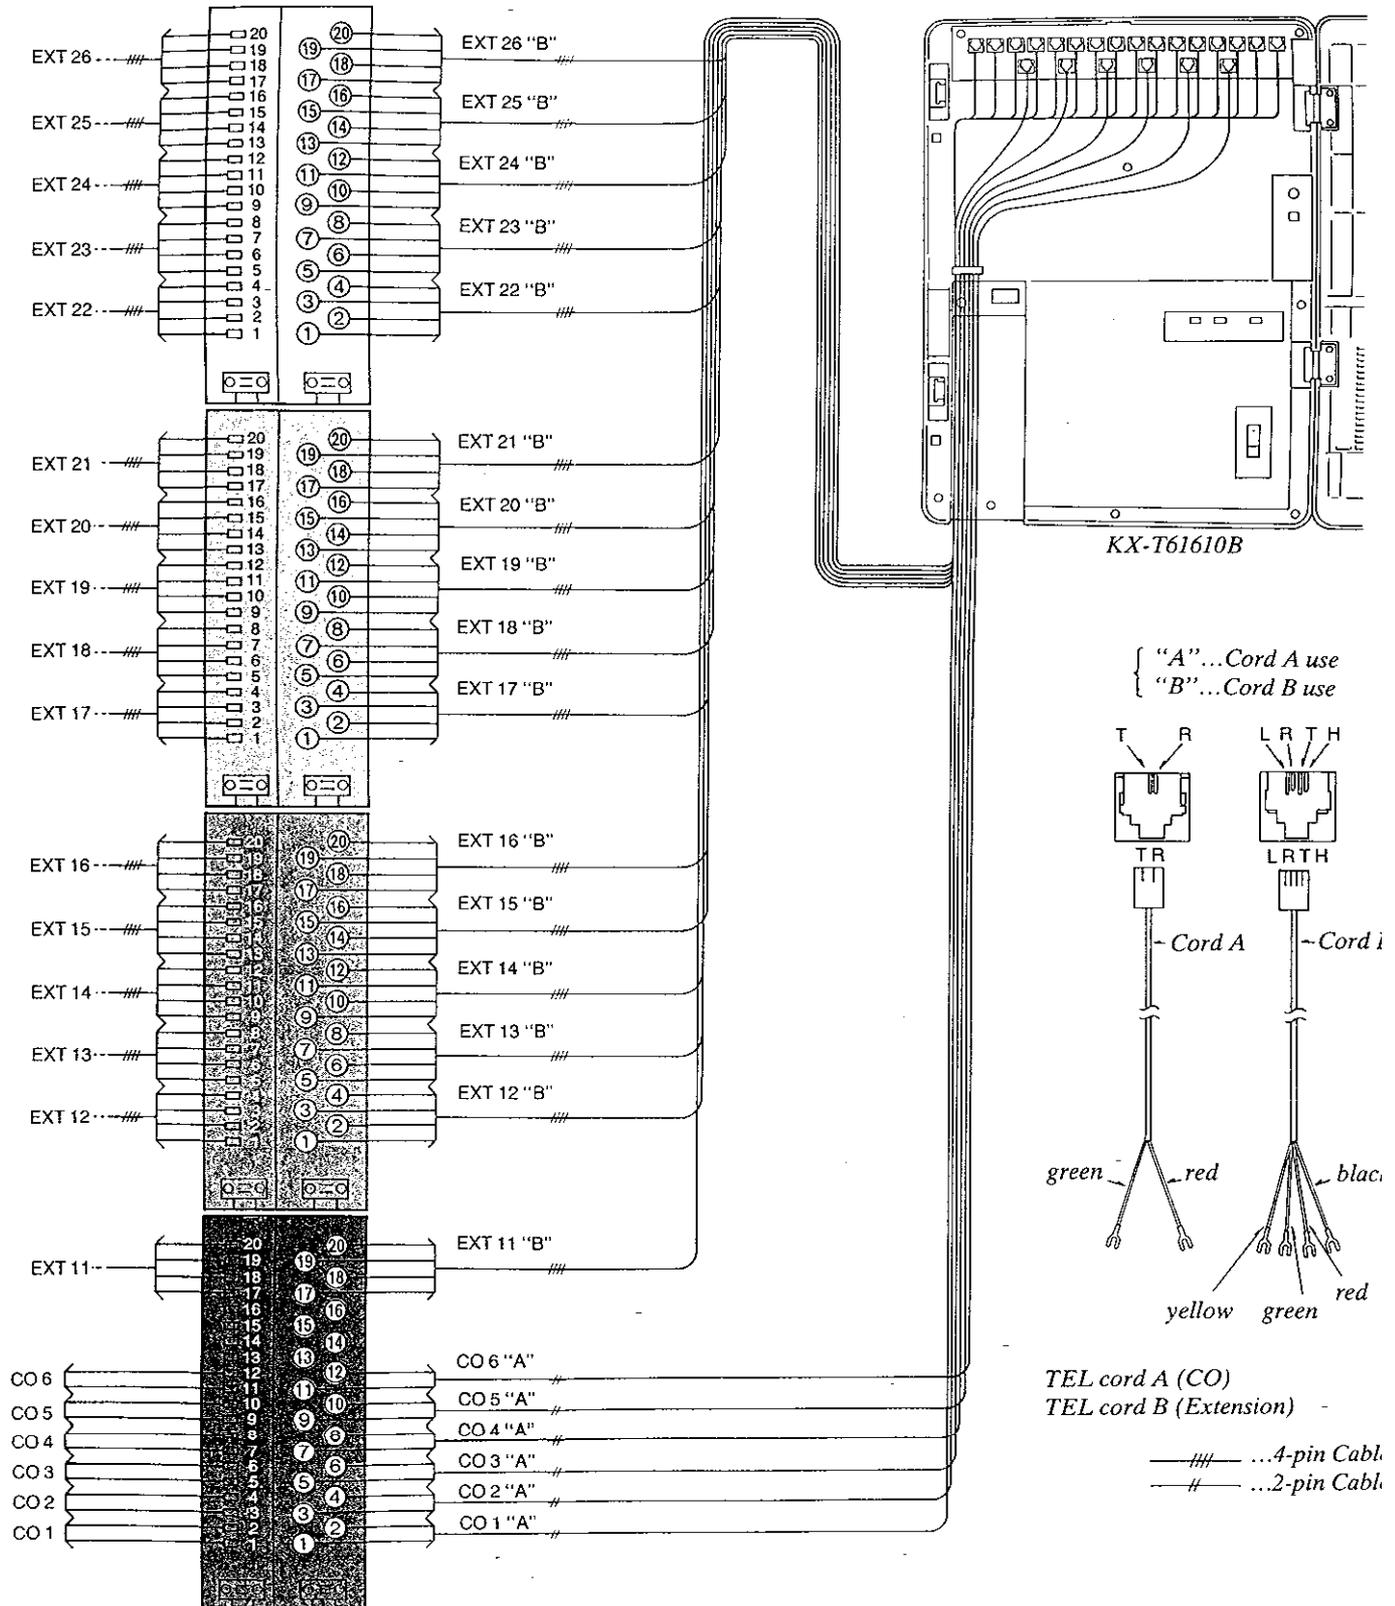


Connection of The DSS Console (KX-T61640) to an Extension

Pair Telephone

The DSS Console, KX-T61640 needs its Pair Telephone (EMSS Proprietary Telephone) for the operation, because the DSS console cannot work by itself.

The EMSS Proprietary Telephone (such as KX-T61620, KX-T61630, KX-T61650, KX-T30820, KX-T30830, KX-T30850) is required as a pair telephone for dialing, storing, etc.

Place the KX-T61640 and the pair telephone side by side on your desk.

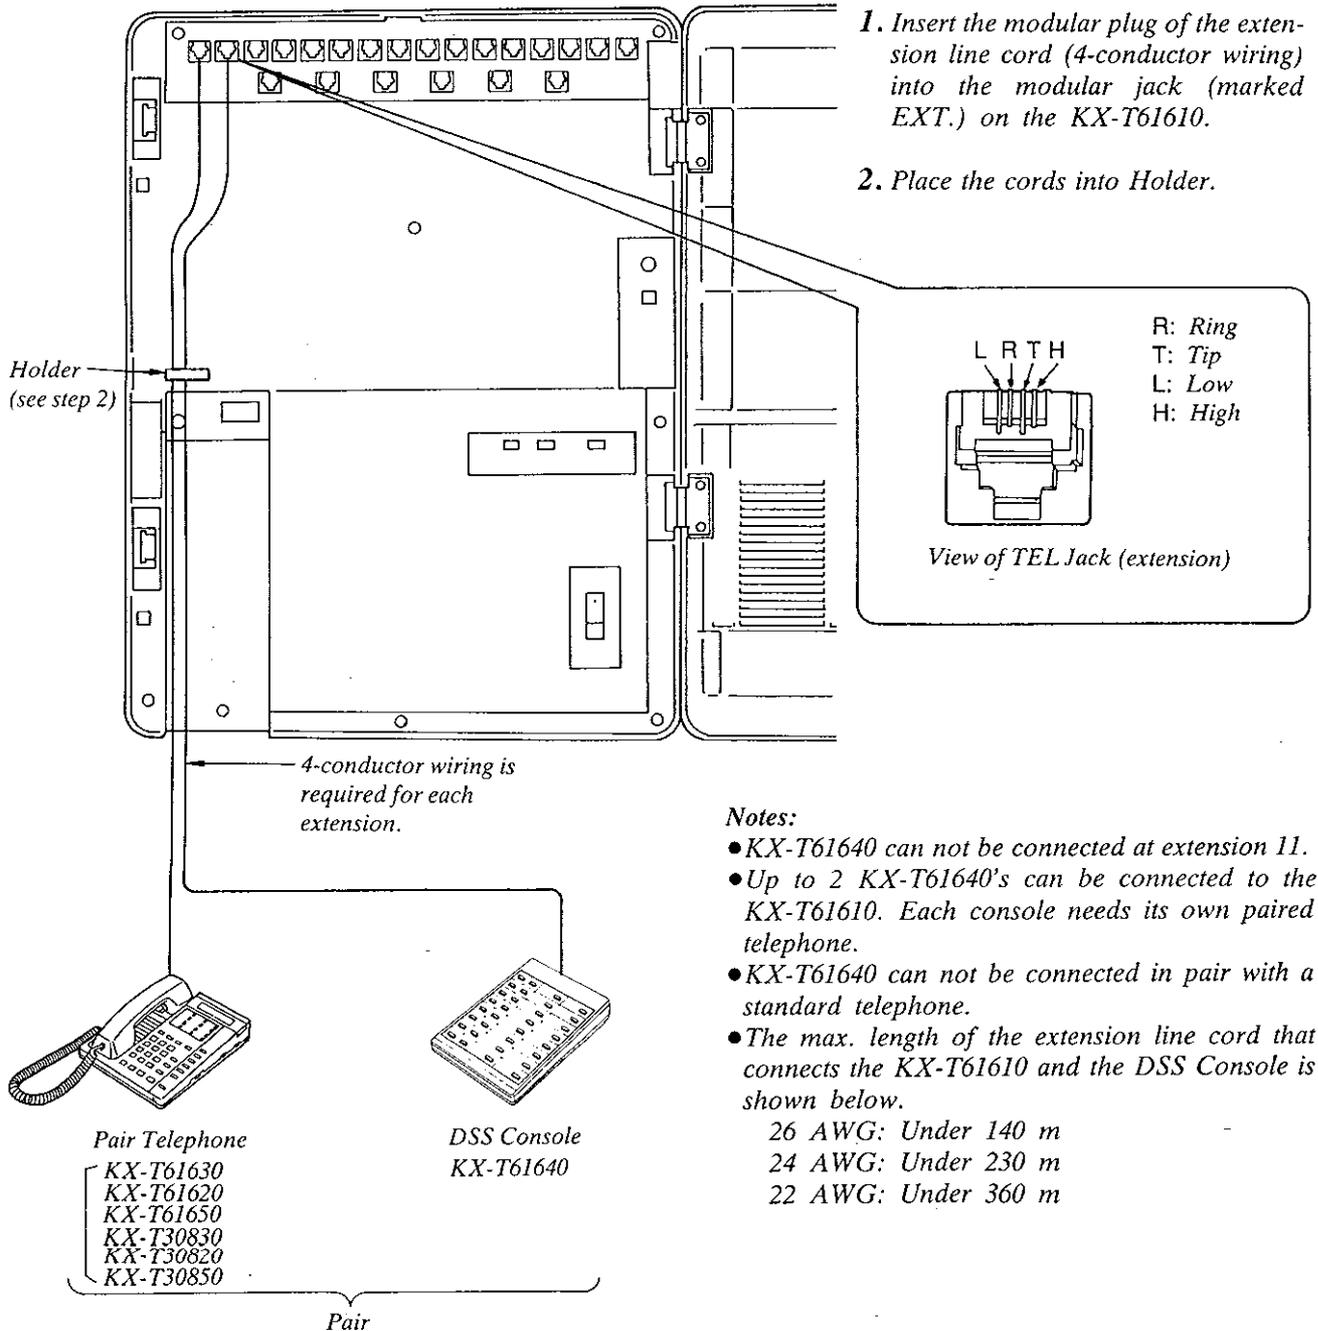

Caution

Mis-connection may cause the KX-T61610 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.


Example:

If your secretary has KX-T61630 at extension 12 and is to use the DSS console (KX-T61640), the console should be connected to extension 13.
(Paired extension is ext. 12)

1. Connect the KX-T61630 at extension 12.


2. Connect the KX-T61640 at extension 13.

- For use the KX-T61640, program should be done. Refer to "DSS Console Assignment" page 3-8.

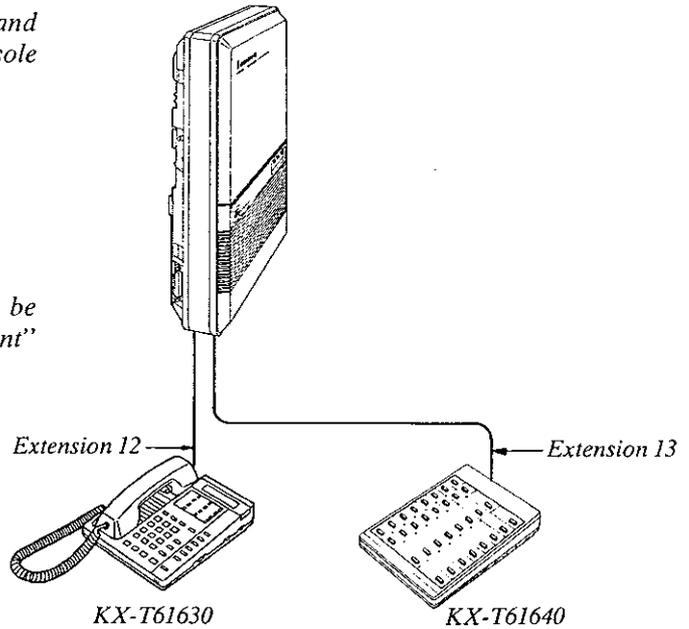


To Use Full Extensions When the DSS Console is Connected


- KX-T61610 has 16 extensions. But the DSS Console, KX-T61640 occupies one of the extensions, which can not make or receive a call. To use the full extensions, connect a standard telephone (EMSS Proprietary Telephone is not available) to the extension to which the KX-T61640 is connected.
- The standard telephone connected in parallel with KX-T61640 can be used without any affection of KX-T61640. The operation has no concern between KX-T61640 and the standard telephone.

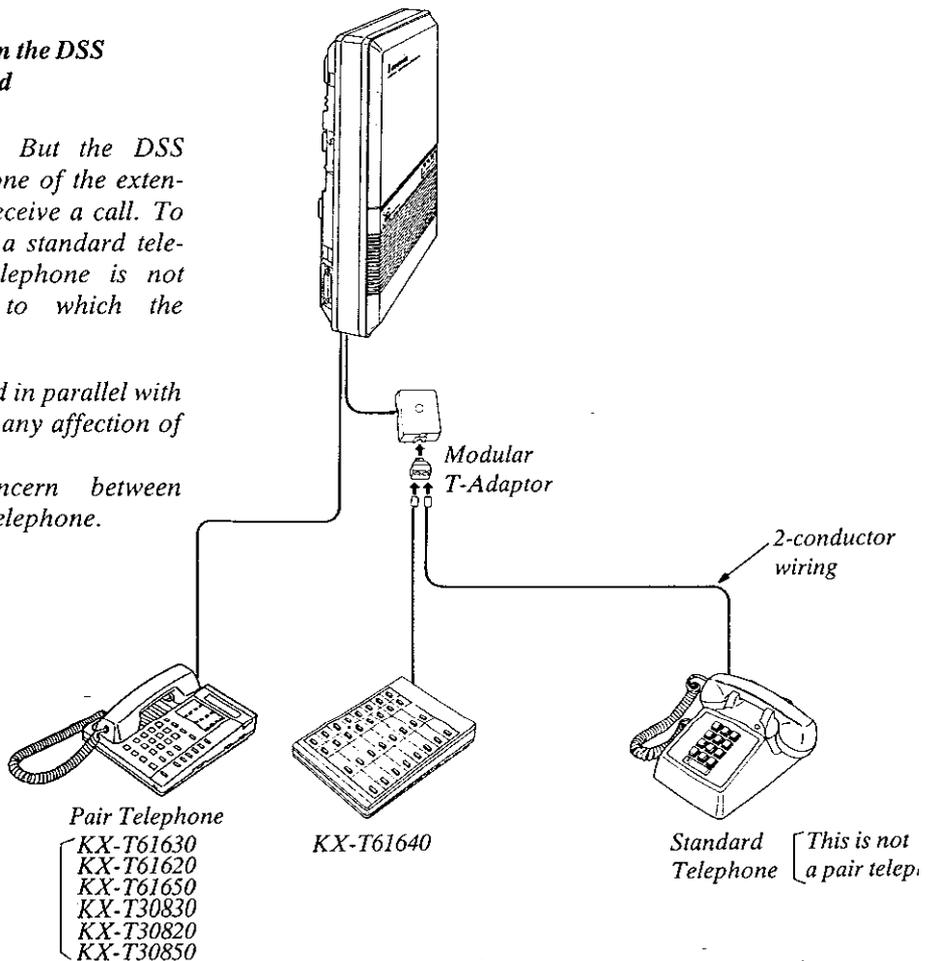

External Music Source

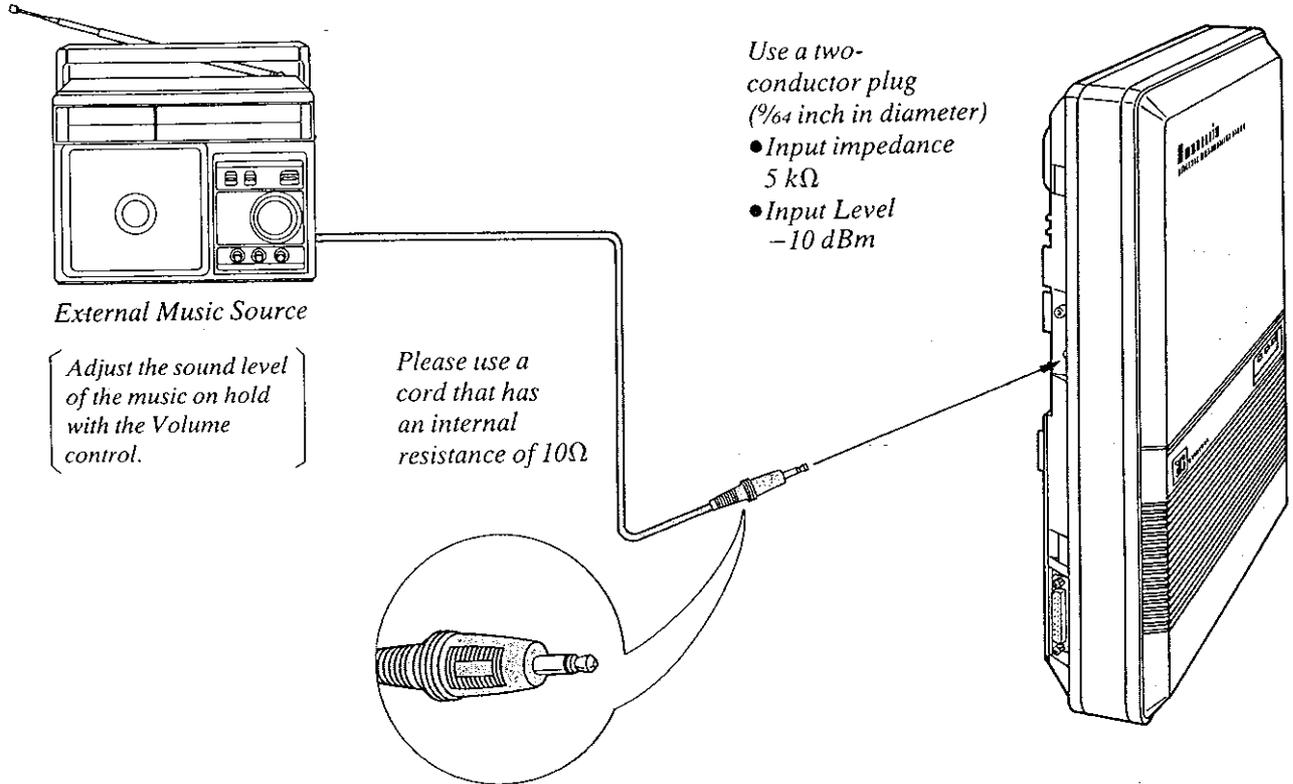

Paging Equipment

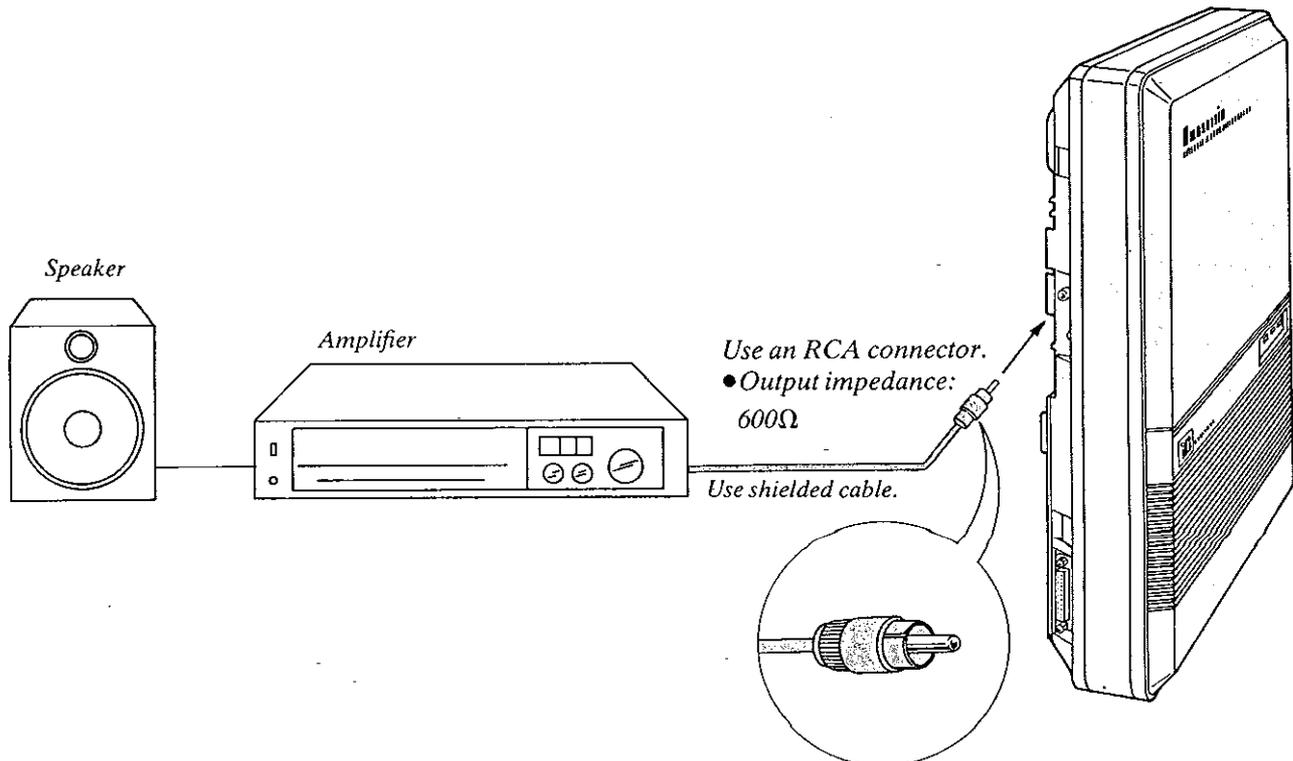


Connection of The Optional Doorphone (KX-T30865)


For installing the doorphone, use the Optional Doorphone Adaptor (KX-T30860).

1. How to install the Doorphone Adaptor to the KX-T61610


① Insert the adaptor projections to the holes.

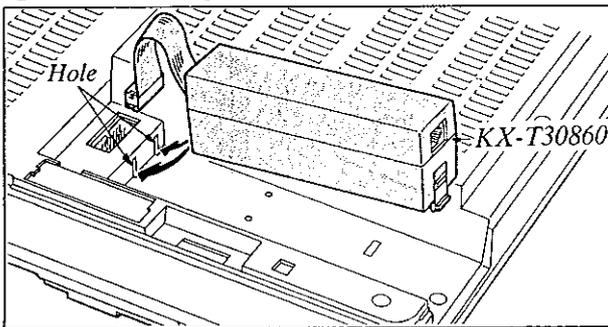

② Push the adaptor down so that it locks into the ribs of the unit.

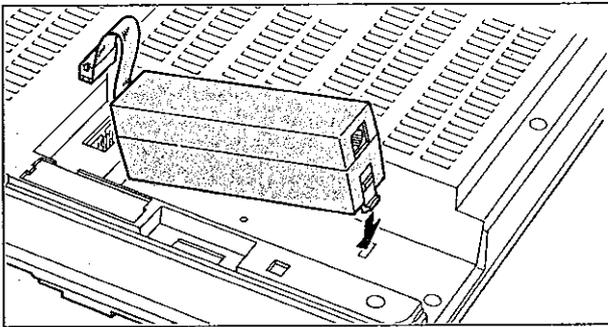

③ Insert the adaptor connector.

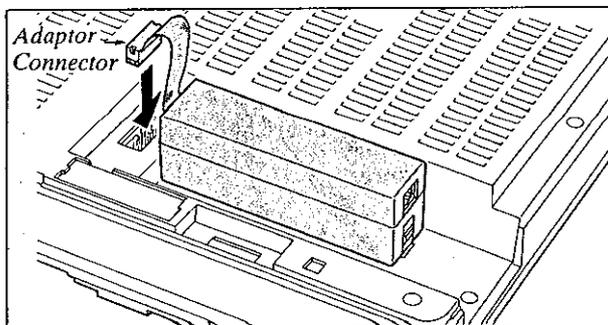


2. Wiring connection of the Doorphone

(A) Connect the doorphone adaptor to the terminal box using 4-conductor modular connectors.

(B) Connect the wires of doorphone 1 to the red and green screws of the terminal box.

(C) Connect the wires of doorphone 2 to the yellow and black screws of the terminal box.

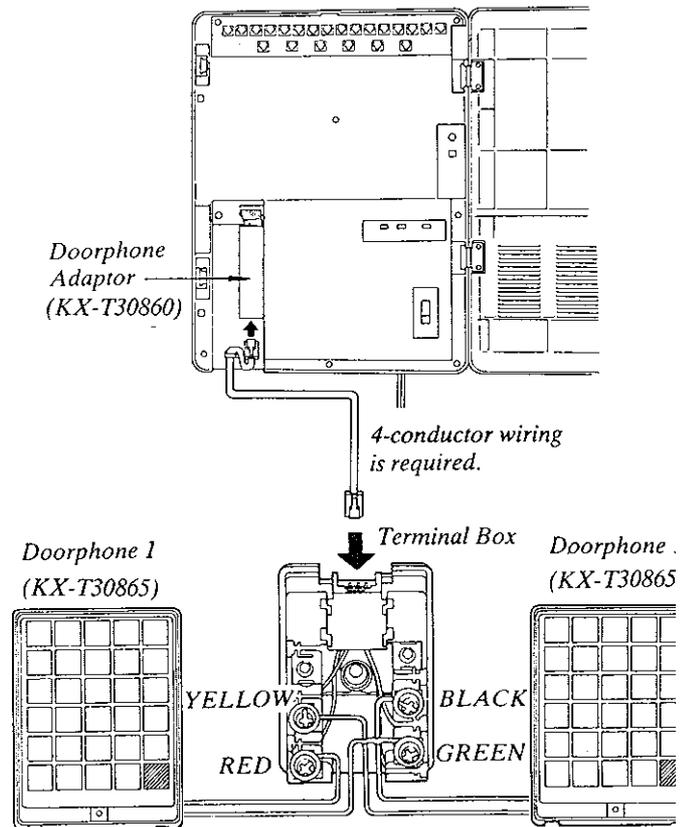

• The max. length of the telephone line cord that connects the KX-T61610 and the doorphone (KX-T30865) is shown below.

26 AWG: Under 70 m



24 AWG: Under 110 m

22 AWG: Under 180 m

To Connect a Polarity Sensitive Telephone

If the telephone you are using with the KX-T61610 is polarity sensitive.

1. Connect all extension wiring to the KX-T61610.
2. Confirm that dialing can be done from all the extensions using a tone telephone.
3. If a dialing can not be done, the polarity between the extension and the KX-T61610 must be reversed.
4. Set the Power Switch on the KX-T61610 to the OFF position.
5. Connect all Central Office (CO) Lines.
6. Confirm that dialing can be done on following extensions using a tone telephone.
 - Extension 11...CO 1
 - Extension 12...CO 2
 - Extension 13...CO 3
 - Extension 14...CO 4
 - Extension 15...CO 5
 - Extension 16...CO 6
7. If dialing can not be done, the polarity between the KX-T61610 and the Central Office Line must be reversed.

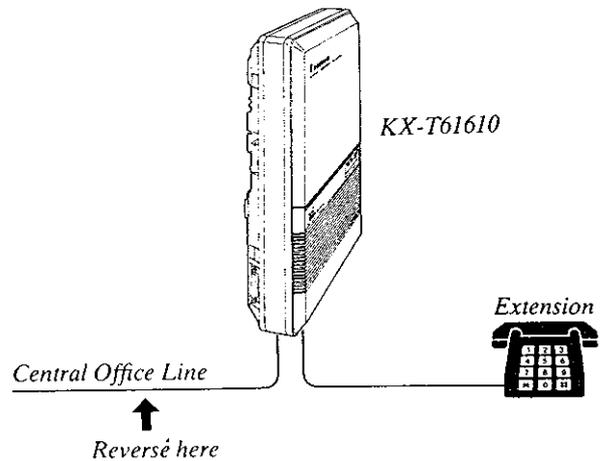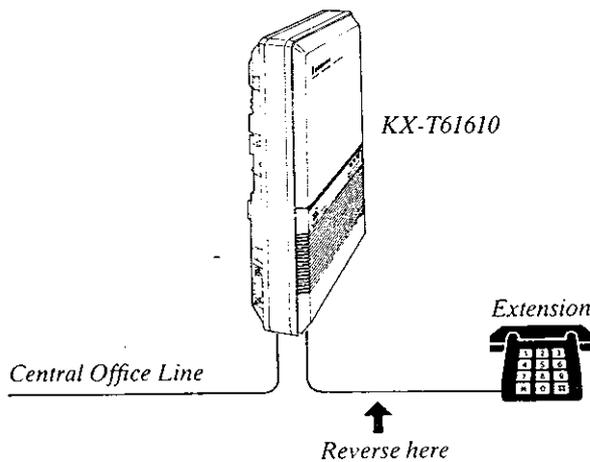


4. Set the Power Switch on the KX-T61610 to the OFF position.
5. Connect all Central Office (CO) Lines.
8. If any extension is changed or replaced, repeat these procedures (from step 1 through step 7).

Power Supply

Check the Voltage Selector to confirm if it is set to your household AC voltage. If not, reset the Voltage Selector to the correct position with a screwdriver.


- If the plug of AC Power Cord does not fit your electrical outlet, use the furnished plug adaptor.

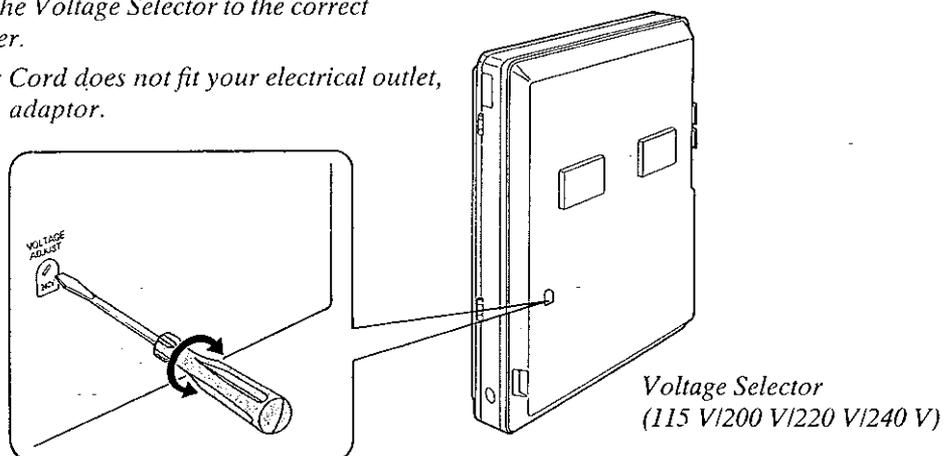


To Connect Optional System Back-up Unit (KX-A16B)

1. Connect the cord from the optional KX-A16B to the KX-T61610.
2. Check the Voltage Selector if it is set to your household AC voltage.
3. Plug in the AC power cord from the KX-A16B.
 - If the plug of AC Power Cord does not fit your electrical outlet, use the furnished plug adaptor.
4. Turn on the Power Switch located on the KX-A16B.

- Approximately 24 hours is required to recharge the KX-A16B.
- The KX-A16B will work for approximately 4 hours (on the average) in the event of power failure.
- The Battery life is 3 years.
- A simple way to check the KX-A16B is to disconnect the KX-T61610 and the KX-A16B from the AC outlets, and then to observe if the KX-T61610 operates.
- If the KX-T61610 does not operate, recharge the KX-A16B.

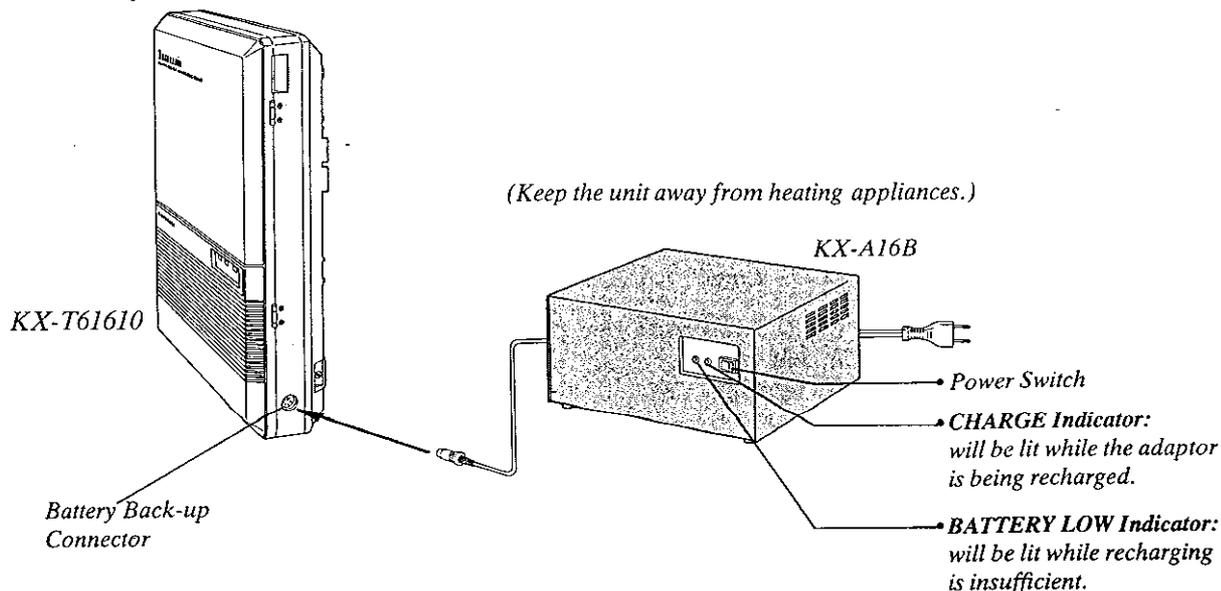

To Connect Printer

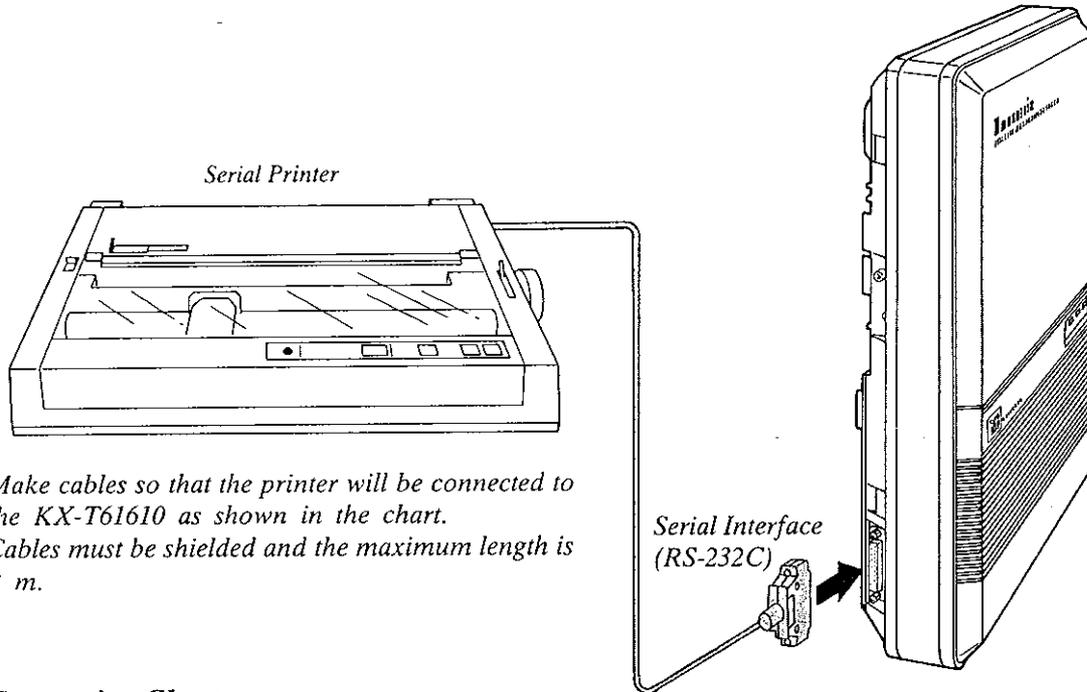

Make cables so that the printer will be connected to the KX-T61610 as shown in the chart. Cables must be shielded and the maximum length is 2 m.

Connection Chart:

KX-T61610 RS-232C

Printer RS-232C

Circuit Type (EIA)	Signal Name	Pin No.	Pin. No.	Signal Name	Circuit Type (EIA)
AA	FG	1	1	FG	AA
BA	TXD	2	3	RXD	BB
BB	RXD	3	2	TXD	BA
CB	CTS	5	5	CTS	CB
CC	DSR	6	6	DSR	CC
AB	SG	7	7	SG	AB
CD	DTR	20	20	DTR	CD
			7	SG	AB
			5	CTS	CB
			6	DSR	CC
			8	DCD	CF

PROGRAMMING

To activate this system, the requirements from telephone company and the customer must be programmed once the Power Switch has been turned on.

Programming Instructions

1. At extension 11:

All system programming changes (example: system clear, station program clear, toll restriction, hookswitch flash timing...) are done through extension 11.

- **Extension 11 must always be a Panasonic model, KX-T61630.**

2. System Program Switch setting:

The System Program Switch located on the KX-T61610 must be set to the PROGRAM position while making program changes. After all programming changes are completed, return the program switch to the SET position.

3. Overlay:

This overlay is used for programming the system and the program function names are inscribed on this card. Refer to page 3-2.

4. Before system programming, operate the system clear and station program clear to set to the default data of the programming.

A. System Clear:

- 1 Dial (99).
 - "SYSTEM CLEAR" will be displayed.
- 2 Press the NEXT button.
 - "ALL CLEAR?" will be displayed.
- 3 Press the MEMORY button to clear system.
- 4 To exit from system clear, press the END button.

The following features are preset as the default data.

Date and Time Setting
System Speed Dialing
CO Connection Assignment
Dial Mode (Tone/Pulse) Selection
Switching Mode (Day/Night Service)
Starting Time (Day/Night Service)
Flexible Day Outward Dialing Assignment
Flexible Night Outward Dialing Assignment
Flexible Day Ringing Assignment
Flexible Night Ringing Assignment
Toll Restriction—Class Assignment
Toll Restriction—Area Code Selection
Host PBX Access Codes Assignment
Automatic Answering (Automatic/Manual) Selection

Preferred CO Line Assignment
Programmable Call Waiting
Duration Time Count Start Mode
SMDR Communication Parameters
System Data Dump
SMDR Incoming/Outgoing Selection
Hookswitch Flash Timing
Disconnect Time
Calling Party Control (CPC) Signal
Intercom Alerting Mode
Programmable Doorphone
Dial Call Pickup Group Assignment
Account Code Input Mode
Delayed Ringing Assignment
Delayed Ringing Count Selection
DSS Console Assignment
Hold Time Reminder
Hold Recall Time Set
Programmable External Paging Access Tone
DTMF Receiver
Programmable Secret Speed Dial
DSS Button Mode
Transfer Recall Time
M3/FWD Selection
Programmable Executive Override
Automatic Designated CO Line Access
Programmable Call Waiting Tone


B. Station Program Clear:

- 1 Dial (98).
 - "EXT CLEAR" will be displayed.
- 2 Press the NEXT button.
 - "ALL CLEAR?" will be displayed.
- 3 Press the MEMORY button to clear the system.
- 4 To exit from station clear, press the END button.

The following features are preset as the default data.

One Touch Dialing
Background Music
Call Forwarding
Data Line Security
Dial Call Pickup Deny
Do not Disturb
Auto CO Hunting
Pickup dial
Flexible CO Button
Flexible DSS Button

When the System Program Switch on the KX-T61610 is set to the PROGRAM position, the operation of the KX-T61630 will change as follows.

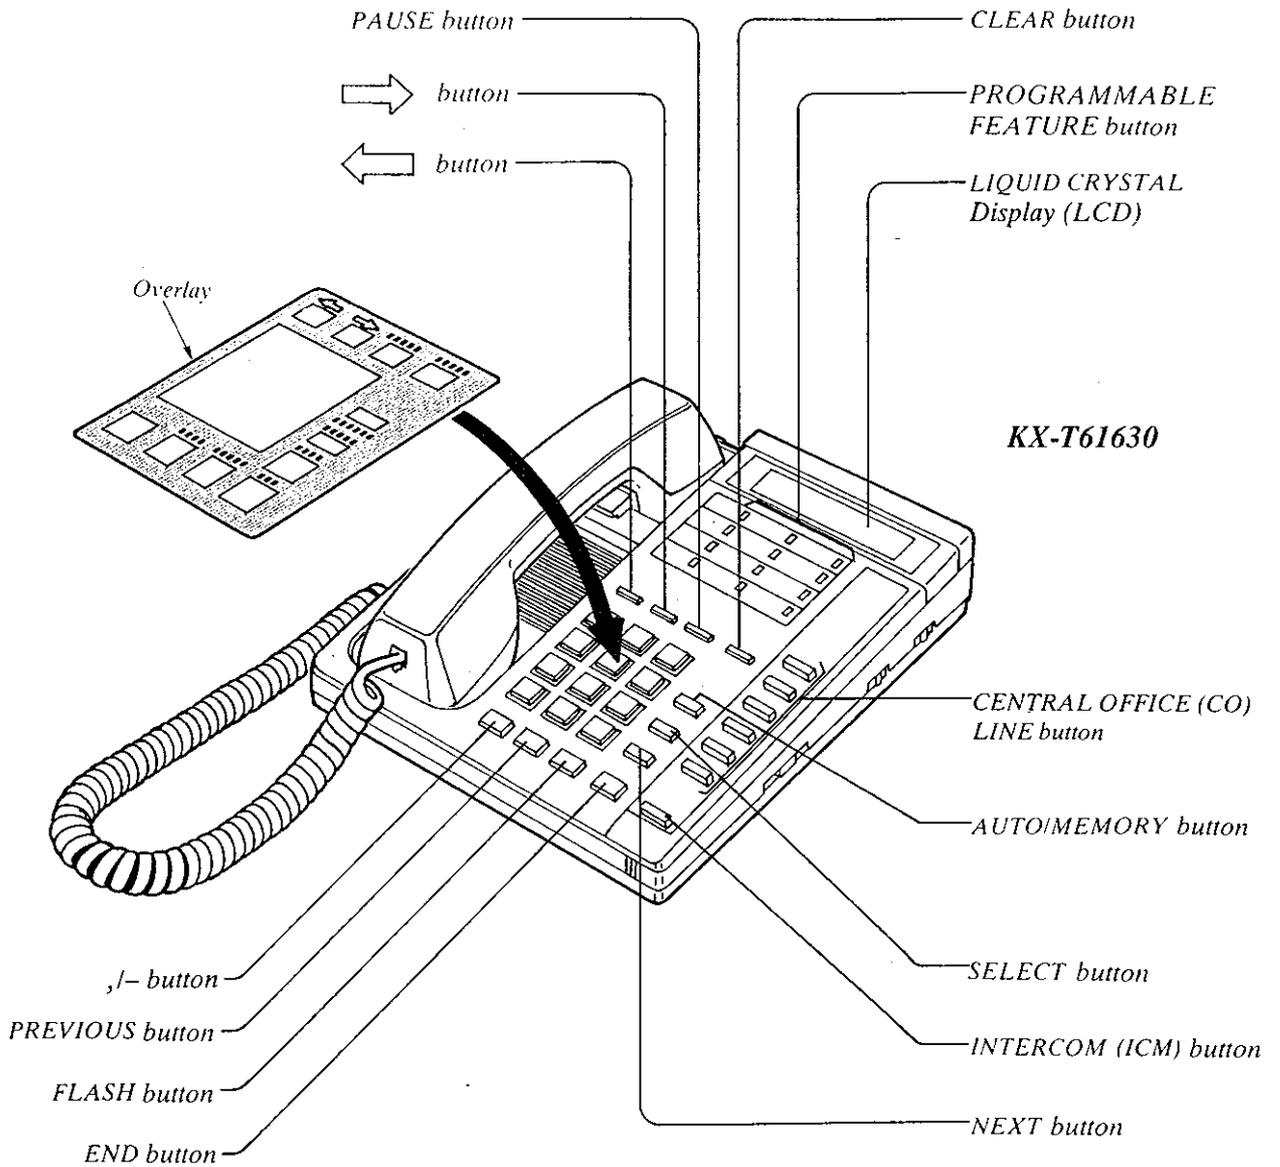

Example of Programming


1. Turn the Power Switch to ON

2. Set the System Program Switch to PROGRAM

The LCD on the KX-T61630 will show "ENTER PGM CODE".

• Be sure the handset of extension 11 is in the cradle and the speakerphone button off.

3. To program automatic line access number 9 and the phone number 987-654-3210 speed access code 00. (Refer to page 3-5.)

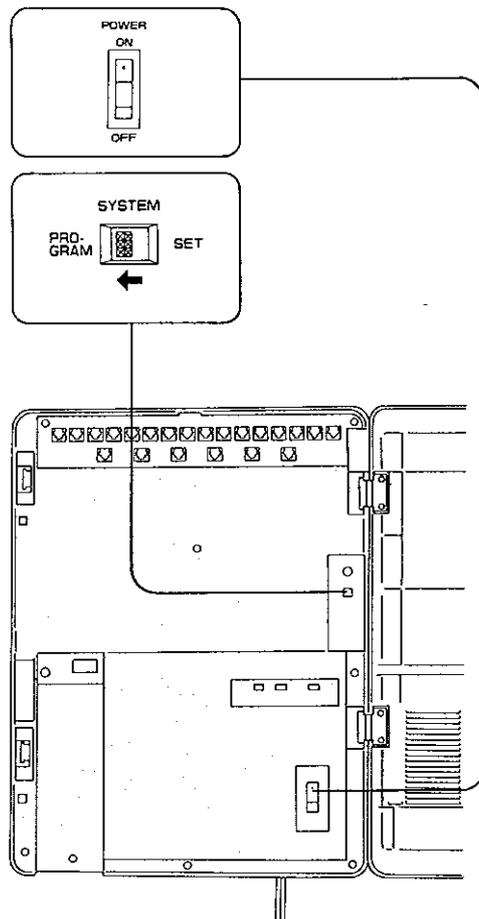

KX-T61630 at extension 11 (Extension 11 must be a KX-T61630.)		
1.	Dial (01) or press the AUTO button.	Display SPEED DIALING
2.	Press the NEXT button.	ENTER SPEED CODE
3.	Dial (00) or press the NEXT button.	<ul style="list-style-type: none"> • If nothing is stored in access code "00", 00: NOT STORED • If already stored the automatic line access number 9 and the phone number 123-456-7890, 00: -123-456-7890
4.	<ol style="list-style-type: none"> ① Dial "9". ② Press "-" button. ③ Dial "987". ④ Press "-" button. ⑤ Dial "654". ⑥ Press "-" button. ⑦ Dial "3210". 	00: -987-654-3210
5.	Press the MEMORY button.	00: -987-654-3210
6.	<ul style="list-style-type: none"> • To program the next access code, press the NEXT button. • To program a desired access code, press the SELECT button and then dial the number. 	
7.	Repeat step 4 to 6.	
8.	To return to the initial program mode, press the END button.	ENTER PGM CODE

While programming if a mistake is made,

1. Press the "END" button.

2. Start programming procedure from the beginning.


• You will hear a beep after pressing the MEMORY button.

• The MEMORY indicator light will go on when the MEMORY button is pressed, and then the Indicator light will go out when the NEXT or PREV button is pressed.

4. Return the System Program Switch to SET

■ To make program change, start from the beginning.

Date and Time Setting

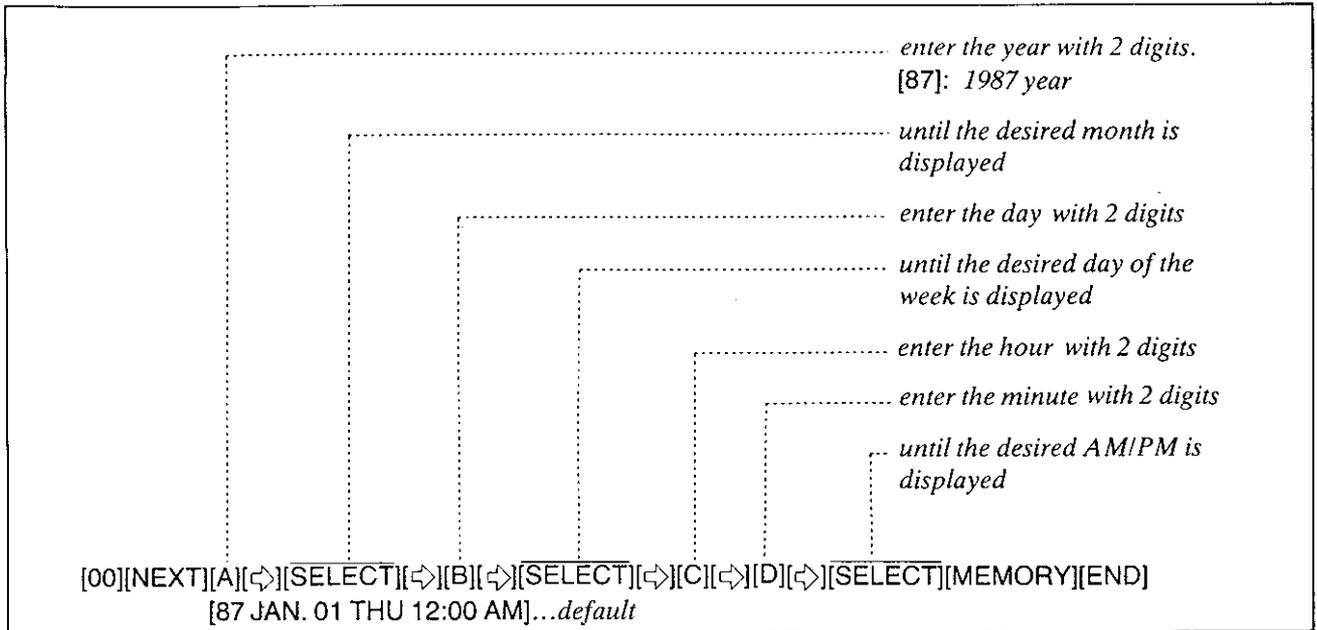

Description

Entry of the current day, date and time.


Programming

1. Dial (00).
"DAY/TIME SET" will be displayed.
2. Press the NEXT button.
"87 JAN. 01 THU" will be displayed and "87" will blink.
3. Enter the year (last 2 digits) using the dialing button.
4. Press the "↔" button and then repeat pressing the SELECT button until the desired month is displayed.
5. Press the "↔" button and then enter the day with 2 digits.
6. Press the "↔" button and then repeat pressing the SELECT button until the desired day of the week is displayed.
7. Press the "↔" button.
"12: 00 AM" will be displayed.
8. Enter the hour with 2 digits.
9. Press the "↔" button and then enter the minute with 2 digits.
10. Press the "↔" button and then repeat pressing the SELECT button until the desired AM/PM is displayed.
11. Press the MEMORY button.
12. To return to the initial program mode, press the END button.

Condition

- If "↔" button is pressed, the display will return to the previous sequence in the programming step.
- Instantly after pressing the MEMORY button, the new time will start.
But the LCD of extension 11 will display the new time only after the System Program Switch is set to SET.

System Speed Dialing Entry

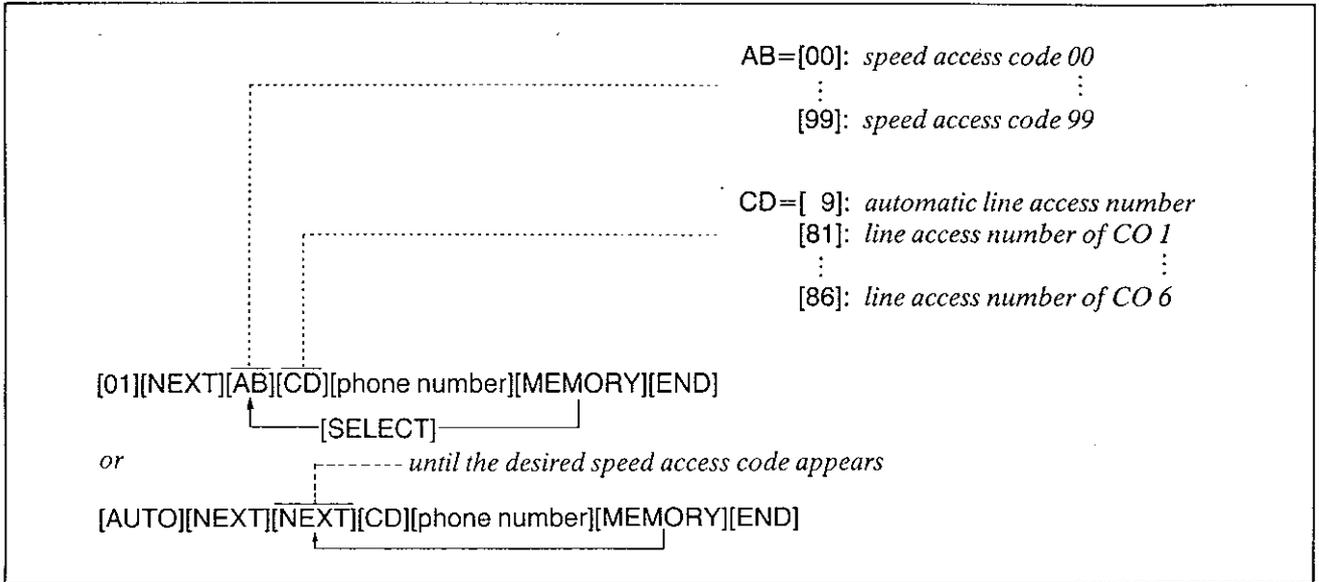

Description

100 phone numbers each with up to 32 digits may be entered into programming for speed dialing use from each extension. Pushing the “*”, “#” “PAUSE”, “_” or “FLASH” button counts as 1 digit.

4. Enter the line access number.

- 9: for automatic selection
- 81: for CO 1
- 82: for CO 2
- 83: for CO 3
- 84: for CO 4
- 85: for CO 5
- 86: for CO 6

Programming

1. Dial (01) or press the AUTO button to go into the speed dialing entry mode. “SPEED DIALING” will be displayed.
2. Press the NEXT button. “ENTER SPEED CODE” will be displayed.
3. Dial (00 through 99) or press the NEXT button, for speed access code entry.
Example:
 When dialing (00) or pressing the NEXT button.
 - The LCD will show “00:NOT STORED” when nothing is stored in speed access code “00”. When the automatic line access number 9 and the phone number 123-456-7890 has been stored, “00: -123-456-7890” will be displayed.

5. Enter the phone number.

- You may enter punctuations during a phone number.
- To erase a wrong entry, press the CLEAR button.

6. Press the MEMORY button.

- The memory indicator will be lit.

7. To program desired speed access code, press the SELECT button and then dial the speed access code.

- To advance to the next speed access code, press the NEXT button.
- To return to the previous speed access code, press the PREV button.

8. Repeat steps 4 to 7.

9. To exit from speed dialing entry, press the END button.

- The LCD will show the initial program mode, "ENTER PGM CODE".

To change

Repeat steps 1 to 9.

To erase after programming

1. Dial (01) or press the AUTO button.
"SPEED DIALING" will be displayed.
2. Press the NEXT button.
"ENTER SPEED CODE" will be displayed.
3. Dial (00 through 99) or press the NEXT button, for speed access code entry.
The speed access code and the phone number will be displayed.
4. Press the CLEAR button.
5. Press the MEMORY button.
6. To program desired speed access code, press the SELECT button and then dial the speed access code.
To advance to the next speed access code, press the NEXT button.
To return to the previous speed access code, press the PREV button.
7. Repeat steps 4 to 6.
8. To exit from speed dialing entry, press the END button.

Conditions

- Use the "↵", or "↶" button for scrolling the display.
- The line access number (9 or 81 through 86) should be stored.
- When dialing, the pause is automatically entered after line access number (9 or 81 through 86).
- Continuous use of speed dialing is possible.

Example:

[AUTO] [01] [AUTO] [02]

In this case, speed access code "02" should not include the line access number.

There is a phone number directory on page 6-9.

DSS Console Assignment

Console 1 extension number

AB=[12]: on extension 12
⋮
[26]: on extension 26

*Telephone extension number
paired with console 1*

CD=[11]: on extension 11
⋮
[26]: on extension 26

Console 2 extension number

EF=[12]: on extension 12
⋮
[26]: on extension 26

*Telephone extension number
paired with console 2*

GH=[11]: on extension 11
⋮
[26]: on extension 26

[02][NEXT][AB][↔][CD][↔][EF][↔][GH][MEMORY][END]

Description

If a DSS console is used the extension number paired with the DSS console should be assigned.

Programming

1. Dial (02)
"DSS CONSOLE SET" will be displayed.
2. Press the NEXT button.
The LCD will show "C . . - T . . ,
C . . - T . . ." when nothing is stored.
When console 1 has been stored to extension 12, the pair telephone with the console 1 has been stored to extension 13, the console 2 has been stored to extension 14 and the pair telephone with console 2 has been stored to extension 15, "C12-T13, C14-T15" will be displayed.
3. Dial the extension number to which the console 1 is connected.
4. Press the " ⇨ " button.
5. Dial the extension number which is paired with the console 1.
 - If you don't connect the console 2, proceed to step 10.
6. Press the " ⇨ " button.
7. Dial the extension number to which the console 2 is connected.
8. Press the " ⇨ " button.
9. Dial the extension number which is paired with the console 2.
10. Press the MEMORY button.
11. To return to the initial program mode, press the END button.

Conditions

- DSS console can be connected up to two.
- DSS console can not be connected in pair with a standard telephone.
- DSS console can not be connected at extension 11.

Example:

If Mr. Jay's secretary has KX-T61630 at extension 12 and is to use the DSS console (KX-T61640), the console should be connected to extension 13. (Paired extension is ext. 12.)
Mr. Brown's secretary has KX-T61620 at extension 14 and is to use the DSS console (KX-T61640), the console should be connected to extension 15.


(Paired extension is ext. 14.)

```
[02][NEXT][13][⇨][12][⇨][15][⇨][14]
[MEMORY][END]
```

Programming Table

See page 6-11.

CO Connection Assignment

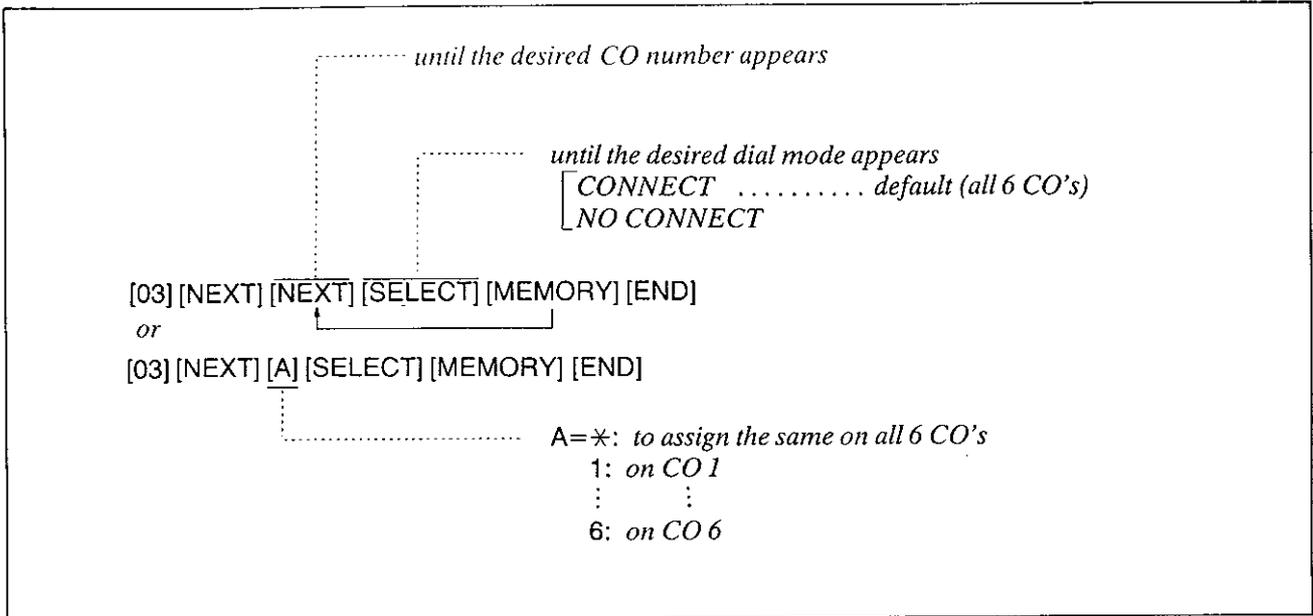

Description

You can program which outside line is connected and which one is not connected. When an extension automatically selects an idle outside line, the extension can be connected to it quickly.

Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to see the entry status in the previous CO connection assignment.

Programming

1. Dial (03).
"CO CONNECTION" will be displayed.
2. Press the NEXT button.
"ENTER CO NO" will be displayed.
3. Press the NEXT button.
"CO 1: CONNECT" will be displayed and "CONNECT" will blink.
4. Press the SELECT button, to alternate between CONNECT and NO CONNECT to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the dialing mode on the other CO lines.
7. To return to the initial program mode, press the END button.

Example:


CO 1 and 2 CONNECT
CO 3 NO CONNECT

1. [03] [NEXT] [(NEXT) or (1)] [MEMORY]
2. [NEXT] [MEMORY]
3. [NEXT] [SELECT] [MEMORY] [END]

Programming Table

See page 6-11.

Dial Mode (Tone/Pulse) Selection

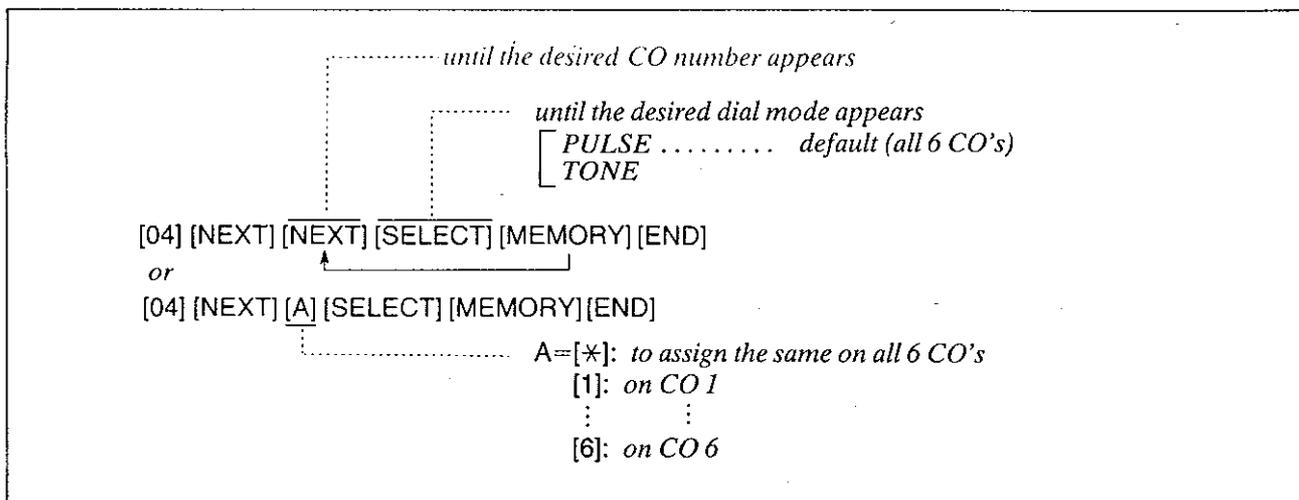

Description

Allows the user to select the dialing mode (tone or pulse) of each CO (Central Office) line.

•TONE Dial Mode

The dial signal from the extension (with tone or pulse dial mode) will be converted to TONE. TONE will then be transmitted to the Central Office.

•PULSE Dial Mode

The dial signal from the extension (with tone or pulse dial mode) will be converted to PULSE. PULSE will then be transmitted to the Central Office.

Programming

1. Dial (04).
"CO DIAL MODE" will be displayed.
2. Press the NEXT button.
"ENTER CO NO" will be displayed.
3. Press the NEXT button.
"CO 1: PULSE" will be displayed and "PULSE" will blink.
4. Press the SELECT button to alternate between TONE and PULSE.
5. Press the MEMORY button.
The LCD blinking will stop.
6. Repeat steps 3 to 5, to program the dialing mode on the other central office lines.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to see the entry status in the previous CO dial mode.
- If the KX-T61610 is connected to the Central Office directly or installed behind a host PBX, which receive both tone and pulse dial mode, the KX-T61610 must be used only tone dial mode.
- If your extension is not a KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 but a standard telephone, and the dial tone frequency of CO Lines is 600 Hz, the KX-T61610 must be used only for the pulse dial mode of CO Lines.


Example:

- PULSE on the CO 1=
[04] [NEXT] [1] [MEMORY] [END]
or
[04] [NEXT] [NEXT] [MEMORY] [END]
- TONE on the CO 2=
[04] [NEXT] [2] [SELECT] [MEMORY] [END]
or
[04] [NEXT] [NEXT] [NEXT] [SELECT] [MEMORY] [END]

Programming Table

See page 6-11.

Switching Mode (Day/Night Service)

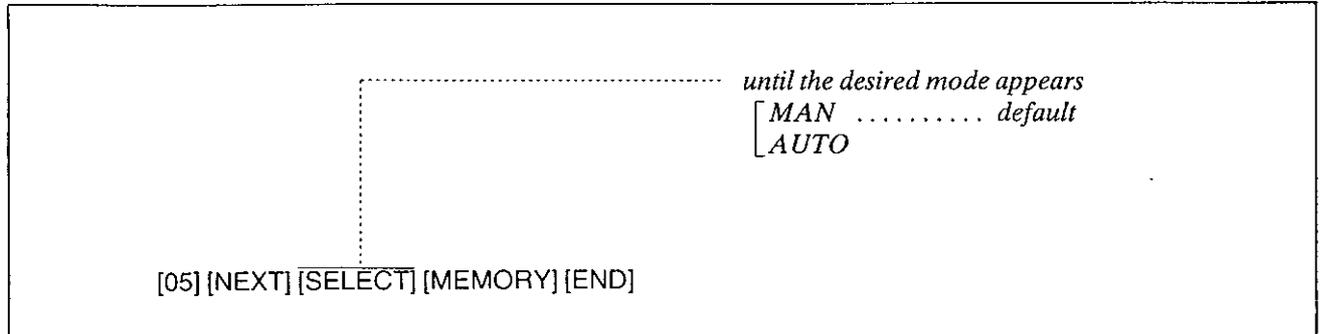

Description

Allows Day/Night service to be selected manually or automatically.

In case of manual switching, refer to "Flexible Night Service" page 4-40.

In case of automatic switching, set the "Starting Time (Day/Night Service)" page 3-13.

The following features should be set.

- "Flexible Day Outward Dialing Assignment" page 3-15.
- "Flexible Night Outward Dialing Assignment" page 3-16.
- "Flexible Day Ringing Assignment" page 3-17.
- "Flexible Night Ringing Assignment" page 3-18.

Programming

1. Dial (05).
"DAY/NIGHT MODE" will be displayed.
2. Press the NEXT button.
"MODE CHANGE:MAN" will be displayed and "MAN" will blink.
3. Press the SELECT button to alternate between "MAN" and "AUTO" to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Conditions


When the Switching mode (Day/Night Service) is set to "AUTO", the present Day/Night Service mode will not change after you finish programming. To change the present mode, manual operation is required.

After you selected the Starting time (Day/Night Service) page 3-13, select the present Day/Night mode by "Flexible Night Service" page 4-40.

Programming Table

See page 6-11.

Starting Time (Day/Night Service)

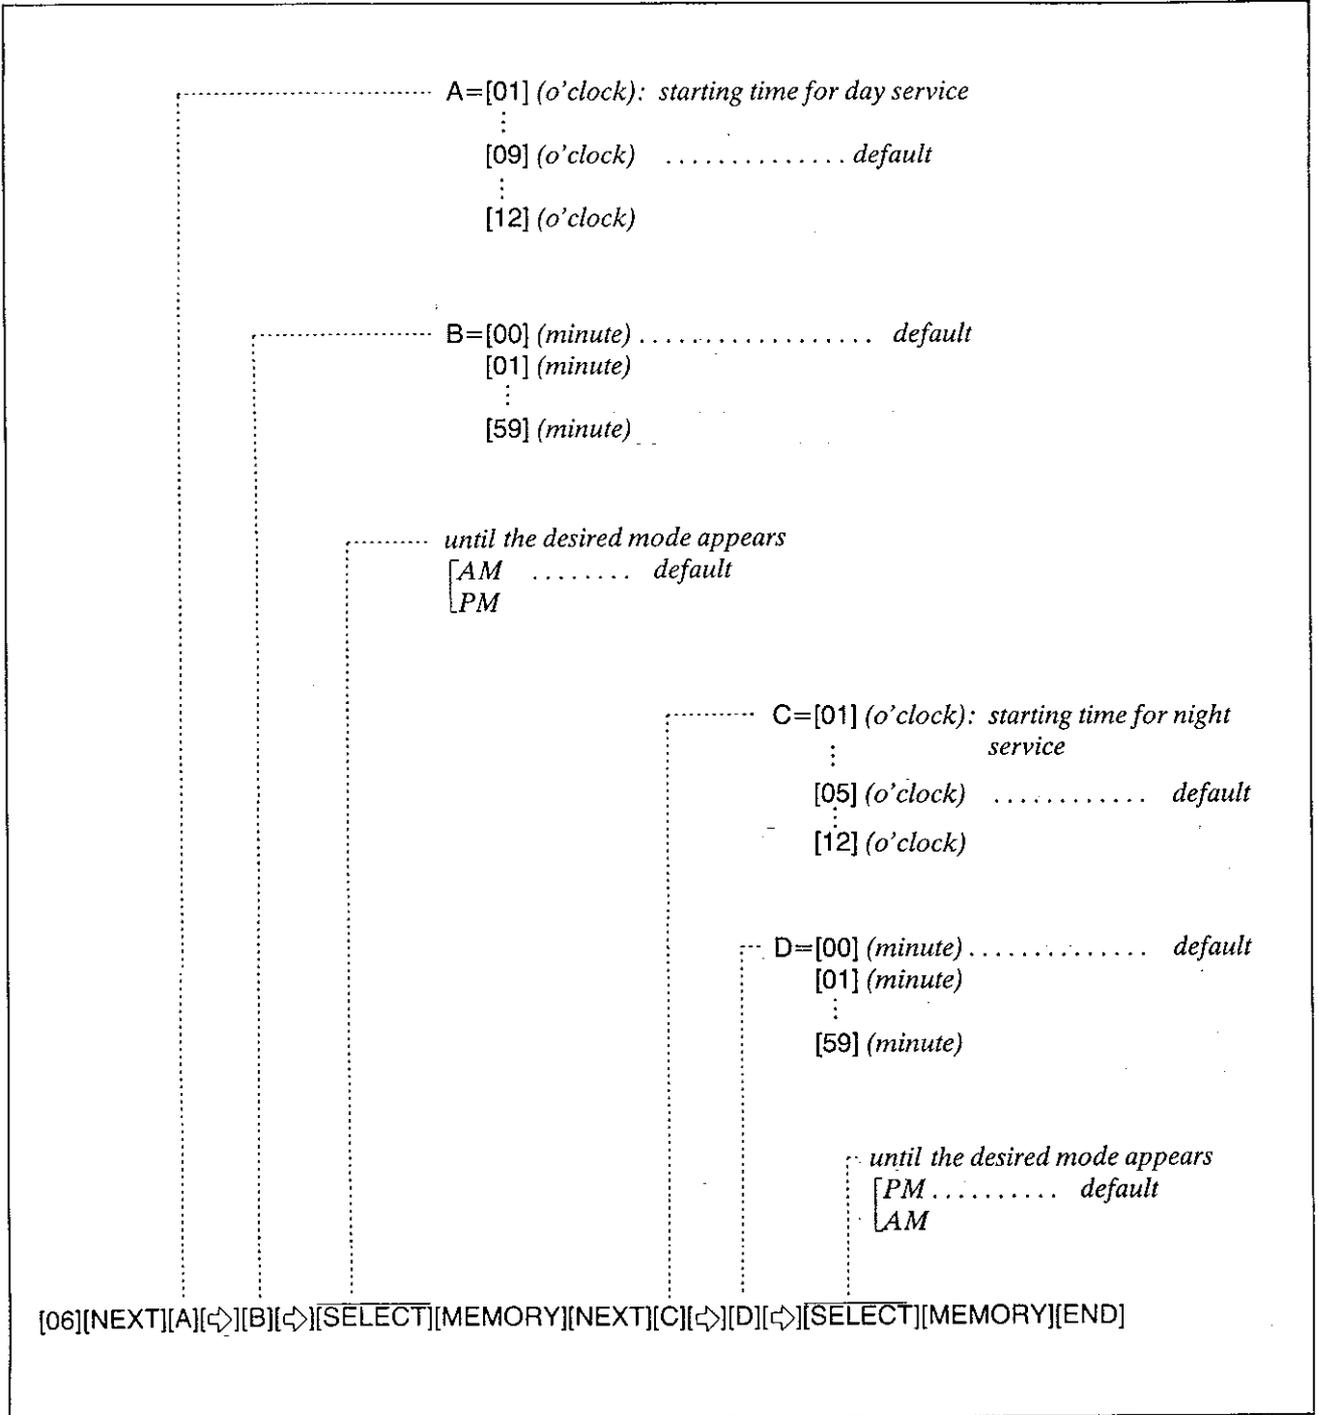

Description

If you select the automatic switching mode for day/night service, enter the starting time. Refer to "Switching Mode (Day/Night Service)" page 3-12.

Programming

1. Dial (06).
"DAY/NIGHT TIME" will be displayed.
2. Press the NEXT button.
"DAY: 09:00 AM" will be displayed as a default value and "09" will blink.
3. Enter the starting time for day service using 2 digits.
4. Press the "⇨" button.
"00" will blink.
5. Enter the minute using 2 digits.
6. Press the "⇨" button.
"AM" will blink.
7. Press the SELECT button to alternate between "AM" and "PM" to select the correct setting.
8. Press the MEMORY button.
9. Press the NEXT button.
"NIGHT: 05:00 PM" will be displayed as a default value and "05" will blink.
10. Enter the starting time for night service using 2 digits.
11. Press the "⇨" button.
"00" will blink.
12. Enter the minute using 2 digits.
13. Press the "⇨" button.
"PM" will blink.
14. Press the SELECT button to alternate between "AM" and "PM" to select the correct setting.
15. Press the MEMORY button.
16. To return to the initial program mode, press the END button.

Conditions

- If the NEXT button is pressed at step 3 through 7, the display will advance to the "Night Time input" mode (step 9). The operations of step 3 through 7 are not stored.
- If the PREV button is pressed at step 10 through 14, the display will return to the "day time input" mode (step 2). The operations of step 10 through 14 are not stored.

Example:


8:30 AM... starting time for day plan
6:30 PM... starting time for night plan

```
[06][NEXT][08][⇨][30][⇨][MEMORY][NEXT][06]
[⇨][30][⇨][MEMORY][END]
```

Programming Table

See page 6-11.

Flexible Day Outward Dialing Assignment

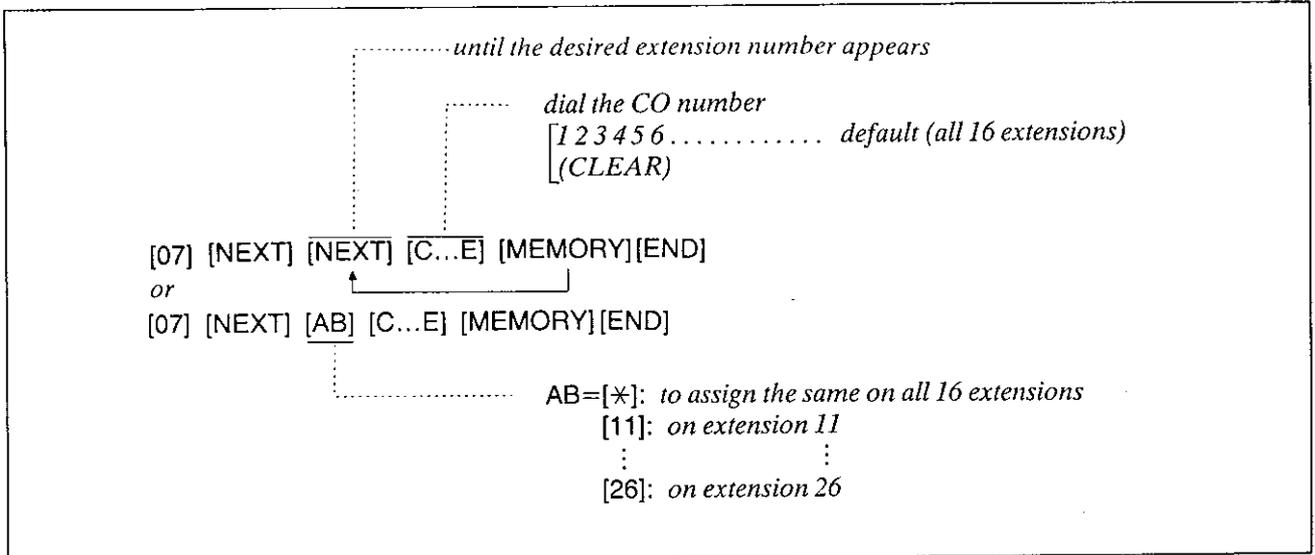

Description

Through programming, you can select which extensions may be used for outward dialing by using the day mode of operation.

Programming

1. Dial (07).
"DAY: OUT CO" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: CO 1 2 3 4 5 6" will be displayed and "1 2 3 4 5 6" will blink.
4. Dial the CO number to be entered.
The desired combination of CO lines will be displayed.
 { To prohibit dialing, press the CLEAR button instead of the CO number.
 "11: CO....." will be displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment on the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Example: COMPANY XYZ


Company XYZ wants extensions 11 and 15 to have access to CO 1, 2 and 3 on outgoing calls during the day. Extensions 12, 13, 14, 16, 17 and 18 are to be programmed for access to only CO 1 and 2.

1. [07] [NEXT] [(NEXT) or (11)] [1] [2] [3] [MEMORY]
2. [NEXT] [1] [2] [MEMORY]
3. [NEXT] [1] [2] [MEMORY]
4. [NEXT] [1] [2] [MEMORY]
5. [NEXT] [1] [2] [3] [MEMORY]
6. [NEXT] [1] [2] [MEMORY]
7. [NEXT] [1] [2] [MEMORY]
8. [NEXT] [1] [2] [MEMORY] [END]

Programming Table

See page 6-12.

Flexible Night Outward Dialing Assignment

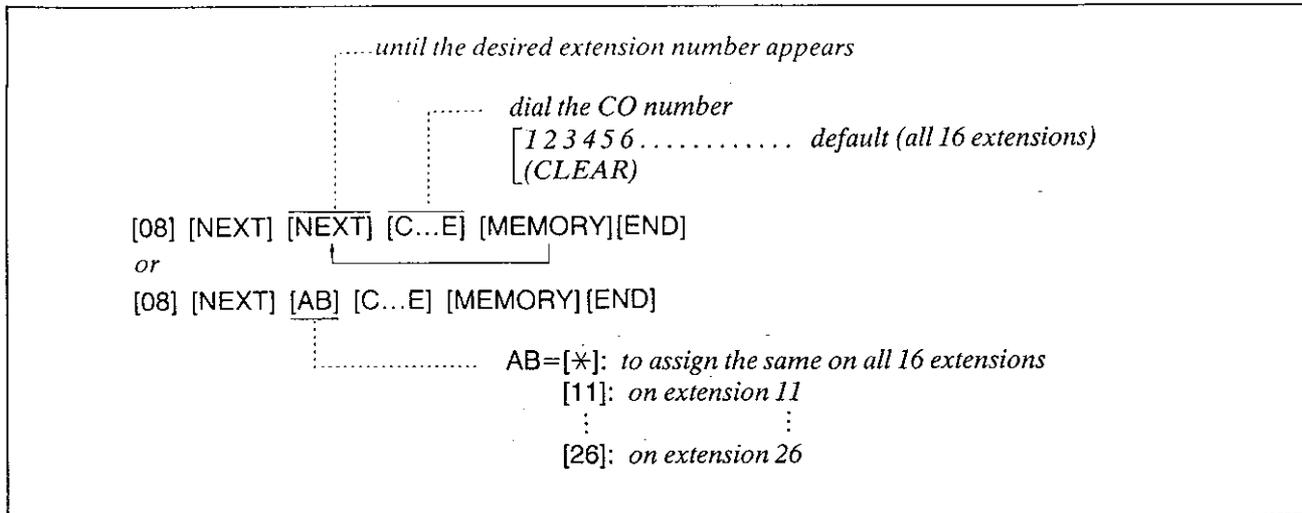

Description

Through programming, you can select of which extensions may be used for outward dialing by using the night mode of operation.

Programming

1. Dial (08).
"NIGHT: OUT CO" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO." will be displayed.
3. Press the NEXT button.
"11: CO 1 2 3 4 5 6" will be displayed and "1 2 3 4 5 6" will blink.
4. Dial the CO numbers to be entered.
The desired combination of CO lines will be displayed.
[To prohibit dialing, press the CLEAR button instead of the CO number.
"11: CO,..." will be displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment on the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Example: COMPANY XYZ


Company XYZ wants extensions 11, 13 and 16 to have access to CO 1, 2 and 3 on outgoing calls during the night. Extensions 12, 14, 15, 17 and 18 are to be programmed for access to only CO 1 and 2.

1. [08] [NEXT] [(NEXT) or (11)] [1] [2] [3] [MEMORY]
2. [NEXT] [1] [2] [MEMORY]
3. [NEXT] [1] [2] [3] [MEMORY]
4. [NEXT] [1] [2] [MEMORY]
5. [NEXT] [1] [2] [MEMORY]
6. [NEXT] [1] [2] [3] [MEMORY]
7. [NEXT] [1] [2] [MEMORY]
8. [NEXT] [1] [2] [MEMORY] [END]

Programming Table

See page 6-12.

Flexible Day Ringing Assignment

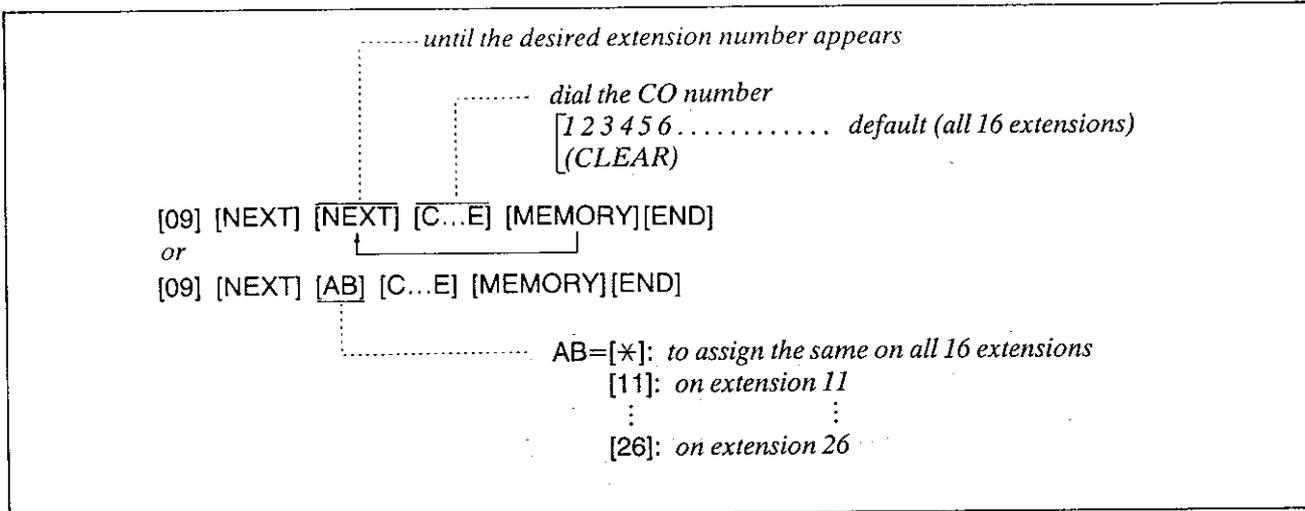

Description

Through programming, you can select which extensions will ring on incoming calls from the Central Office during the day time.

Programming

1. Dial (09).
"DAY: IN CO" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: CO 1 2 3 4 5 6" will be displayed and "1 2 3 4 5 6" will blink.
4. Dial the CO numbers to be entered.
The desired combination of CO lines will be displayed.
[To prohibit ringing, press the CLEAR button instead of the CO number.
"11: CO....." will be displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment on the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Example:


Incoming calls from Central Office during the day are programmed to ring at extension 11 only.

1. [09] [NEXT] [*] [CLEAR] [MEMORY]
2. [NEXT][1] [2] [3] [4] [5] [6]
[MEMORY] [END]

Programming Table

See page 6-12.

Flexible Night Ringing Assignment

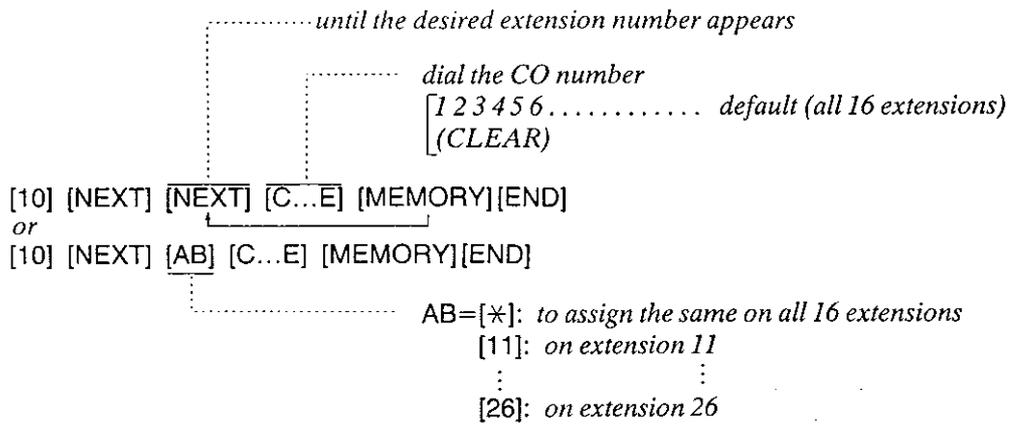

Description

Through programming, you can select which extensions will ring during the night time on incoming calls from the Central Office.

Programming

1. Dial (10).
 "NIGHT: IN CO" will be displayed.
2. Press the NEXT button.
 "ENTER EXT NO" will be displayed.
3. Press the NEXT button.
 "11: CO 1 2 3 4 5 6" will be displayed and "1 2 3 4 5 6" will blink.
4. Dial the CO numbers to be entered.
 The desired combination of CO lines will be displayed.
 (To prohibit ringing, press the CLEAR button instead of the CO number.
 "11: CO....." will be displayed.
5. Press the MEMORY button.
 The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Example: COMPANY XYZ


Company XYZ would like all incoming calls to ring at all extensions during the nighttime.

[10] [NEXT] [*] [1] [2] [3] [4] [5] [6]
 [MEMORY] [END]

Programming Table

See page 6-12.

Toll Restriction—Class Assignment

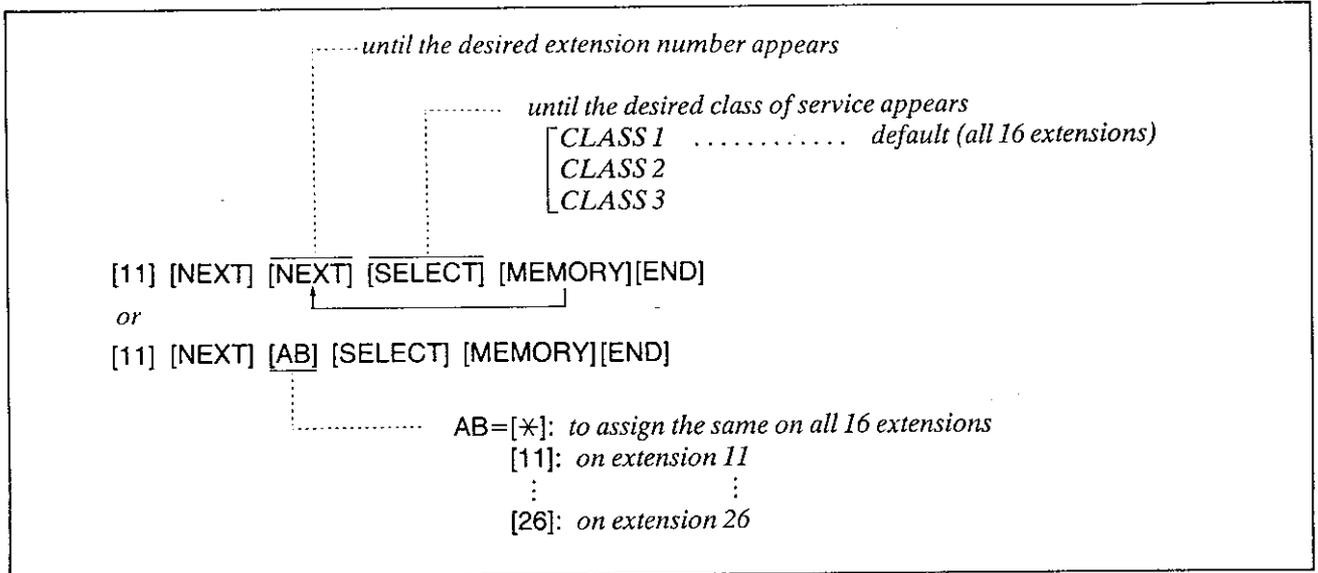

Description

Toll restriction can help eliminate telephone abuse and contribute to controlling telephone costs. There are three service of classes available for each extension.

	Service Class Selections	
	Allowed	Denied
1	all calls	
2	any calls other than specific area-code programmed	10 area codes programmed (Memory location) (00~09)
3	any calls other than specific area-code programmed	20 area codes programmed (Memory location) (00~19)

*For Service Class 2 and 3, see "Toll Restriction—Area Code Selection" on page 3-20.

Programming

1. Dial (11).
"TOLL RESTRICTION" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: CLASS 1" will be displayed and "1" will blink.
4. Repeat pressing the SELECT button until the desired class is displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment on the other extensions.
7. To return to the initial program mode, press the END button.


Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the service class assignment.

Programming Table

See page 6-12.

Automatic Answering (Automatic/Manual) Selection

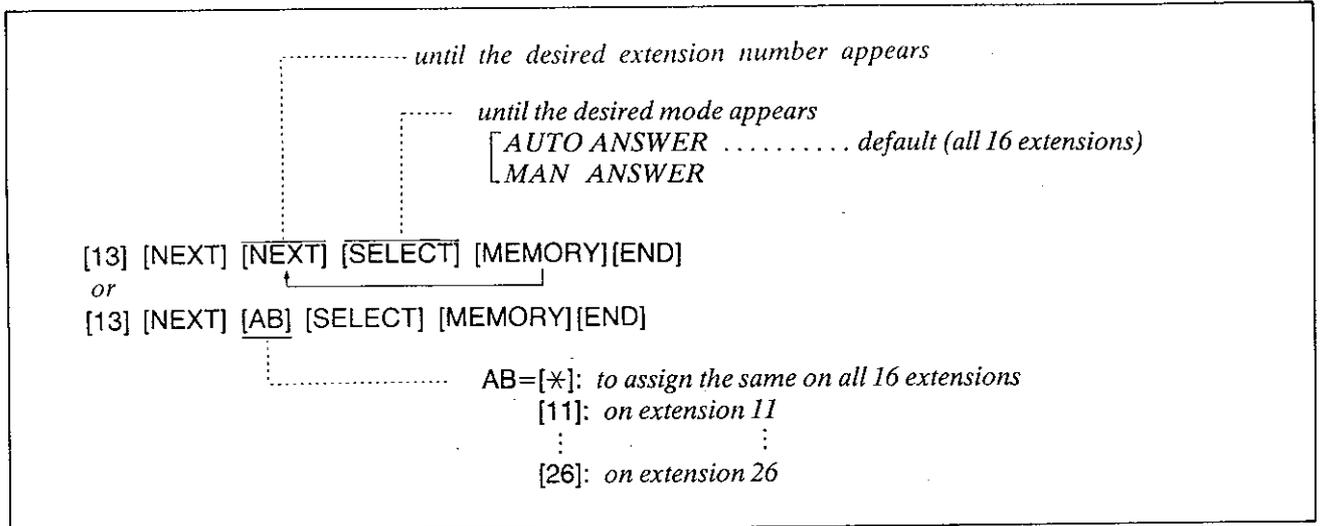

Description

By programming either automatic or manual answering can be set. The auto mode allows the user to answer incoming outside calls simply by lifting the handset, while if programmed to the manual mode, the user must lift the handset and press the flashing CO button.

Programming

1. Dial (13).
"CO ANSWER MODE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: AUTO ANSWER" will be displayed and "AUTO" will blink.
4. Press the SELECT button to alternate between AUTO ANSWER and MAN ANSWER to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the mode selection of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the automatic answering selection.


Examples:

- AUTO ANSWER mode on the extension 11
[13] [NEXT] [11] [MEMORY][END]
or
[13] [NEXT] [NEXT] [MEMORY][END]
- MANUAL ANSWER mode on the extension 12
[13] [NEXT] [12] [SELECT] [MEMORY][END]
or
[13] [NEXT] [NEXT] [NEXT] [SELECT] [MEMORY][END]

Programming Table

See page 6-13.

Host PBX Access Codes Assignment

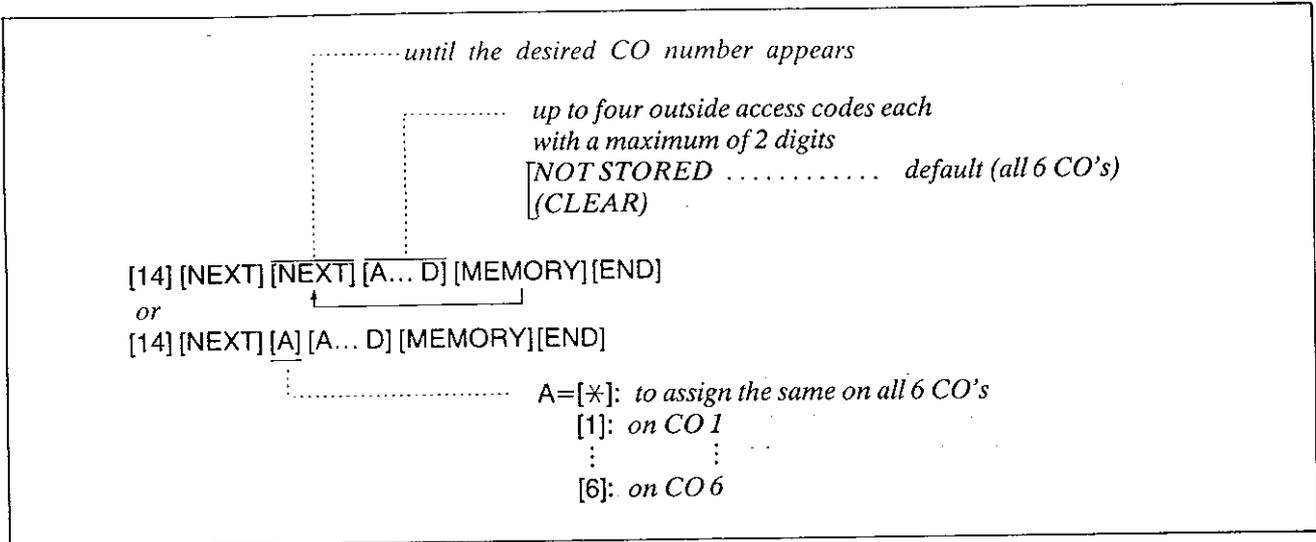

Description

If the system, (KX-T61610) is installed behind a host PBX, the host PBX may require a pause time to access Central Office Lines. This feature enables the host PBX to automatically pause via programming the outward dialing access codes of the host PBX.

6. Repeat steps 3 to 5 to program each of the CO's of the KX-T61610.

7. To return to the initial program mode, press the END button.

Programming

1. Dial (14).
"HOST PBX ACCESS" will be displayed.
2. Press the NEXT button.
"ENTER CO NO" will be displayed.
3. Press the NEXT button.
 - The LCD will show "CO1: NOT STORED" when nothing is stored in CO1. When the outside access codes 9, 31 has been stored, "CO1:9, 31" will be displayed.
4. Enter up to four outward access codes each with a maximum of 2 digits, punctuating each code with the button.
 - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.


Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous CO for displaying the host PBX access codes assignment.

Programming Table

See page 6-13.

Preferred CO Line Assignment

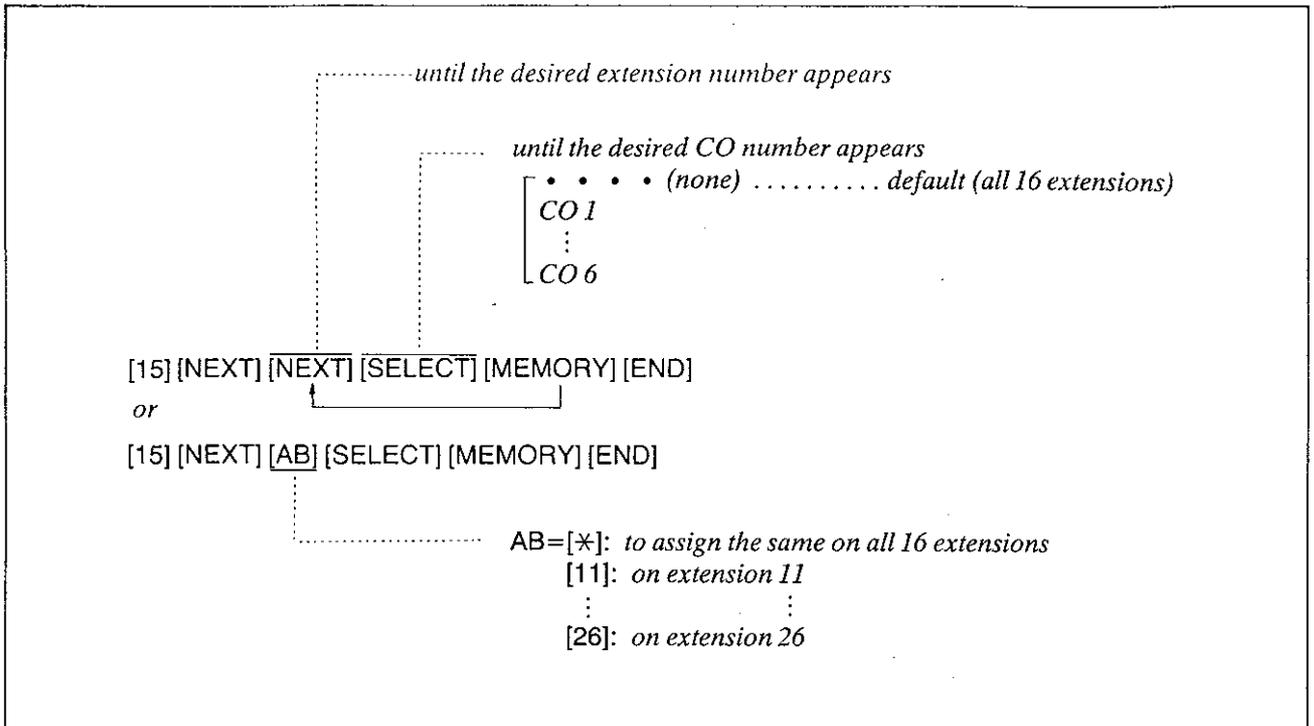

Description

When any incoming calls from the Central Office are received at the same time, you can receive the call on the preferred CO line first when you lift the handset.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the preferred CO line assignment.


Programming

1. Dial (15).
"PREFERRED CO" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: ••••" will be displayed and
"••••" will blink.
4. Repeat pressing the SELECT button until the desired CO number is displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.

Programming Table

See page 6-13.

Programmable Call Waiting

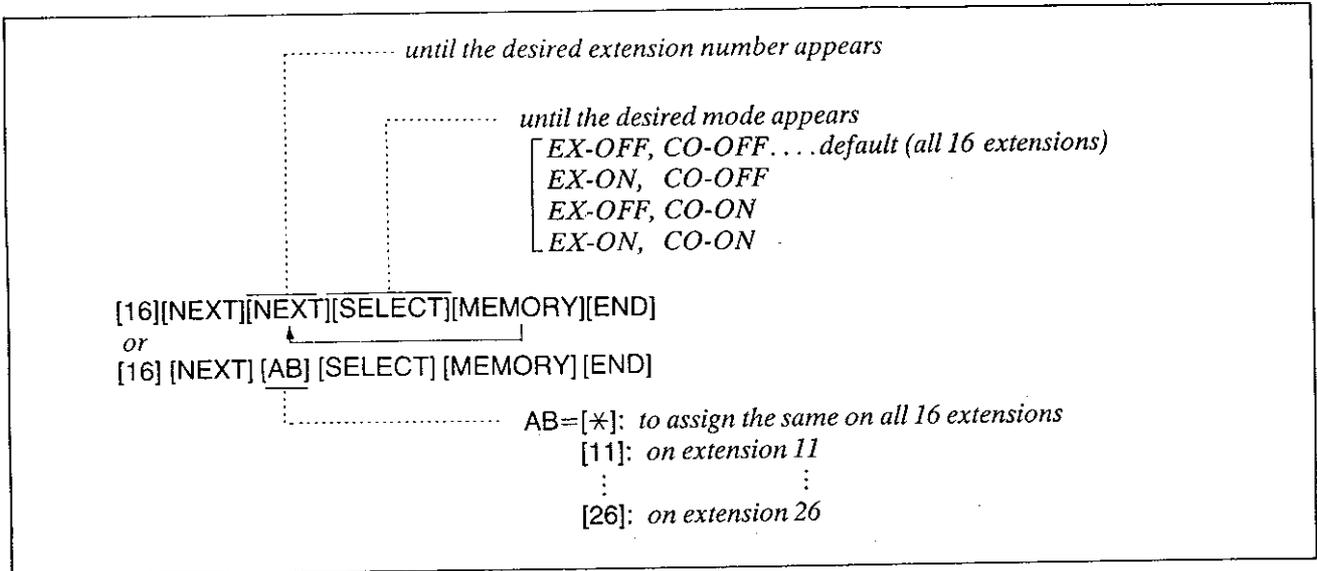

Description

During a conversation, a call waiting tone will be heard when a third party on an outside line or intercom calls you. Call waiting tone can be removed or added at customer's request. Set to "ON" for call waiting.

5. Press the **MEMORY** button.
The LCD will stop blinking.

6. Repeat steps 3 to 5, to program the assignment of the other extensions.

7. To return to the initial program mode, press the **END** button.

Programming

1. Dial (16).
"CALL WAITING" will be displayed.
2. Press the **NEXT** button.
"ENTER EXT NO" will be displayed.
3. Press the **NEXT** button.
"11: EX-OFF, CO-OFF" will be displayed and "EX-OFF, CO-OFF" will blink.
4. Repeat pressing the **SELECT** button until the desired mode is displayed.


Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the **NEXT** button at step 3.
- The **PREV** button allows you to go to the previous extension for displaying the call waiting selection.

Programming Table

See page 6-13.

Delayed Ringing Assignment

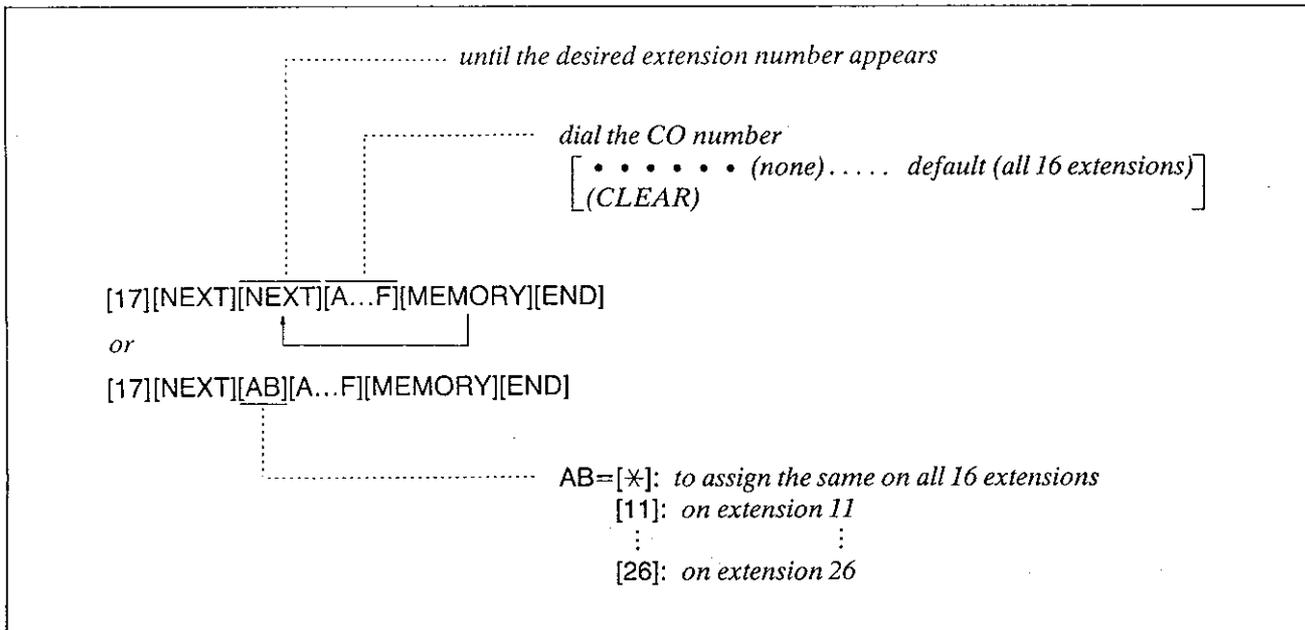

Description

The ringing start time can be delayed on a designated extension(s) when an incoming call is received from the CO.

The CO line(s) that you want to delay the ring start time can be selected through the programming. "Delayed Ringing Count Selection" page 3-26 should be set.

Programming

1. Dial (17).
"DELAY RING CO" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: CO" will be displayed and "....." will blink.
4. Dial the CO numbers to be entered.
The desired combination of CO will be displayed.
[To prohibit dialing, press the CLEAR button instead of CO number.
"11: CO" will be displayed.
5. Press the MEMORY button.
The LCD will stop blinking.

6. Repeat 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.


Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the delayed ringing assignment.

Programming Table

See page 6-14.

Delayed Ringing Count Selection

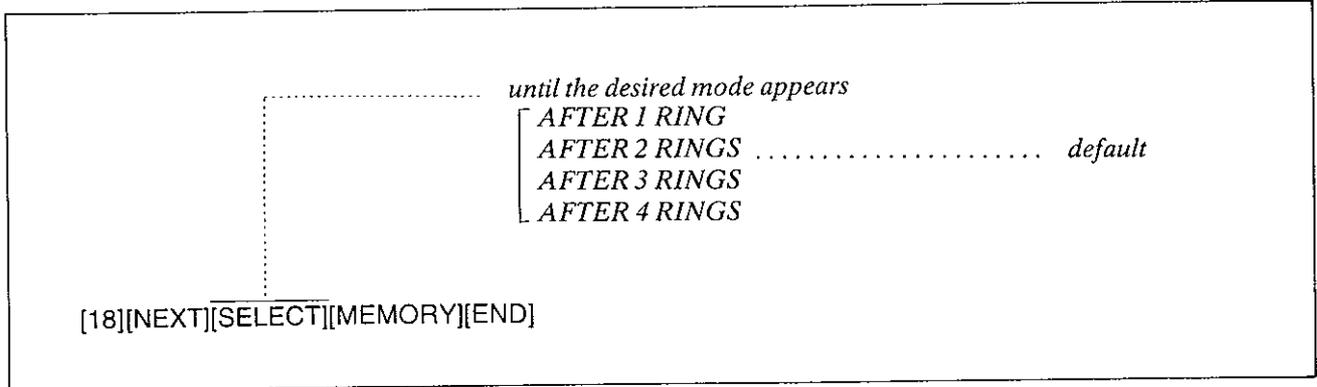

Description

After you select the CO lines that you want to delay the ring start time, select the desired delay ring count. Refer to "Delayed Ringing Assignment" page 3-25.


Programming

1. Dial (18).
"DELAY RING COUNT" will be displayed.
2. Press the NEXT button.
"AFTER 2 RINGS" will be displayed and will blink.
3. Repeat pressing the SELECT button until the desired mode is displayed.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Programming Table

See page 6-14.

Intercom Alerting Mode

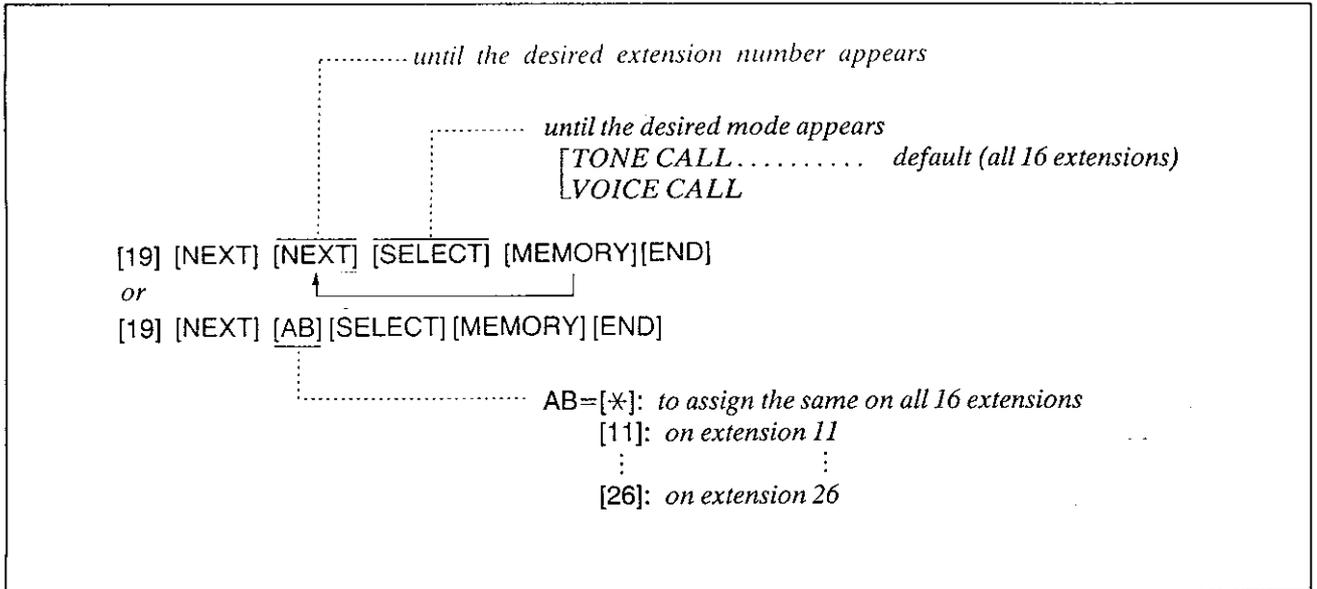

Description

The intercom alerting mode (tone alerting/voice alerting) at a receiving extension can be selected through programming.

TONE... Tone alerting (ringing) sound at the receiving extension.

VOICE... Voice alerting instead of Tone alerting is heard through the speaker on the receiving extension.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the alerting mode.

Example:

- VOICE CALL on the extension 13
[19] [NEXT] [13] [SELECT] [MEMORY]
[END]


Programming

1. Dial (19).
"INTCOM CALL MODE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: TONE CALL" will be displayed and "TONE" will blink.
4. Press the SELECT button to alternate between TONE CALL and VOICE CALL to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5 to program the call mode of the other extensions.
7. To return to the initial program mode, press the END button.

Programming Table

See page 6-14.

Programmable Doorphone

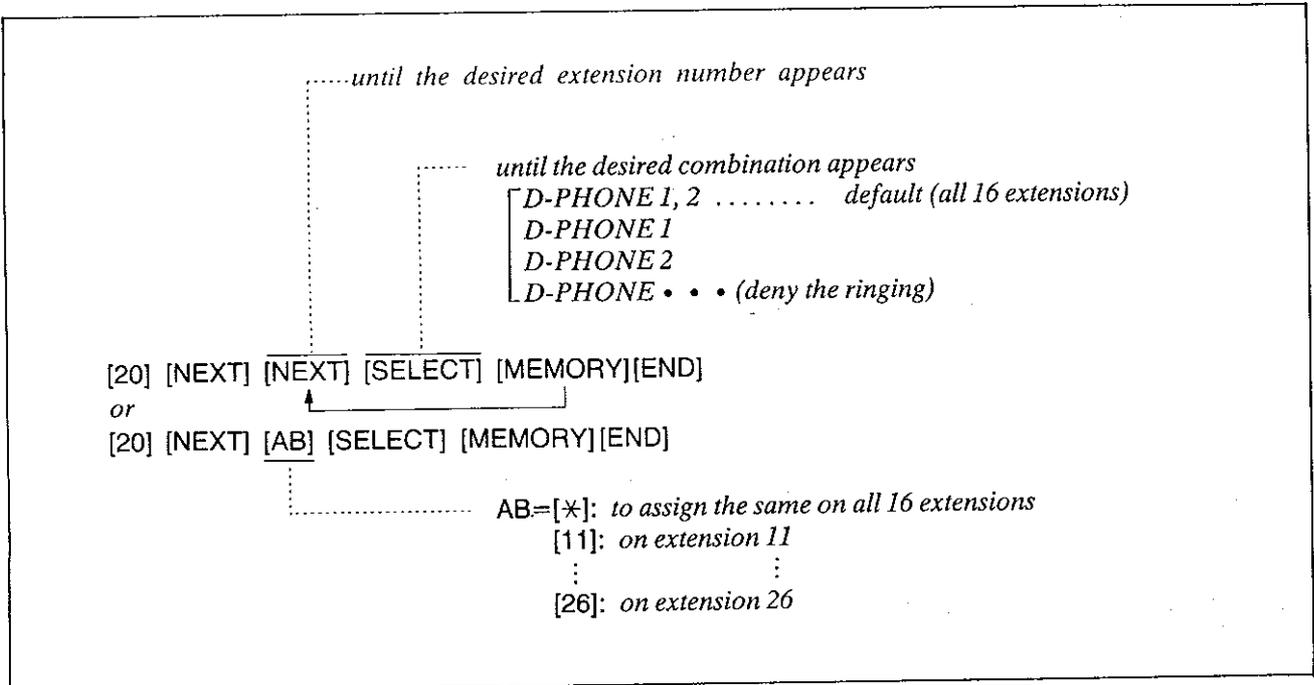

Description

Allows each extension to be programmed for receiving calls from up to 2 doorphones. (Doorphone is an option.)

Programming

1. Dial (20).
"DOOR PHONE RCV" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: D-PHONE 1, 2" will be displayed and "1, 2" will blink.
4. Repeat pressing the SELECT button until the desired combination of doorphones (which are to be connected to that extension) is displayed.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the combination of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the doorphone assignment.


Example:

- To allow extension 12 to receive from D-PHONE 2
 [20] [NEXT] [12] [SELECT] [SELECT]
 [MEMORY] [END]

Programming Table

See page 6-14.

Dial Call Pickup Group Assignment

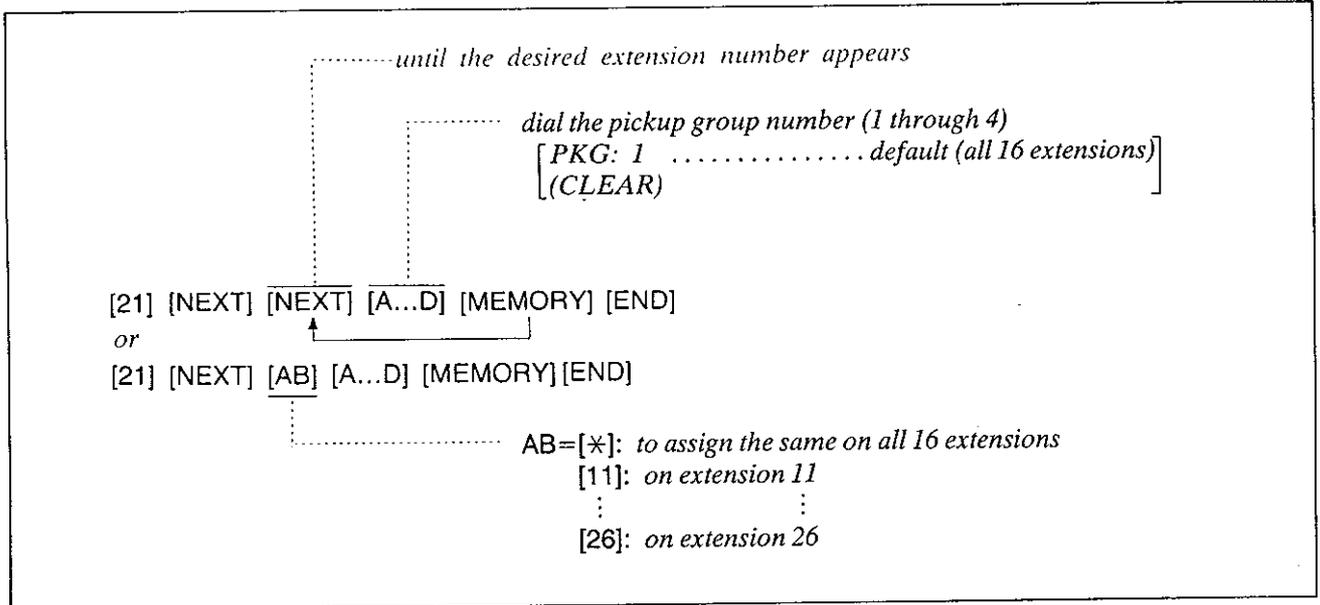

Description

Permits an extension user to answer other ringing telephones, provided that they are in the same pickup group.

6. Repeat steps 3 to 5, to program the assignment of the other extensions.

7. To return to the initial program mode, press the END button.

Programming

1. Dial (21).
"PICKUP GROUP" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: PKG: 1" will be displayed and "1" will blink. This means that extension 11 belongs to pickup group 1.
4. Dial the pickup group number (1 through 4) to be entered.
The desired combination of pickup group will be displayed.
[To be out of any groups, press the CLEAR button instead of group number.]
5. Press the MEMORY button.
The LCD will stop blinking.

Conditions

- Each extension may belong to more than one pickup group, up to four, or may not belong to a group.
- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the pickup group assignment.


Examples:

- extension 14...Pickup Group 2
[21][NEXT][14][2][MEMORY][END]
- extension 15...Pickup Group 3
[21][NEXT][15][3][MEMORY][END]

Programming Table

See page 6-14.

Account Code Input Mode

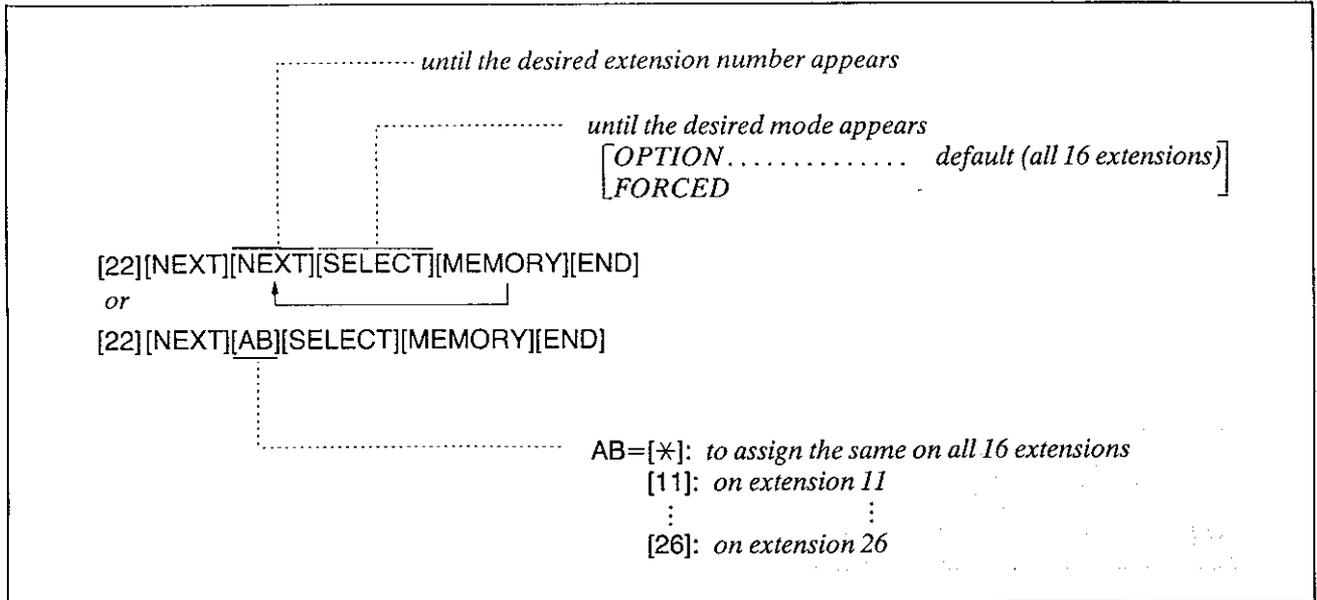

Description

This feature gives each message of the SMDR an account code of the called or calling party. This feature has two modes "FORCED" and "OPTION". In the "FORCED" mode, the account code must be entered every time extension user dials. In the "OPTION" mode, the account code may be entered when a record is needed. Refer to "Account Code" page 4-25.

5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the account code of the other extensions.
7. To return to the initial program mode, press the END button.

Programming

1. Dial (22).
"ACCOUNT CODE MOD" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: OPTION" will be displayed and the "OPTION" will blink.
4. Press the SELECT button to alternate between OPTION and FORCED to select the desired mode.


Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the account code input mode.

Programming Table

See page 6-14.

Duration Time Count Start Mode

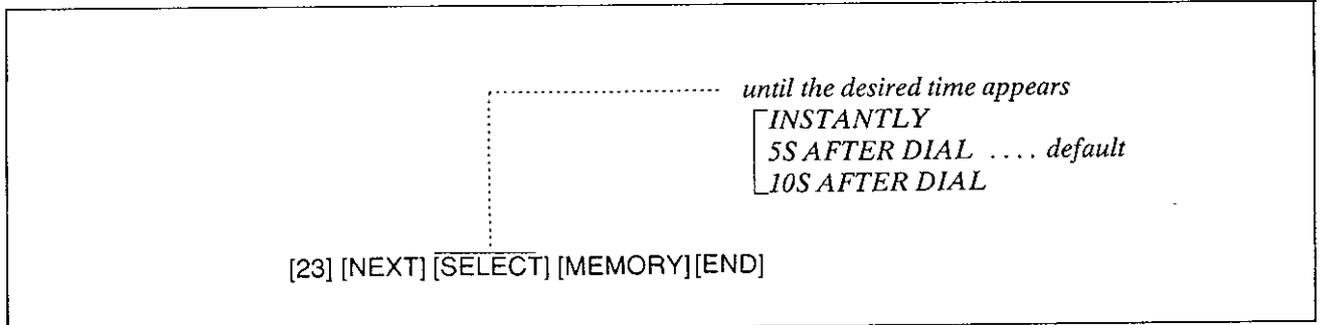

Description

The duration time of the conversation is displayed.

Program the start time of the timer.

- Instantly after the CO line is captured.
- 5 seconds after the dialing
- 10 seconds after the dialing

Example:

10 seconds after the dialing

= [23] [NEXT] [SELECT] [MEMORY] [END]

Programming Table

See page 6-15.

Programming

1. Dial (23).
 - "DURAT-TIME COUNT" will be displayed.
2. Press the NEXT button.
 - "5S AFTER DIAL" will be displayed and blink.
3. Repeat pressing the SELECT button until the desired time (INSTANTLY, 5S AFTER DIAL, 10S AFTER DIAL) is displayed.
4. Press the MEMORY button.

The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Station Message Detail Recording (SMDR) Communication Parameters

Description

SMDR is a cost saving feature that records on a printer a record of all incoming and outgoing calls. The following information is provided on the printout.

The SMDR will print out the security code of the long distance service.

NOTE:

When plugging a printer into the KX-T61610 make sure that the printer power is off. Select the SMDR Communication Parameters, System Data Dump and SMDR Incoming/Outgoing Selection for proper operation.

Example of print

Date	Time	Ext.	CO	Dial Number	Duration	Code
4/20/87	8:00 AM	26	6	201 234 5678	00:00'30"	0123
<div style="border-left: 1px dashed black; border-bottom: 1px dashed black; padding-left: 5px;"> year day month </div>		<div style="border-left: 1px dashed black; border-bottom: 1px dashed black; padding-left: 5px;"> CO number extension </div>		<div style="border-left: 1px dashed black; border-bottom: 1px dashed black; padding-left: 5px;"> called party </div>	<div style="border-left: 1px dashed black; border-bottom: 1px dashed black; padding-left: 5px;"> second minute hour </div>	<div style="border-left: 1px dashed black; border-bottom: 1px dashed black; padding-left: 5px;"> account code </div>

- When you have an incoming call, the printer will print <<incoming>>.
- When "=" appears in the Dial Number, the previous number of "=" indicates the line access number of the Host PBX.
- When "*" appears in front of the Time, this means the time that the call is transferred.

SMDR Printer Format Selection

(Carriage return for a new line)

until the desired code appears

[CR+LF . . . default
CR

[24][NEXT][SELECT][MEMORY]


(Baud rate)

until the desired baud rate appears

[110 B
150 B
300 B
600 B
1200 B . . . default
2400 B
4800 B
9600 B

[NEXT][SELECT][MEMORY]

Proceed to page 3-33.

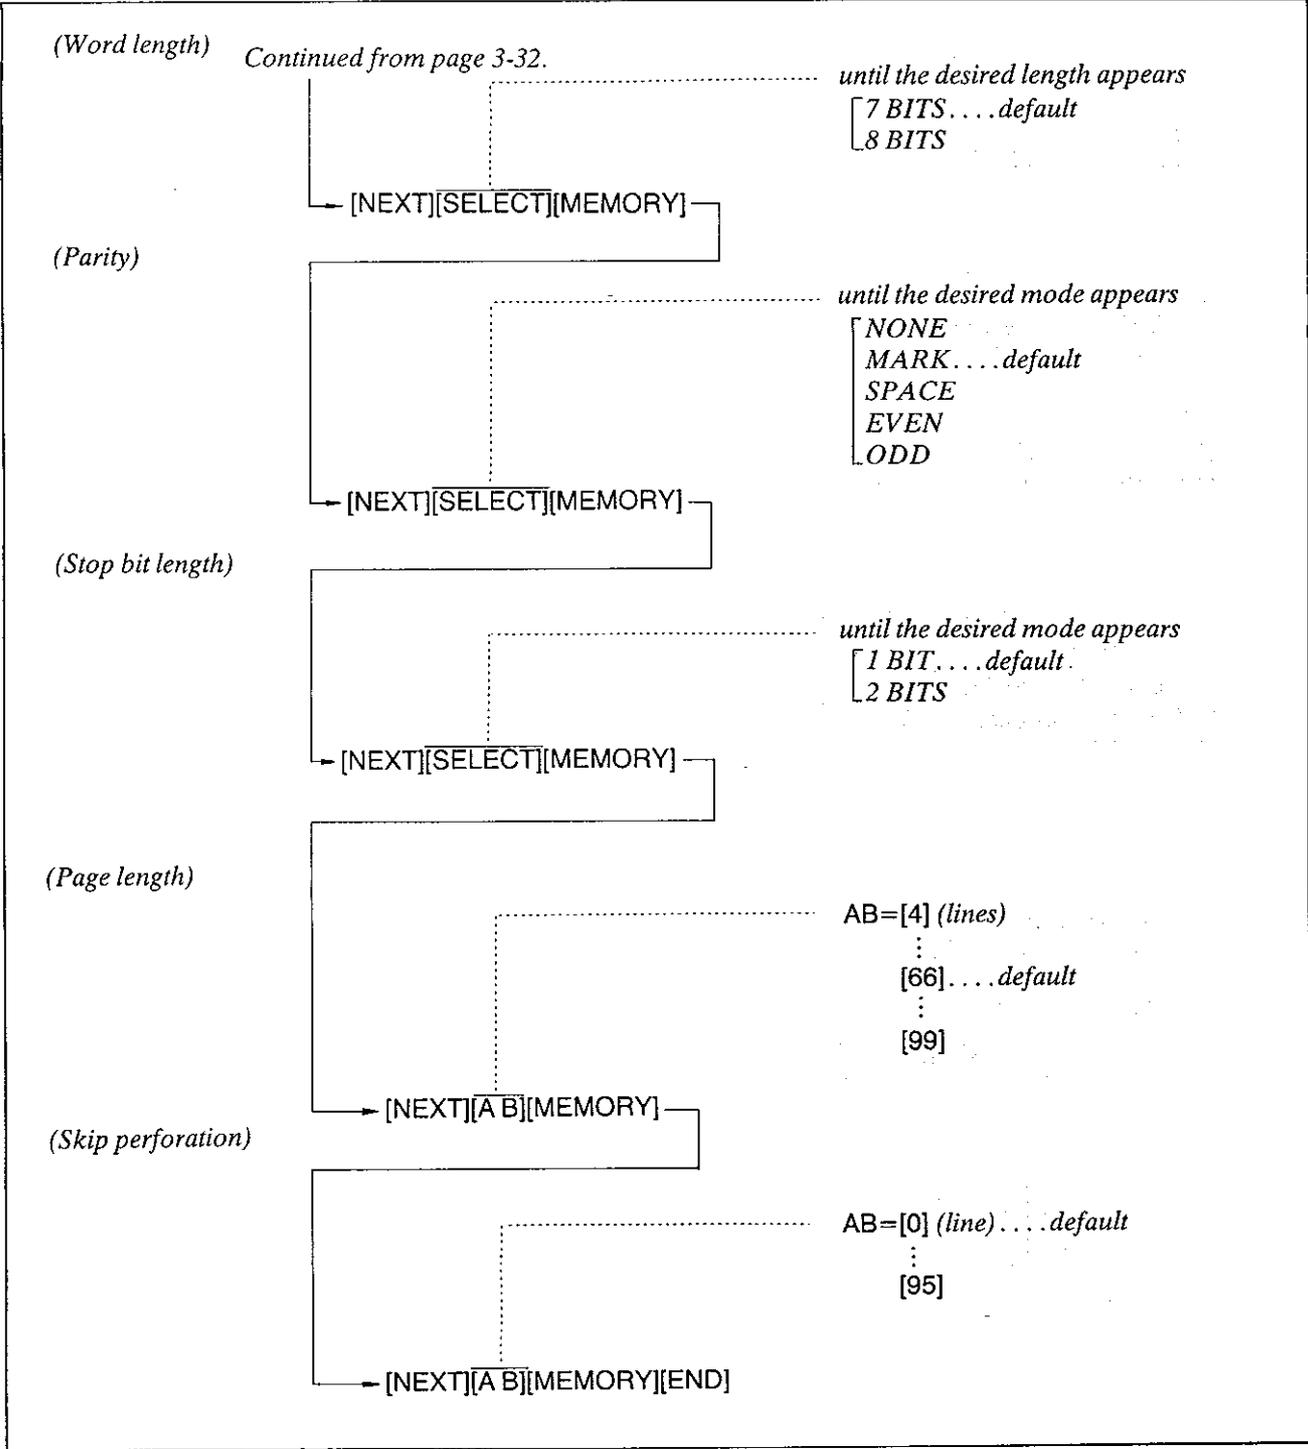

Carriage return for a new line

A new line code indicates what type of code is needed for the print head on a printer to move the first character position on the next line.

CR+LF

when "CR+LF" is required from a printer.

CR

when "CR" is required from a printer.

CR=Carriage Return

LF=Line Feed.

Baud rate

A baud rate code indicates the data transmission speed from the system to a printer.

110 B (when 110 baud is required.)

150 B (when 150 baud is required.)

300 B (when 300 baud is required.)

600 B (when 600 baud is required.)

1200 B (when 1200 baud is required.)

2400 B (when 2400 baud is required.)

4800 B (when 4800 baud is required.)

9600 B (when 9600 baud is required.)

Parity

A parity code indicates what type of parity is used to detect an error in a string of bits composing a character.

NONE: when an error checking function is not required from a printer.

MARK: when a Mark is required from a printer.

SPACE: when a Space is required from a printer.

EVEN: when an Even is required from a printer.

ODD: when an Odd is required from a printer.

Word length

A word length code indicates how many bits compose a character.

7 BITS (when 7 bits are required.)

8 BITS (when 8 bits are required.)

Stop bit length

A stop bit length code indicates the end of a bit string which composes a character.

1 BIT:

when one bit is required for end detection.

2 BITS:

when two bits are required for end detection.

Page length

The page length may be selected to position a title and data on each page.

A page length code indicates the number of lines per page.


A title will be printed on the first 3 lines of each page.

4 lines per page

⋮

99 lines per page

STANDARD CONTINUOUS PAPER (11 inches)

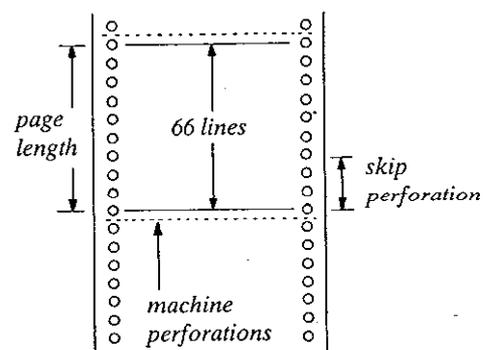

To print data, page length must be longer than skip perforation by 4 or more lines.

Skip perforation

The skip perforation code indicates the number of lines to be skipped. When the print head reaches the line designated, the print head moves to the top position of the next page.

- 0 (print head does not skip.)
- 1 (print head skips the last line.)
- 2 (print head skips the last 2 lines.)
- ⋮
- 95 (print head skips the last 95 lines.)

Programming

1. Dial (24).
"SMDR PARAMETERS" will be displayed.
2. Press the NEXT button.
"NL-CODE: CR+LF" will be displayed and "CR+LF" will blink.
3. Press the SELECT button to alternate between CR+LF and CR to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. Press the NEXT button.
"BAUD RATE: 1200B" will be displayed and the "1200B" will blink.
6. Repeat pressing the SELECT button until the desired baud rate is displayed.
7. Press the MEMORY button.
The LCD will stop blinking.
8. Press the NEXT button.
"WORD LENGT: 7BITS" will be displayed and the "7BITS" will blink.
9. Press the SELECT button to alternate between 7BITS and 8BITS to select the desired mode.
10. Press the MEMORY button.
The LCD will stop blinking.
11. Press the NEXT button.
"PARITY: MARK" will be displayed and the "MARK" will blink.
12. Repeat pressing the SELECT button until the desired parity code is displayed.
13. Press the MEMORY button.
The LCD will stop blinking.
14. Press the NEXT button.
"STOP BIT: 1BIT" will be displayed and the "1BIT" will blink.
15. Press the SELECT button to alternate between 1BIT and 2BITS to select the desired mode.
16. Press the MEMORY button.
The LCD will stop blinking.
17. Press the NEXT button.
"PAGE LENGTH: 66" will be displayed and the "66" will blink.
18. Dial (4 through 99) for the page length entry.
19. Press the MEMORY button.
The LCD will stop blinking.
20. Press the NEXT button.
"SKIP PERF: 0" will be displayed and the "0" will blink.
21. Dial (0 through 95) for the skip perforation code entry.
22. Press the MEMORY button.
The LCD will stop blinking.
23. To return to the initial program mode, press the END button.

Programming Table

See page 6-15.

Conditions

- To return to the previous mode, press the PREV button instead of the NEXT button.

Conditions

The following combinations are disallowed.

parity	word length	stop bit length
mark	8	2
space	8	1
space	8	2

If any of the above disallowed combinations are selected, "INPUT ERROR" will be displayed. Press the NEXT button and then repeat the procedure of programming.

The pin configuration of EIA (RS-232C) connector is as follows.

Pin Number	Signal Name		Circuit Type	
			EIA	CCITT
1	FG	Frame Ground	AA	101
2	TXD	Transmitted Data	BA	103
3	RXD	Received Data	BB	104
4	RTS	Request To Send	CA	105
5	CTS	Clear To Send	CB	106
6	DSR	Data Set Ready	CC	107
7	SG	Signal Ground	AB	102
8	DCD	Data Carrier Detect	CF	109
20	DTR	Data Terminal Ready	CD	108.2

EIA SIGNALS:

Frame Ground (FG);

Connects to the unit frame and the earth ground conductor of the AC power cord.

Transmitted Data (TXD); (output)

Conveys signals from the unit to the printer. A "MARK" condition is held unless data or BREAK signals are being transmitted.

Received Data (RXD); (input)

Conveys signals from the printer.

Request To Send (RTS); (output)

This lead is held ON whenever DSR is ON.

Clear To Send (CTS); (input)

An ON condition of circuit CTS indicates that the printer is ready to receive data from the unit. The unit does not attempt to transfer data or receive data when circuit CTS is OFF.

Data Set Ready (DSR); (input)

An ON condition of circuit DSR indicates the printer is ready. Circuit DSR ON does not indicate that communication has been established with the printer.

Signal Ground (SG);

Connects to the DC ground of the unit for all interface signal.

Data Terminal Ready (DTR) (output)

This signal line is turned ON by the unit to indicate that it is ON LINE. Circuit DTR ON does not indicate that communication has been established with the printer. It is switched OFF when the unit is OFF LINE.

Data Carrier Detect (DCD) (input)

The ON condition is an indication to data terminal (DTE) that the carrier signal is being received.

System Data Dump

• **STOP OUTPUT**

[25][NEXT][SELECT][MEMORY][END]

.....until the STOP OUTPUT appears

- SYSTEM PARA
- SPEED DIAL
- ALL PARA (Master)

[25][NEXT][SELECT][MEMORY][END]

.....until desired data dump mode appears

```

SYSTEM PARA ..... default
CO PARA
EXT PARA
SPEED DIAL
ALL PARA
STOP OUTPUT
    
```

• **CO PARA (Outside)**

[25][NEXT][SELECT][MEMORY][A][END]

.....until the CO PARA appears

A=[*]: to assign the same on all 6 CO's
 [1]: on CO 1
 ⋮
 [6]: on CO 6

• **EXT PARA**

[25][NEXT][SELECT][MEMORY][AB][END]

.....until the EXT PARA appears

AB=[*]: to assign the same on all 16 extensions
 [11]: on extension 11
 ⋮
 [26]: on extension 26

Description

Five separate printouts are available.

They are (1) System parameters (2) CO parameters (3) Extension parameters (4) Speed dial (5) All parameters (master)

(1) System parameters

Day/Night
Area codes of class-2
Area codes of class-3
Delay Ring count
Duration time count
SMDR parameters
Duration log
Auto hold alarm time
Hold recall time
Transfer recall time
Ext-paging access tone
Secret speed dialing
DTMF receiver selection
Door phone receive extension
Pickup group assignments
DSS operation mode
DSS console set

(2) CO parameters

Connection
Dial mode
Host PBX access code
Hookswitch flash time
Disconnect time
CPC Detection

(3) Extension parameters

■ (When the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 is connected at extension.)
Telephone type
Outgoing CO Day/Night
Incoming CO Day/Night
Toll restriction
CO answer mode
Incoming preferred CO
Call waiting
Call waiting tone

Delayed Ringing CO
Intercom call mode
Account code input mode
Executive override
Auto CO access group
Automatic CO hunting
Do not disturb
Call forwarding
Data line security
Dial call pickup deny
Feature button assignments
CO button assignments
DSS button assignments (KX-T30830 only)
<<DSS Console Items>>
Feature button assignments
DSS button assignments

■ (When the standard telephone or DSS Console is connected at extension)

Telephone type
DSS console connection
Outgoing CO Day/Night
Incoming CO Day/Night
Toll restriction
Incoming preferred CO
Call waiting
Delayed ringing CO
Account code input mode
Auto CO access group
Pickup dial
Do not disturb
Call forwarding
Data line security
Dial call pickup deny

(4) Speed dial

Speed access codes (00 through 99) in which phone numbers are stored may be printed.

(5) All parameters (master)

System parameters
CO parameters
Extension parameters
Speed dial

Operation

To stop the printout;

1. Dial (25).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until STOP OUTPUT is displayed.
4. Press the MEMORY button.
"STOP PRINTING !!" will be displayed.

When the System Parameters, Speed dial or All Parameters is printed.

1. Dial (25).
"SYSTEM DATA OUT" will be displayed.
2. Press the NEXT button.
"MENU: SYSTEM PARA" will be displayed and "SYSTEM PARA" will blink.
3. Repeat pressing the SELECT button until the desired data dump mode is displayed.
4. Press the MEMORY button.
The LCD will stop blinking.
5. Repeat step 2 to 4, to print the other data dumps.

When the CO Parameter is printed;

1. Dial (25).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "CO PARA" is displayed.
4. Press the MEMORY button.
"ENTER CO NO" is displayed.
5. Dial the CO number.
SMDR printer will print out.
"PRINTING NOW" will be displayed.
6. To print the other CO parameter, press the SELECT button and then dial the CO number.

When the Extension Parameter is printed;

1. Dial (25).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "EXT PARA" is displayed.
4. Press the MEMORY button.
"ENTER EXT NO" is displayed.
5. Dial the extension number.
SMDR printer will print out.
"PRINTING NOW" will be displayed.
6. To print the other extension parameter, press the SELECT button and then dial the extension number.


After completing printing, to return to the initial mode;

1. Press the END button.

Programming Table

See page 6-16.

Station Message Detail Recording (SMDR) Incoming/Outgoing Selection

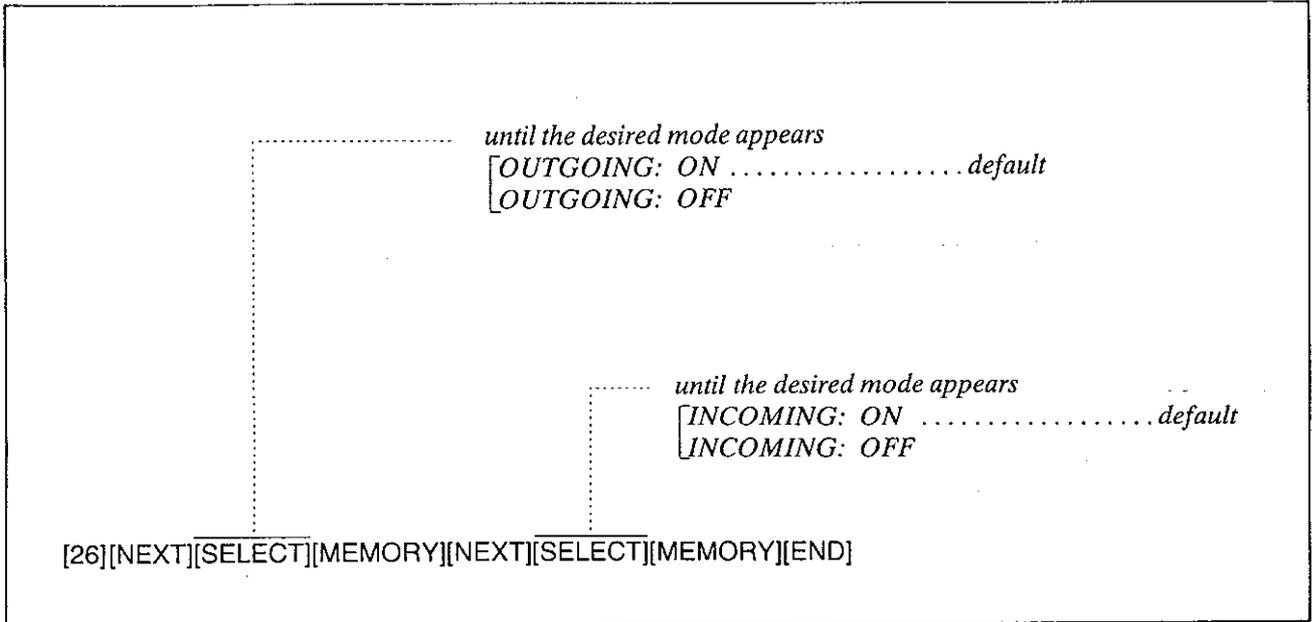

Description

It is possible to print either outgoing outside calls, incoming outside calls or both.

- OUTGOING: ON...* to print outgoing outside calls
- OUTGOING: OFF...* to stop printing
- INCOMING: ON...* to print incoming outside calls
- INCOMING: OFF...* to stop printing


Programming

1. Dial (26).
"DURATION LOG" will be displayed.
2. Press the NEXT button.
"OUTGOING: ON" will be displayed and the "ON" will blink.
3. Press the SELECT button to alternate between the "ON" and "OFF" to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. Press the NEXT button.
"INCOMING: ON" will be displayed and the "ON" will blink.
6. Press the SELECT button to alternate between "ON" and "OFF" to select the desired mode.
7. Press the MEMORY button.
The LCD will stop blinking.
8. To return to the initial program mode, press the END button.

Programming Table

See page 6-16.

Hold Time Reminder

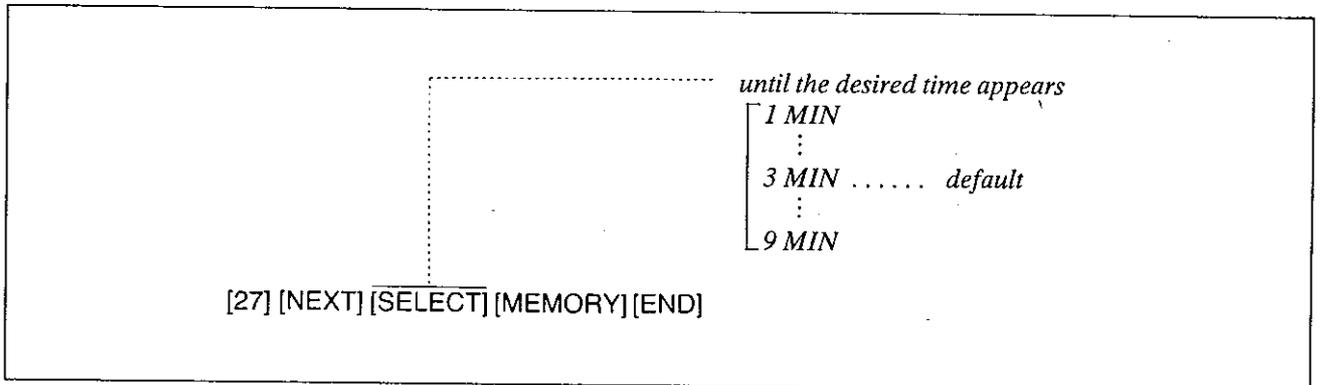

Description

A tone indication will be heard at the holding extension to remind the user that he still has a call on hold.

The reminder will sound after 3 minutes but can be changed.

There are 9 choices ranging from (1) minute to (9).

4. Press the *MEMORY* button.
The LCD will stop blinking.

5. To return to the initial program mode, press the *END* button.

Conditions

The hold time reminder is activated, even if the hold recall time set is programmed to "DISABLE".

Programming

1. Dial (27).
"AUTO HOLD ALARM" will be displayed.
2. Press the *NEXT* button.
"TIME: 3 MIN" will be displayed and "3" will blink.
3. Repeat pressing the *SELECT* button until the desired time is displayed.


Example:

4 minutes = [27] [NEXT] [SELECT]
[MEMORY] [END]

Programming Table

See page 6-16.

Hold Recall Time Set

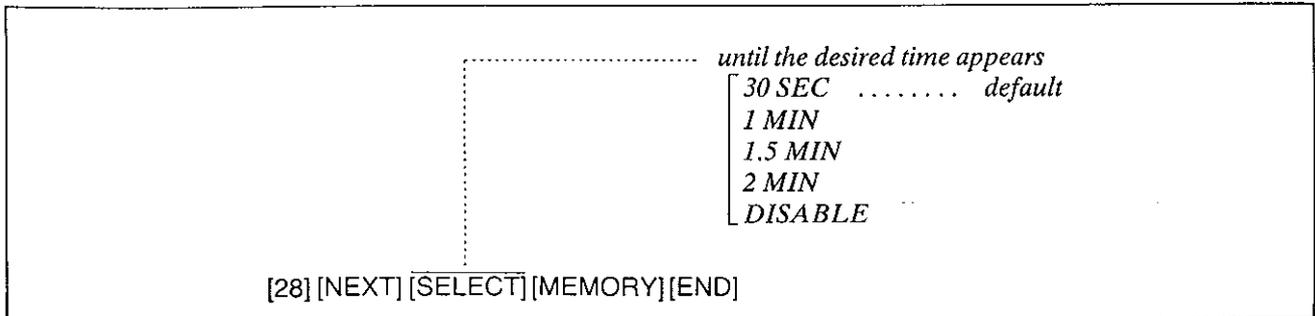

Description

When the handset of the holding extension is replaced back on call, you may have the automatic hold recall after the desired time elapses.

The hold recall time set can be removed or added at the customer's request.

Example:

1.5 minutes=[28] [NEXT] [SELECT]
[SELECT] [MEMORY] [END]


Programming Table

See page 6-16.

Programming

1. Dial (28).
"HOLD RECALL TIME" will be displayed.
2. Press the NEXT button.
"TIME: 30 SEC" will be displayed and "30 SEC" will blink.
3. Repeat pressing the SELECT button until the desired time (30 SEC, 1 MIN, 1.5 MIN, 2 MIN, DISABLE) is displayed.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Programmable External Paging Access Tone

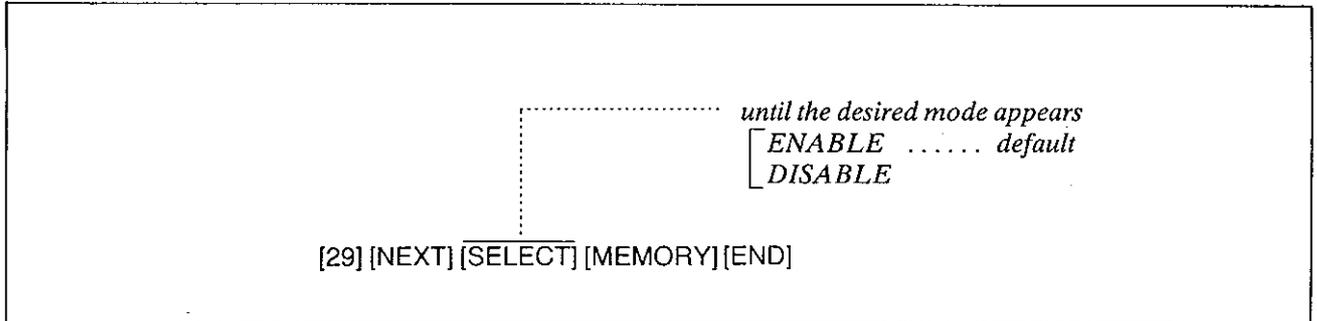

Description

The acknowledge tone that is heard after accessing the external paging can be removed or added at the customer's request.

Example:

To eliminate the paging access tone.
[29] [NEXT] [SELECT] [MEMORY][END]


Programming

1. Dial (29).
"EXT-PAG ACK-TONE" will be displayed.
2. Press the NEXT button.
"ENABLE" will be displayed and blink.
3. Press the SELECT button to alternate between ENABLE and DISABLE to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Programming Table

See page 6-16.

Programmable Secret Speed Dial

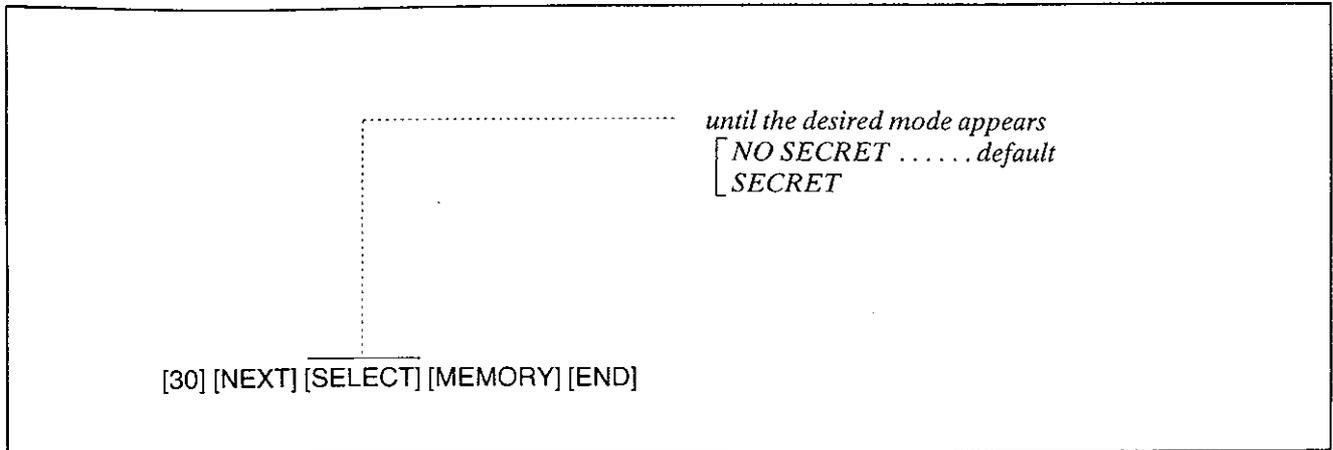

Description

When you dial on an outside line by speed dialing, the dialed number can be kept secret by not being displayed.

(The dialed number will not be displayed on the LCD of the KX-T61630/KX-T30830.)


Programming

1. Dial (30).
"SECRET SPEEDDIAL" will be displayed.
2. Press NEXT button.
"NO SECRET" will be displayed and blink.
3. Press the SELECT button to alternate between "NO SECRET" and "SECRET" to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode press the END button.

Programming Table

See page 6-17.

Hookswitch Flash Timing

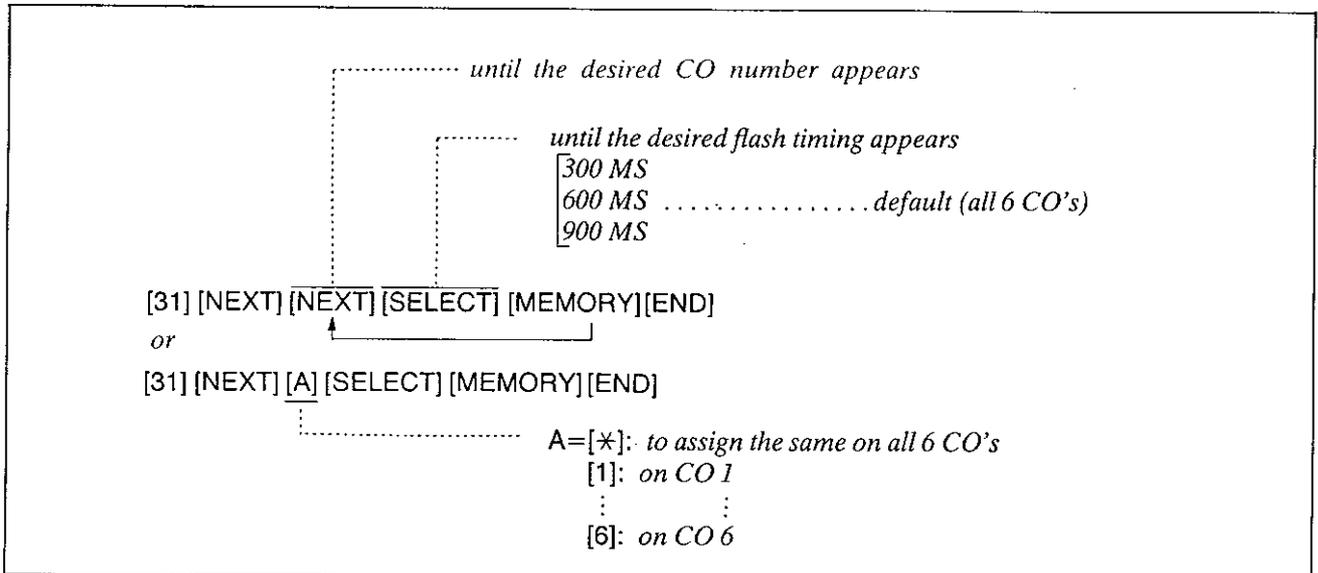

Description

The timing of the hookswitch flash signal must be within the requirements from your Central Office.
 There are three choices available 0.3, 0.6 or 0.9 second.

Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous CO for displaying the hookswitch flash timing.

Programming

1. Dial (31).
 "FLASH TIME SET" will be displayed.
2. Press the NEXT button.
 "ENTER CO NO" will be displayed.
3. Press the NEXT button.
 "CO 1: 600 MS" will be displayed and "600 MS" will blink.
4. Repeat pressing the SELECT button until the desired value is displayed.
5. Press the MEMORY button.
 The LCD will stop blinking.
6. Repeat steps 3 to 5, to set the hookswitch timing of the other CO's.
7. To return to the initial program mode, press the END button.


Example:

- 0.3 sec on all 6 CO=
- [31] [NEXT] [*] [SELECT] [SELECT] [MEMORY] [END]

Programming Table

See page 6-17.

Disconnect Time

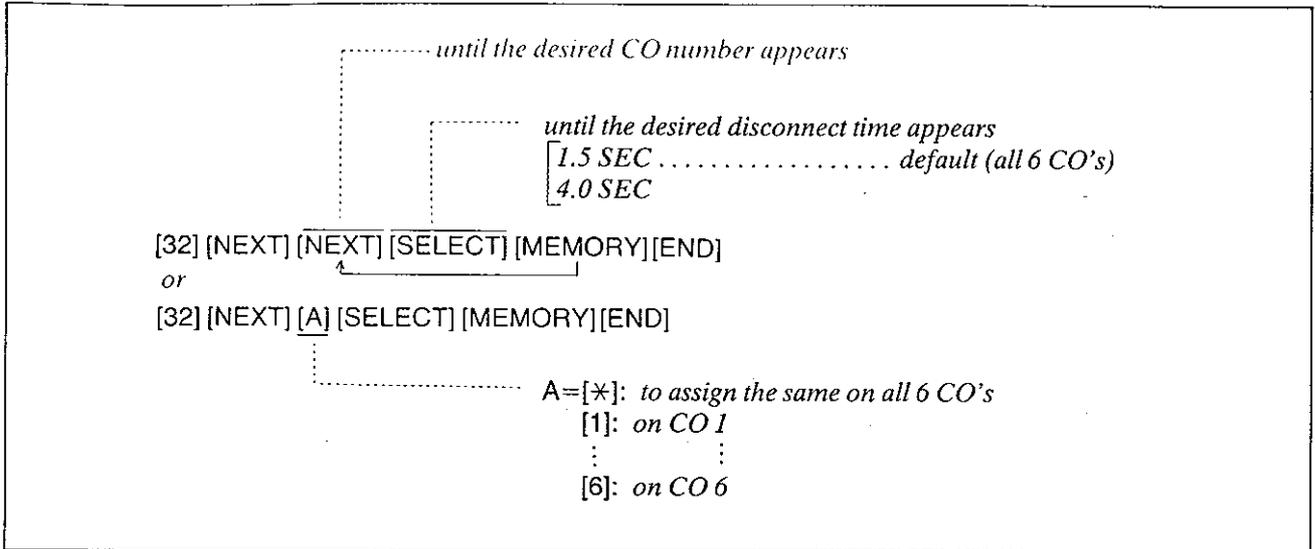

Description

A certain amount of time is needed for an outside call to be released, this is necessary so that a new call may be attempted after disconnecting with the previous call.

There are two choices available, 1.5 and 4.0 seconds.

The time you select must be longer than the requirements from your Central Office or host PBX.

6. Repeat steps 3 to 5, to set the disconnect time for the other CO's.

7. To return to the initial program mode, press the END button.

Programming

1. Dial (32).
"DISCONNECT TIME" will be displayed.
2. Press the NEXT button.
"ENTER CO NO" will be displayed.
3. Press the NEXT button.
"CO 1: 1.5 SEC" will be displayed and "1.5 SEC" will blink.
4. Press the SELECT button to alternate between 1.5 sec and 4.0 sec.
5. Press the MEMORY button.
The LCD will stop blinking.

Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous CO for displaying the disconnect time.


Example:

- 4.0 sec on all 6 CO=
[32] [NEXT] [*] [SELECT] [MEMORY][END]

Programming Table

See page 6-17.

Calling Party Control (CPC) Signal

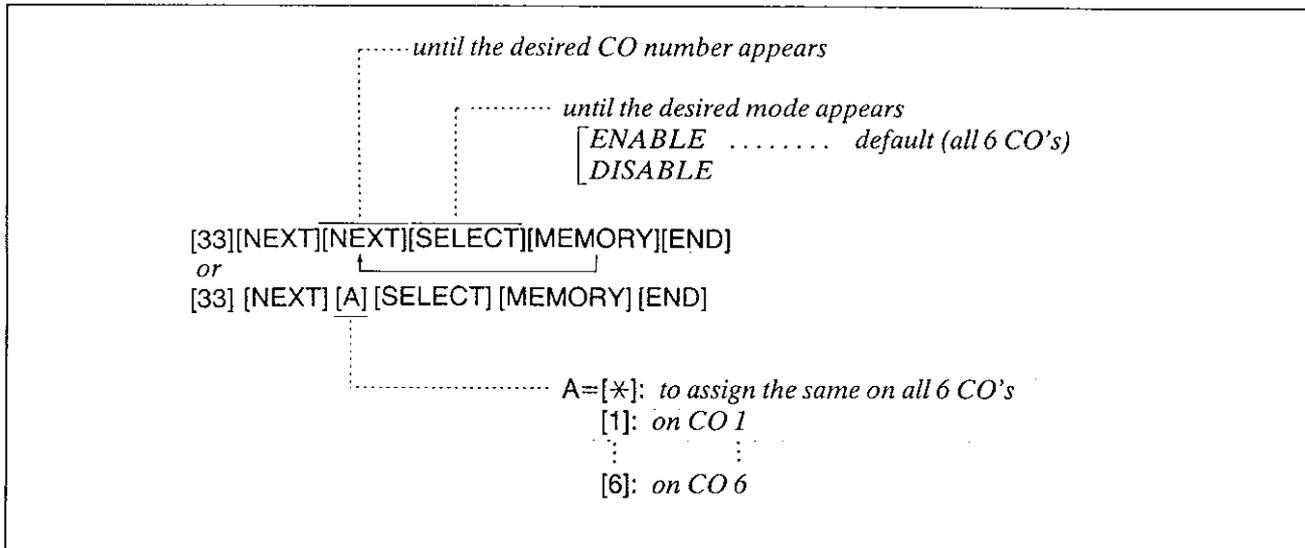

Description

To detect that an outside party has hung up and then terminate the outside (after a conversation, conference etc.) a CPC signal is needed. CPC signal detection can be removed or added at customer's request.

Programming

1. Dial (33).
"CPC DETECTION" will be displayed.
2. Press the NEXT button.
"ENTER CO NO" will be displayed.
3. Press the NEXT button.
"CO 1: ENABLE" will be displayed and "ENABLE" will blink.
4. Press the SELECT button, to alternate between ENABLE and DISABLE to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.

6. Repeat steps 3 to 5, to program the assignment of the other CO's.

7. To return to the initial program mode, press the END button.


Conditions

- When you start the programming from step 1, you may dial the desired CO number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous CO for displaying the calling party control signal selection.

Programming Table

See page 6-17.

DSS Button Mode

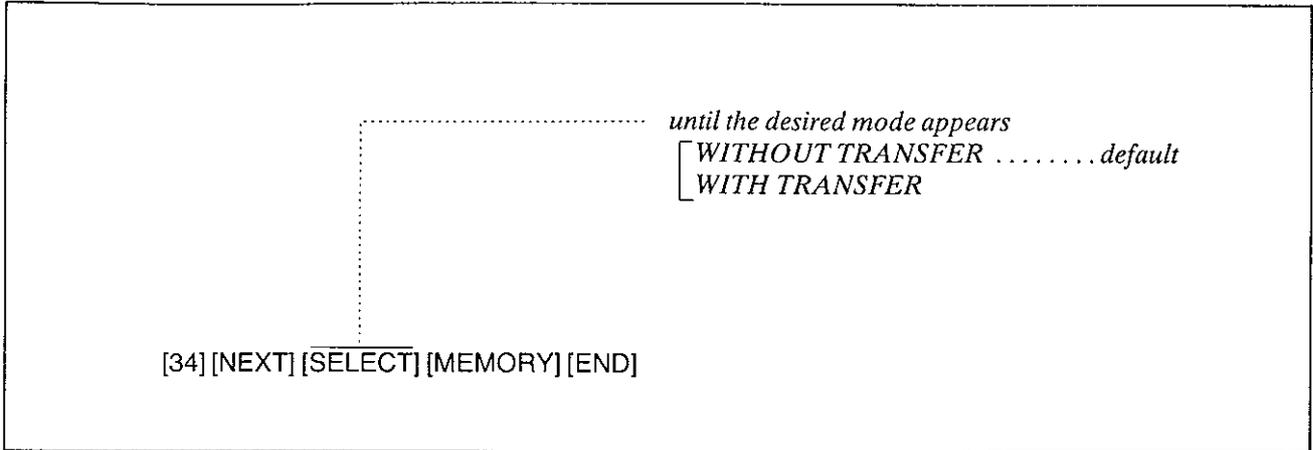

Description

Outside calls can be transferred to any extension manually.

- "WITHOUT TRANSFER" mode you can transfer outside call by pressing the TRANSFER button and then DSS button.
- "WITH TRANSFER" mode you can transfer outside call by only pressing the DSS button.

Programming

1. Dial (34).
"DSS BUTTON MODE" will be displayed.
2. Press the NEXT button.
"WITHOUT TRANSFER" will be displayed and blink.
3. Press the SELECT button to alternate between "WITHOUT TRANSFER" and "WITH TRANSFER" to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.


Conditions

- Intercom calls can be transferred by pressing the TRANSFER button and then DSS button regardless of the mode setting.

Programming Table

See page 6-17.

Transfer Recall Time

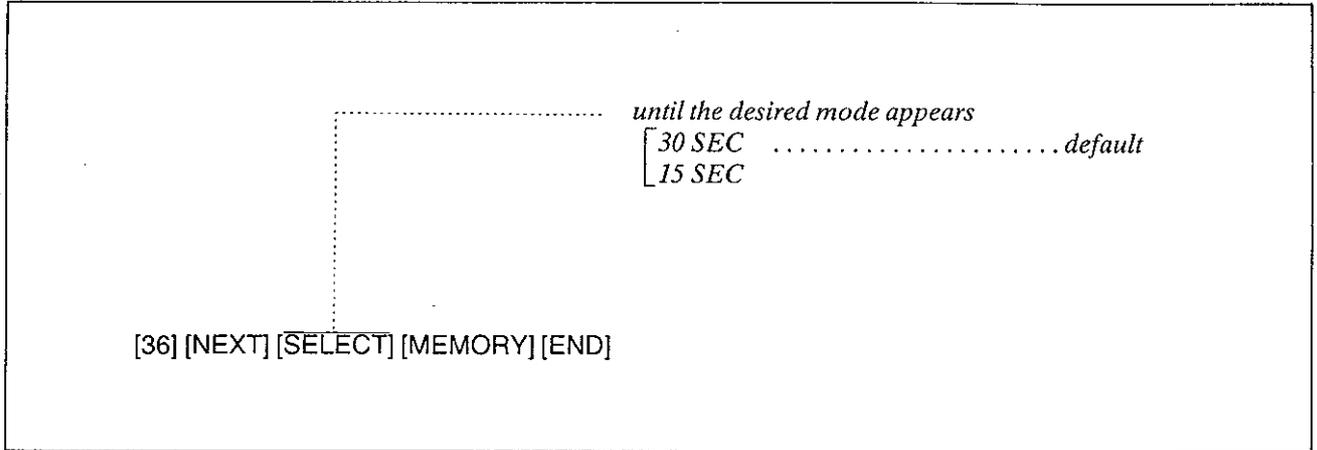

Description

When a call is transferred to any extension, if other extension does not receive the transferred call within 30 seconds, the call will return to you.

The time may be changed to 15 seconds.


Programming

1. Dial (36).
"XFER RECALL TIME" will be displayed.
2. Press NEXT button.
"30 SEC" will be displayed and blink.
3. Press the SELECT button to alternate between "30 SEC" and "15 SEC" to select the desired mode.
4. Press the MEMORY button.
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

Programming Table

See page 6-18.

M3/FWD Selection (for KX-T30850, KX-T61650)

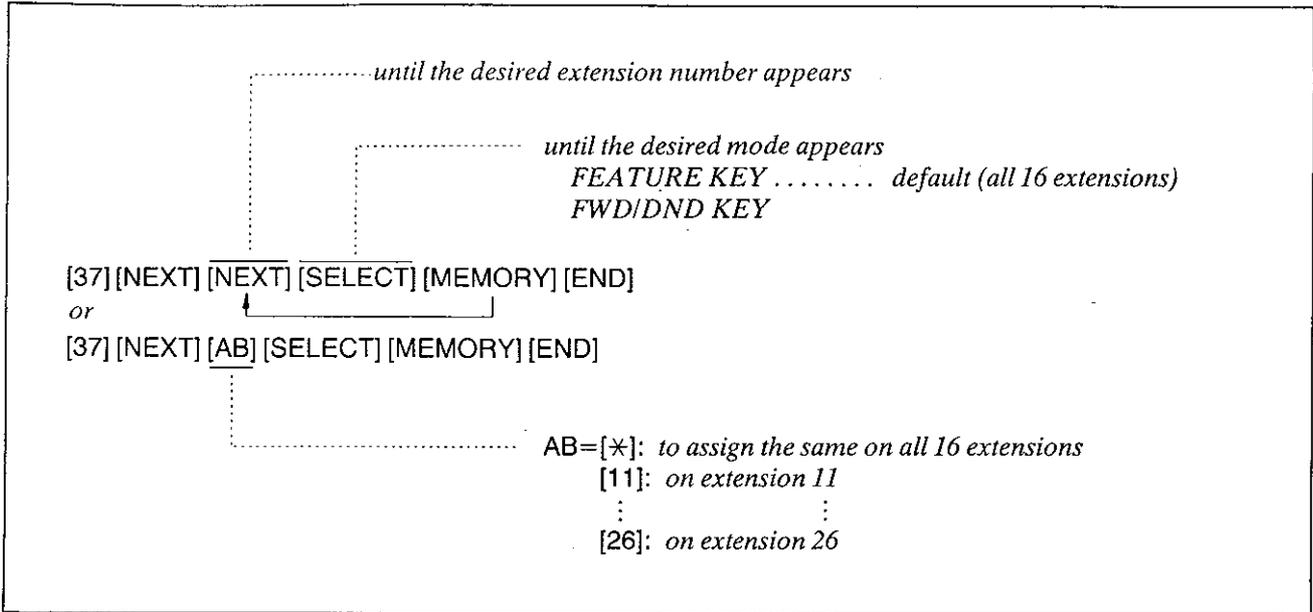

Description

3 programmable feature (F1, F2, F3) buttons are provided with the proprietary telephones, KX-T61650 and KX-T30850, and only "F3" button can be changed from programmable feature button to call forwarding (see page 4-36 for operation)/do not disturb (see page 4-38)/account code (see page 4-25) button.

"FEATURE KEY" mode...

programmable feature function

"FWD/DND KEY" mode...

call forwarding/do not disturb/account code function

4. Press the SELECT button to alternate between FEATURE KEY and FWD/DND KEY to select the desired mode.

5. Press the MEMORY button.
The LCD will stop blinking.

6. To return to the initial program mode, press the END button.

7. Repeat steps 1 to 6, to program call forwarding/do not disturb/account code button of the other extensions.

Programming

1. Dial (37).
"M3/FWD SELECTION" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Dial the extension number to which the KX-T61650 or KX-T30850 is connected.
Example:
When dialing 20, the LCD will show "20:FEATURE KEY" and the "FEATURE KEY" will blink.


Conditions

- You may repeat pressing the NEXT button until the extension number to which the KX-T61650 or KX-T30850 is connected is displayed instead of the dialing the extension number at step 3.
- The PREV button allows you to go to the previous extension for displaying the M3/FWD selection.

Programming Table

See page 6-18.

Programmable Executive Override

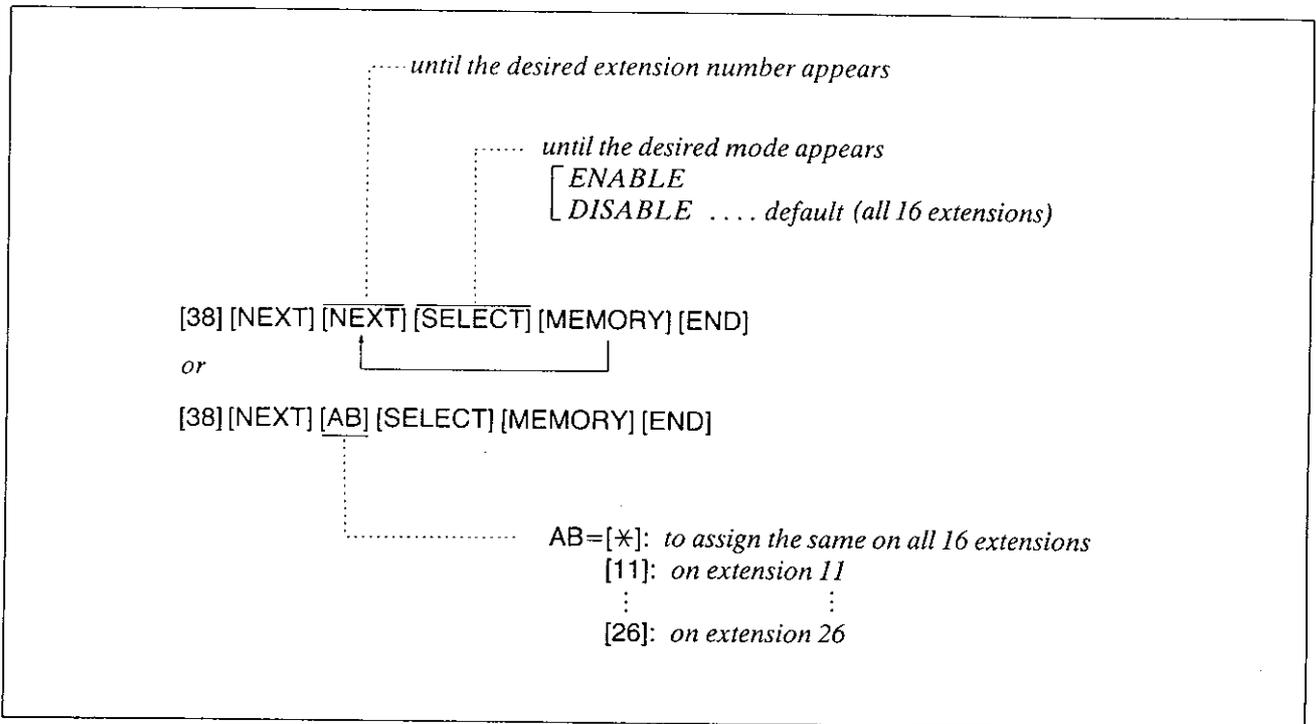

Description

Through programming, you can select which extension may barge in another extension that is in conversation with an outside party.

6. Repeat steps 3 to 5, to program the assignment of the other extensions.

7. To return to the initial program mode, press the END button.

Programming

1. Dial (38).
"EXECUT OVERRIDE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: DISABLE" will be displayed and "DISABLE" will blink.
4. Press the SELECT button, to alternate between ENABLE and DISABLE to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.


Conditions

- If you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to return to the previous extension for displaying the Executive Override selection.

Programming Table

See page 6-18.

Automatic Designated CO Line Access

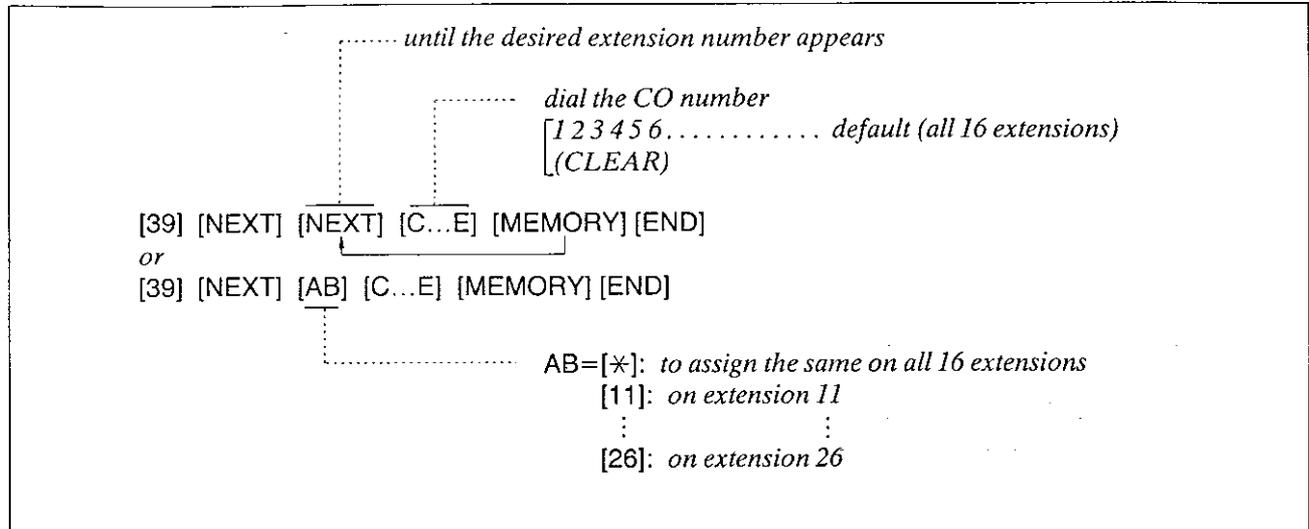

Description

Through programming, you can select which CO Line is accessed automatically when you dial 9 to use the "Automatic Line Access" or the "Auto CO Hunting" feature.

Programming

1. Dial (39).
"AUTO CO ACCESS" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11:CO 123456" will be displayed and "123456" will blink.
4. Dial the CO Numbers to be entered.
To cancel the entered CO Number, press the CLEAR button.
5. Press the MEMORY button.
•The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment on the other extensions.
7. To return to the initial program mode, press the END button.


Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Programming Table

See page 6-18.

Programmable Call Waiting Tone

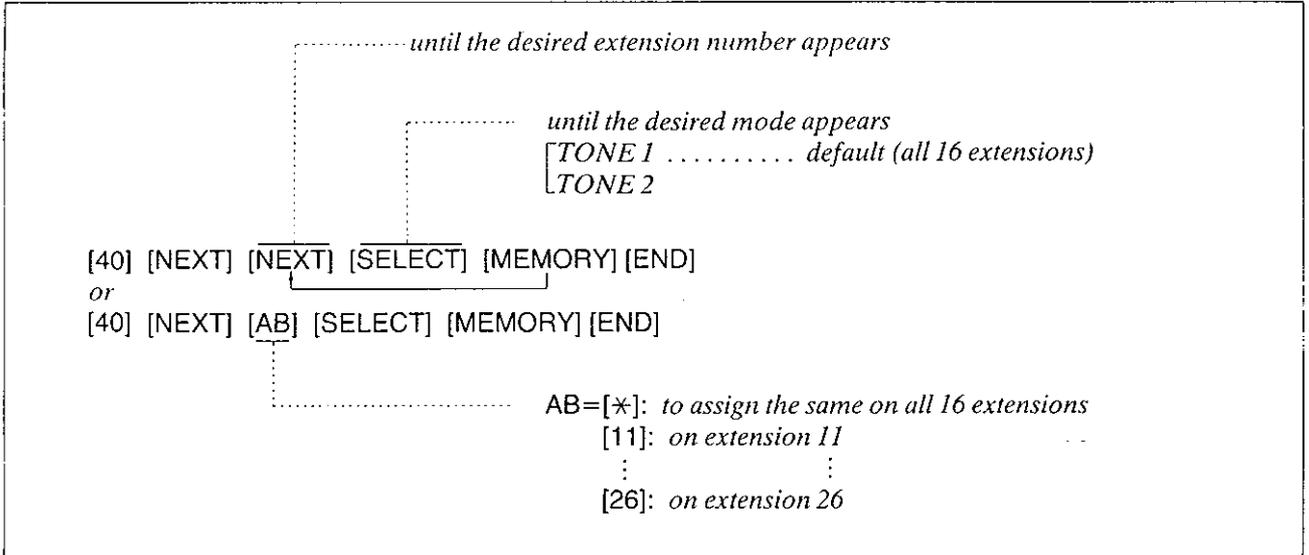


Description

Through programming, you can change the Call Waiting Tone from Tone 1 to Tone 2 shown below to prevent the user from missing the tone.

Tone 1 is heard from the handset receiver of the standard telephone and the built-in speaker of the proprietary telephone. Tone 2 is heard only from the built-in speaker of the proprietary telephone.

As for the KX-T61650 and KX-T30850, the Call Waiting Tone is heard from the built-in speaker during the Monitor Operation and from the handset receiver while having a conversation.

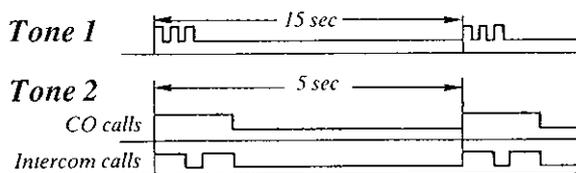

Programming

1. Dial (40).
"CALL WAIT TONE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.

4. Press the SELECT button to alternate between "TONE 1" and "TONE 2" to select the desired tone.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- This feature is available to the proprietary telephones (KX-T61620, KX-T61630, KX-T30820, KX-T30830).
- Call Waiting feature should be programmed "ON" beforehand. Refer to page 3-24 in INSTALLATION MANUAL for the programming.
- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the Call Waiting mode.

Programming Table

See page 6-18.

DETAILED FEATURE FOR EMSS PROPRIETARY TELEPHONE

(KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820, KX-T30850)

To operate this system, after making program changes, set the System Program Switch located on the KX-T61610 (Electronic Modular Switching System) to the SET position.

To Make Calls


When the unit is unused, the Liquid Crystal Display will show the month, day and the present time.

Inter Office Calling (Intercom)

Using the Handset



LIFT THE
HANDSET

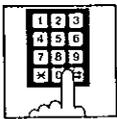

DIAL THE
EXTENSION
NUMBER
(11 through 26)




TALK




HANG UP

Hands-free

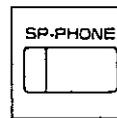

PRESS
"SP-PHONE"

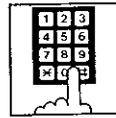

DIAL THE
EXTENSION
NUMBER
(11 through 26)



TALK



PRESS
"SP-PHONE"

- You may press the ICM button instead of the first SP-PHONE button.
- ICM—Intercom
- CO—Central Office

Description

Station to station dialing within the KX-T61610 system.

Operation

Using the handset

1. Lift the handset.
2. Dial the extension number (11 through 26).
3. Start talking
4. Hang up upon completion of the conversation.

Hands-free


1. Press the SP-PHONE or ICM button.
2. Dial the extension number (11 through 26).
3. Start talking
4. Press the SP-PHONE button again after completion of the conversation.

Conditions

- When a called party has the KX-T61630/ KX-T30830 equipped with an LCD, the extension number of the calling party will be displayed on the LCD of the called party.
- The extension number of the calling party will be displayed on the LCD of the KX-T61630/ KX-T30830.
- The ICM indicator will be lit green while using the unit.
- The KX-T61650 or KX-T30850 will not function for hands-free mode.

Outward Dialing

Automatic Line Access

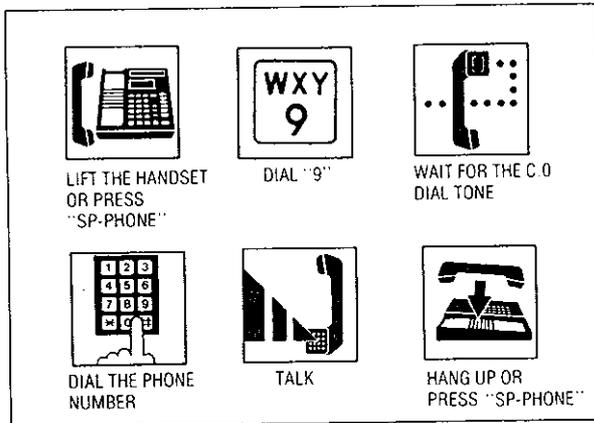

Description

Each extension can automatically select an idle CO (Central Office) line within the KX-T61610.

You can designate the idle CO line to be selected automatically by programming. See page 3-52.


Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (9).
Dial tone from CO (Central Office) will be heard.
 - The CO indicator will be lit green at your extension and lit red at other extensions.
3. Dial the phone number.
4. Start talking.
5. Hang up or press the SP-PHONE button upon completion of the conversation.

Conditions

- The 9 dialed, will be displayed on the LCD of the KX-T61630/KX-T30830 and you will hear following.
 - Dial tone from the CO: indicates that the CO line is captured.
 - Busy tone: indicates that the six CO lines are busy.
 - Reorder tone: indicates that the extension is denied access to an outside line.

Individual Line Access

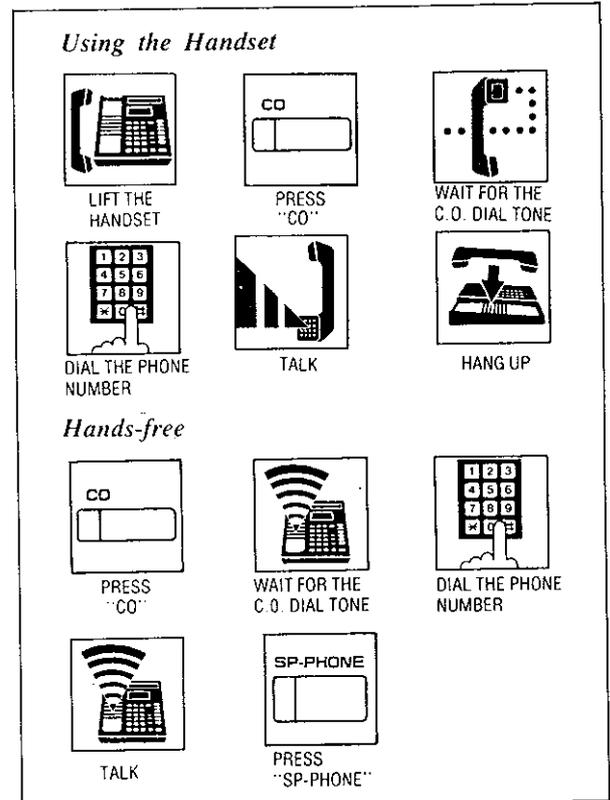

Description

Any of the 6 CO's may be directly selected.

Operation

Using the handset


1. Lift the handset.
2. Press the CO button.
Dial tone from CO will be heard.
3. Dial the phone number.
4. Start talking.
5. Hang up.

Hands-free

1. Press the CO button.
Dial tone from CO will be heard.
2. Dial the phone number.
3. Start talking.
4. Press the SP-PHONE button.
 - The phone number dialed will be displayed on LCD of the KX-T61630/KX-T30830.
 - You can not use the CO button whose indicator is lit (red) as this CO line is use.
 - The KX-T61650 or KX-T30850 will not function for hands-free mode.

Outward Dialing (cont.)

Individual Line Access

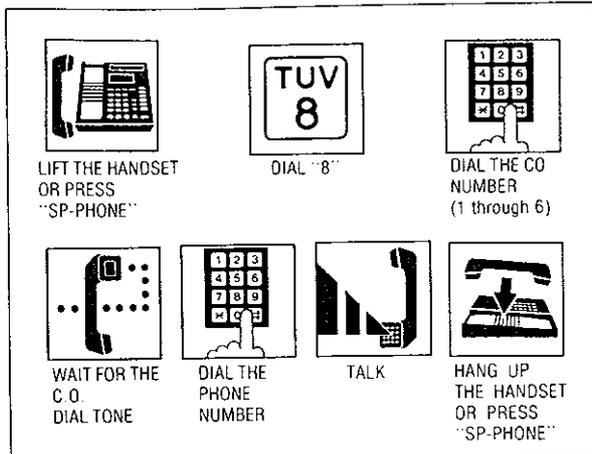

Description

Any of the 6 CO lines may be selected by dial access.

Operation


1. Lift the handset or press the SP-PHONE button.
2. Dial (8) and the CO number (1 through 6). Dial tone from the CO (Central Office) will be heard.
3. Dial the phone number.
4. Start talking.
5. Hang up or press the SP-PHONE button.

Conditions

- The phone number dialed will be displayed on the LCD of the KX-T61630/KX-T30830.
- Individual line access codes
 - Dial 81 for CO 1
 - Dial 82 for CO 2
 - Dial 83 for CO 3
 - Dial 84 for CO 4
 - Dial 85 for CO 5
 - Dial 86 for CO 6

Each extension can access a new CO line without hanging up.


While having a conversation,

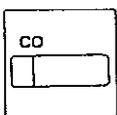

PRESS ANOTHER "CO"

- The original conversation will be terminated and a new CO line will be accessed.

Speed Dialing

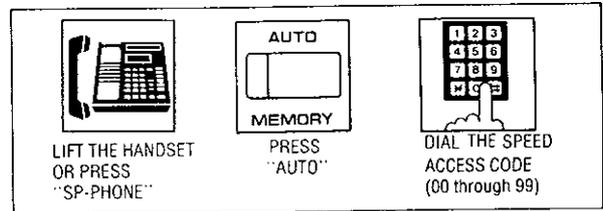

Description

There are 100 memory locations of system speed dialing available.

Operation

1. Lift the handset or press the SP-PHONE button.
2. Press the AUTO button.
3. Dial the speed access code.
 - You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.


Condition

- The dialed number will be displayed on the LCD of the KX-T61630/KX-T30830.
- Continuous use of speed dialing is possible.
 - ex. [AUTO] [0] [0] [AUTO] [0] [1]
 Chaining together two or more memory locations.
- Combinations of speed dialing, one touch dialing and manual dialing is possible.

Programming

- Be sure the handset is in the cradle and the SP-PHONE or MONITOR button is OFF.
- Set the MEMORY switch of the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 to "PROGRAM".

■ Storage

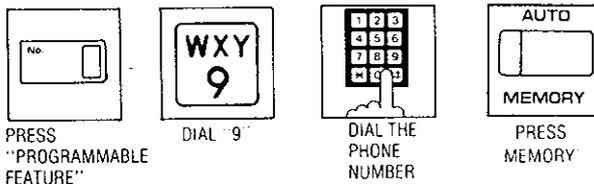

- You may dial 81 through 86 instead of 9.
 - 9 Each extension can automatically select an idle CO line.
 - 81 through 86... Each extension can select a designated CO line.

9 or 81 through 86 must be dialed for storage.

■ To Correct an Error while Programming



PRESS "CLEAR (TRANSFER)" INSTEAD OF MEMORY

- After pressing the CLEAR button, reprogram the correct number.
- The TRANSFER button is used as the CLEAR button.

■ To Change a Stored Number

Repeat "Storage" above.


■ To Confirm a Stored Number

Repeat programming the same number into the same station.

When the MEMORY button is pressed, a beep will be heard.

- two beeps Storage is as same as before.
- one beep Storage is different from before. Repeat the procedure of programming.

■ To Erase after Programming

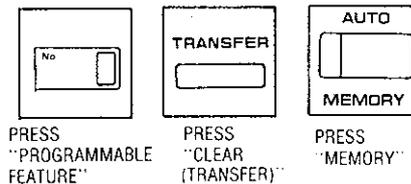


- The TRANSFER button is used as the CLEAR button.

After programming all the numbers, return the MEMORY switch to the "SET" position.

Dialing



LIFT THE HANDSET OR PRESS "SP-PHONE"

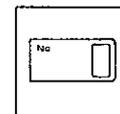

"PRESS PROGRAMMABLE FEATURE"

- You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.

Description

There are 12 memory locations for automatic dialing available. Up to 32 digits can be stored into each of the 12 memory locations. Pushing the "*", "#", "-", "FLASH" or "PAUSE" button counts as 1 digit.

- For your convenience, program private phone numbers into the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.

Programming

Be sure the handset is in the cradle and the SP-PHONE or MONITOR button is OFF.

1. Set the MEMORY switch to "PROGRAM". "PROGRAM MODE" will be displayed.
2. Press a programmable feature button.
The LCD will show "M01: NOT STORED" when nothing is stored in the programmable feature button "01".
When automatic line access number 9 and the phone number 123-456-7890 has been stored, "M01: -123-456-7890" will be displayed.
3. Enter the line access number.
9: automatic line access number
81: line access number of CO 1
82: line access number of CO 2
83: line access number of CO 3
84: line access number of CO 4
85: line access number of CO 5
86: line access number of CO 6
4. Enter the phone number.
 - You may enter punctuations during a phone number.
The SAVE button is used as the "-" button.
 - To erase a wrong entry, press the CLEAR button.
The TRANSFER button is used as the CLEAR button.
5. Press the MEMORY button.
The MEMORY indicator will be lit.
6. Repeat steps 2 to 5, to program on other programmable feature buttons.
7. After programming all the numbers, return the MEMORY switch to the "SET" position.
The MEMORY indicator will go out.

Dialing

1. Lift the handset or press the SP-PHONE button.
2. Press a programmable feature button.
 - You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.

Conditions

- Use the "↔", or "↔" button for scrolling the display from side to side.
- The dialed phone number will be displayed on the LCD of the KX-T61630/KX-T30830.
- Continuous use of the programmable feature button is possible. (ex. press 01-02)
- The combinations of speed dialing, one-touch dialing and manual dialing is possible.
- The line access number (9 or 81 through 86) should be stored.
- Continuous use of one touch dialing is possible.

Example:

[01] [02]

In this case, programmable feature button "02" should not include the line access number.

- When dialing, the pause is automatically entered after line access number (9 or 81 through 86).
- Features that can be accessed by using the dialing button also can be programmed into memory.

Refer to "One Touch Access for System Features" page 4-23.

Examples:

Automatic line access number 9 and phone number 123-4567 into the programmable feature button "01".

Programming

Set the MEMORY switch to "PROGRAM" position.

[01] [9] [123-4567] [MEMORY]

Return the MEMORY switch to "SET" position.


Dialing

Lift the handset.

Dial [01]

- You may press the CO button to select the CO line directly after lifting the handset.

Calling Doorphone

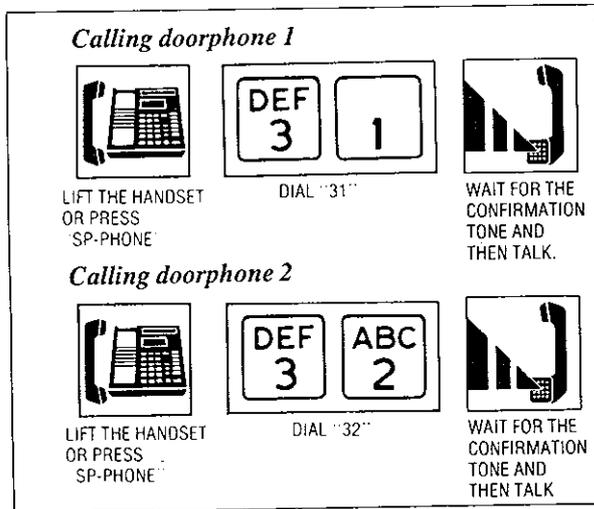

Description

Up to two doorphones (KX-T30865) can be connected to the KX-T61610.

Operation

Dialing to the doorphones

1. Lift the handset or press the SP-PHONE button.
2. Dial (31) for calling doorphone 1.
Dial (32) for calling doorphone 2.
"DOOR 1" or "DOOR 2" will be displayed.
3. Wait for the confirmation tone and then start talking.
4. Hang up or press the SP-PHONE button upon completion of the conversation.

Conditions

- The features, for instance, hold, transfer and so on, can not be activated by the doorphone.

Distinctive Dial Tone

Description

A distinctive dial tone will be heard from the handset if the extension user has previously activated a special feature.


Operation

None

Conditions


There are two types of dial tones.

Dial tone 1: ordinary dial tone

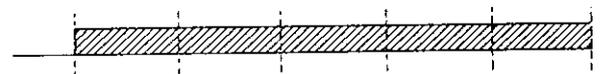




Dial tone 2: when any of the following features is activated:

Do not Disturb.
Dial Call Pickup Deny
Call Forwarding.
Data Line Security.
Background Music

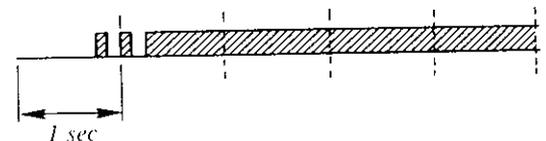

When a Line is Busy

Automatic Call Back Busy—(Camp-on)

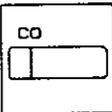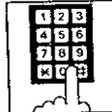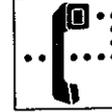Setting <i>For outside (trunk) calls</i>					When hearing a recall for camp-on <i>When outside calls</i>	
						
PRESS "CO"	YOU WILL HEAR A BUSY TONE	DIAL "6"	CONFIRMATION TONE OF 2 BEEPS WILL BE HEARD	HANG UP OR PRESS "SP-PHONE"	LIFT THE HANDSET OR PRESS "SP-PHONE"	YOU WILL HEAR THE CO DIAL TONE
Setting <i>For intercom calls</i>					When hearing a recall for camp-on <i>When intercom calls</i>	
						
DIAL THE EXTENSION NUMBER (11 through 26)	YOU WILL HEAR A BUSY TONE	DIAL "6"	CONFIRMATION TONE OF 2 BEEPS WILL BE HEARD	HANG UP OR PRESS "SP-PHONE"	LIFT THE HANDSET OR PRESS "SP-PHONE"	YOU WILL HEAR THE RING BACK TONE

Description

If the intercom extension or outside line you have dialed is busy, you will be automatically called back when the extension or the outside line becomes free using this function. This feature is also known as camp-on.

Operation

Setting

1. Lift the handset or press the SP-PHONE button.
2. For intercom calls, dial the extension number.
For outside calls, press the CO button.
3. Dial (6) after a busy tone is heard.
4. Wait for the confirmation tone.
"CAMP ON CO" or "CAMP ON EXT" will be displayed.
5. Hang up or press the SP-PHONE button.

When hearing a recall for camp-on;


Lift the handset or press the SP-PHONE button.

- When using an intercom call, you will hear the ring back tone.
- When using an outside call, you will hear the CO dial tone.


Conditions

- Lifting the handset (or pressing the SP-PHONE button) during the camp-on mode will cause the camp-on feature to be cancelled.
- An extension may be the recipient of more than one call back busy, the call backs will be executed in the order of their arrival.
- If a call back is not answered at the originating extension within 10 seconds, the call back will be cancelled.

Recall for camp-on

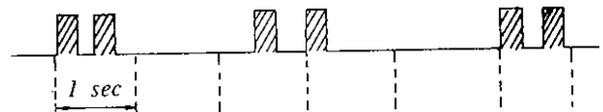

Busy Station Signaling

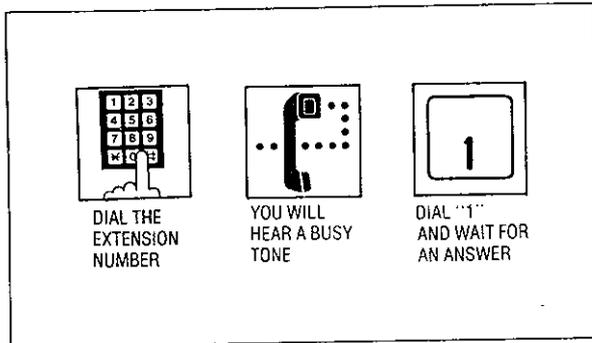

Description

If the extension you have dialed is busy, you can inform that extension that another intercom call is waiting by three beeps.

For use of this feature, the other extension is required to be set for this feature beforehand in the KX-T61610.


Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number.
3. When you will hear a busy tone, dial (1) and wait for an answer.

Conditions

- To answer your signal, see "Call Waiting" on page 4-16.
- If the other party is using data equipment, you may not be able to use this feature.
- If a busy tone is heard after dialing 1, it indicates that the other party has not been set with this feature.

Last Number Redial

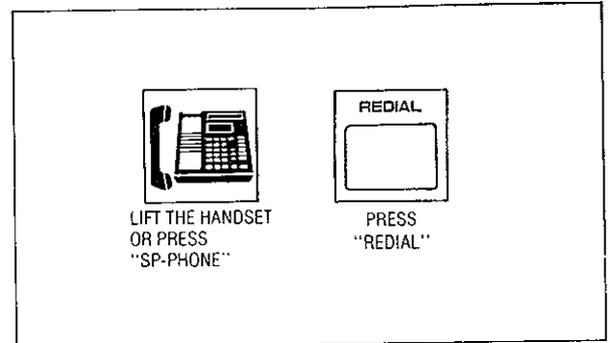

Description

The last phone number dialed on an outgoing call (CO line) can be redialed.

Operation


1. Lift the handset or press the SP-PHONE button.
 2. Press the REDIAL button.
- You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE or MONITOR button.

Conditions

- Up to 32 digits can be stored and redialed. Pushing the "*" "#" or "PAUSE" button counts as 1 digit.
- When calling or while in the conversation mode, pressing the REDIAL button will cause the redial to operate after about 3 seconds.

To Receive Calls

Answer

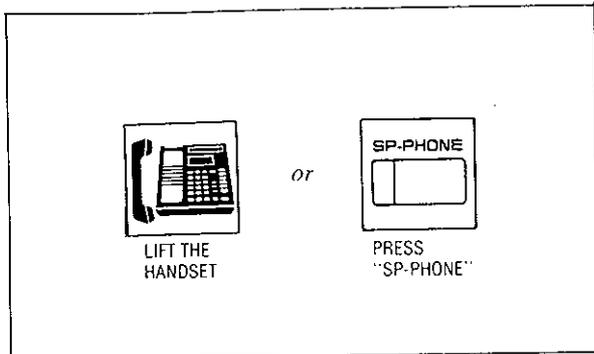

Operation


Lift the handset or press the SP-PHONE button.

- When the "Automatic Answering Selection" feature has been selected to the "manual" mode in the KX-T61610 and an outside call is received, you must lift the handset and then press the CO button whose indicator is flashing (red color) quickly.
- When receiving an intercom call, you may press the ICM button whose indicator is flashing quickly and talk. (Hands-free mode)
- When receiving an outside call, you may press the CO button whose indicator is flashing red quickly and talk. (Hands-free mode)
- If any incoming calls from the Central Office are received at the same time except preferred CO line, you must lift the handset and then press the CO button whose indicator is flashing (red color) quickly.

Conditions

- If a call reaches through the CO line to which the CO line number is not assigned, the ICM indicator will flash quickly. And the CO call can be received by pressing the ICM or the SP-PHONE button or lifting the handset.

Automatic Answer-Intercom

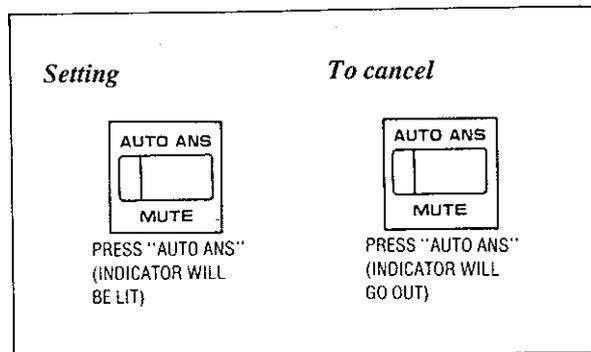

Description

Allows extension user to answer an intercom call in the automatic hands-free mode without any operation when receiving an intercom call.


Operation

1. For setting, press the AUTO ANS button. The AUTO ANS indicator will be lit.
2. For cancellation, press the AUTO ANS button again. The AUTO ANS indicator will go out.

Description

- This feature is required to be set beforehand while the unit is not in use.
- The KX-T61650 or KX-T30850 will not function for Automatic Answer.

Dial Call Pickup

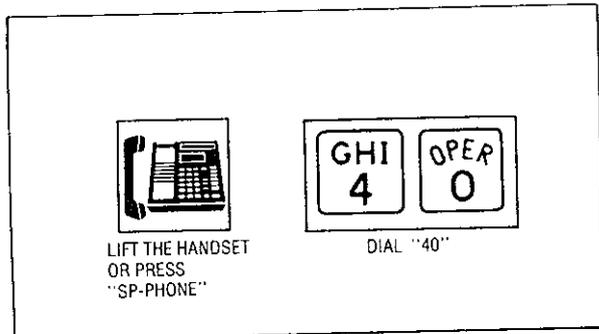

Description

An extension user can answer any ringing extension within their own pickup group.


Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (40) and wait for the confirmation tone.
3. Start talking.

Conditions

- Dial Call Pickup will work for incoming calls (intercom, outside and doorphone) but will not work for camp-on recall and hold recall.
- If a ringing extension is outside the pickup group or is in the dial call pickup denied mode, then a reorder tone will be heard through the use of this feature.
- Refer to "Dial Call Pickup Group Assignment" on page 3-29.
- Dial Call Pickup can use with the present call placed on hold.

Directed Call Pickup

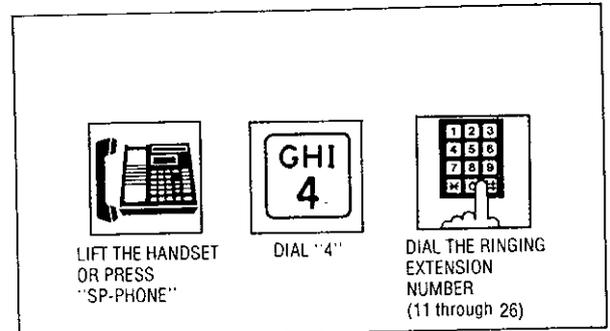

Description

An extension may answer an incoming call that is ringing at another extension regardless of the pickup group.

Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (4) and then the extension number (11 through 26) at which call is ringing.
3. Wait for confirmation tone and then start talking.

Conditions

- It is possible to answer calls outside your assigned pickup group.
- Directed Call Pickup can use with the present call placed on hold.

Example:

Mr Brown's extension number is 16.
He is now out of the office.
Mark receives the call instead of Mr. Brown with the telephone on his desk (extension 15).




Call Park Retrieve


To retrieve a parked call at any extension



LIFT THE
HANDSET
OR PRESS
"SP-PHONE"

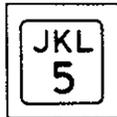

DIAL "5"

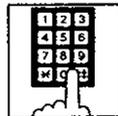

DIAL PARKED
EXTENSION
NUMBER

Description

Allows any extension user to retrieve a call (intercom or outside) on hold at any extension.

Operation

When an intercom or outside call is on hold.

1. Lift the handset or press the SP-PHONE button at any extension.
2. Dial (5) and the extension number of the phone on which the call is placed on hold. (Connection is now made with the party who was on hold.)
3. Wait for the confirmation tone and then start talking.

- Even when several outside calls are placed on hold simultaneously, you can retrieve the desired outside call from another extension as following.

1. Dial (58).
2. Dial the CO number (1 through 6).

Conditions

- Call park retrieving is possible regardless of the handset position of the phone which has placed the call on hold.
- If the extension that you want to retrieve the call park has several calls on hold, only the last call on hold will be retrieved.

Example:

Mark is talking with extension 15 on his desk, and then moves to another room placing the call on hold.

He resumes the conversation using another extension.



Press the HOLD button, hang up and then go to Mr. Jay's office.



Dial **5** and the extension number **15** at Mr. Jay's office.


Doorphone

To answer a doorphone



LIFT THE
HANDSET

or

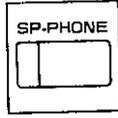


PRESS
"SP-PHONE"

Operation

Lift the handset or press the SP-PHONE button.

Conditions

- If calls from doorphones are not answered within 15 seconds, the calls will be cancelled.
- Ring from doorphone.

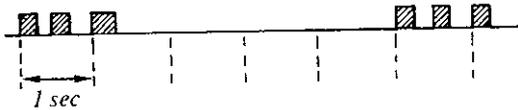

- Each extension has to be programmed for receiving from doorphones. See "Programmable Doorphone" on page 3-28.

Distinctive Ring Tone

Description

A different ringing pattern is used to distinguish intercom calls from incoming outside calls.

Operation

None

Conditions

Automatic ring back for the camp on feature will ring differently from the ringing on intercom, outside, and doorphone calls.

Incoming outside calls (including outside hold recall)



Intercom calls (including intercom hold recall)




Doorphone calls




While Having a Conversation

Call on Hold

To place a call on hold:

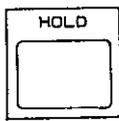

PRESS
"HOLD"

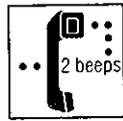


CONFIRMATION
TONE OF 2
BEEPS WILL
BE HEARD

To retrieve:

(Outside calls on hold)


- at the holding extension

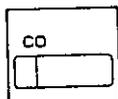

PRESS "CO"

(flashing
in green)

- from another extension

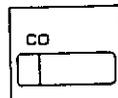


PRESS "CO"

(flashing
in red)

(Intercom call on hold)


- at the holding extension

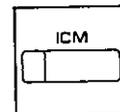


PRESS
"ICM"

(flashing)

- from another extension

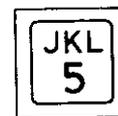

DIAL "5"

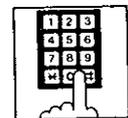

DIAL THE HOLDING
EXTENSION
NUMBER

Description

If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call hold may be used. Outside or intercom calls may be placed on hold.

Calls on hold can be released by other extensions.

Operation

1. You are in conversation with an outside party.

2. Press the HOLD button.

The indicator of CO or ICM button which is on hold will flash slowly (green color).

The confirmation tone of 2 beeps will be heard.

To Retrieve at the holding extension, press the CO or ICM button (flashing green). The indicator light will return to a steady green.

To Retrieve from another extension, press the CO button (flashing red).

or

press dial (5) and then the extension (11 through 26) or CO (81 through 86) number of the phone on which the call was placed on hold.

[5] [AB]

AB=11 through 26 (extension)

or

AB=81 through 86 (CO)

- The green flashing indicator at the held extension will turn to red.

- Refer to "Call Park Retrieve" on page 4-11.

Conditions

- An Intercom hold can be activated on one extension only.

- An Outside call hold can be activated on six CO's.

- If a call is on hold for more than 30 minutes, a hold time reminder will be sounded and the call will be terminated automatically.

A hold time reminder is sounded through the built-in speaker of the extension.

- Calls on hold will be recalled either after 30 seconds, 1 minute, 1 minute and 30 seconds or 2 minutes, once handset is replaced (or the SP-PHONE button is pressed).

If hold recall time is set to "DISABLE", it will not be recalled.

Refer to "Hold Recall Time Set" on page 3-42.

- The hold time reminder is activated, even if the hold recall time set is programmed to "DISABLE".


- When lifting the handset (or press the SP-PHONE button):

before recalling...A dial tone will be heard with the call on hold.

You may dial another phone number.

while recalling...Only the first call on hold will be released and entered into the conversation mode.

Call on Exclusive Hold

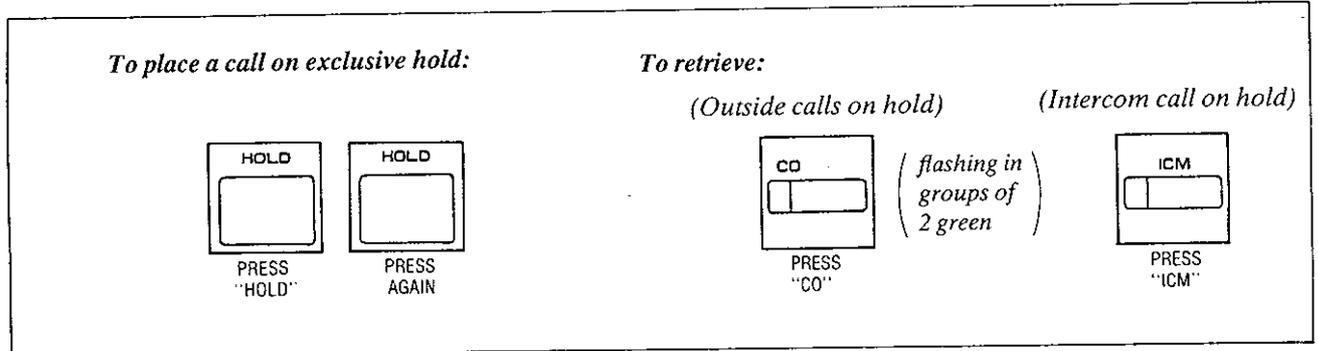

Description

An intercom or outside call placed on exclusive hold can not be released by any extension other than the phone which has placed the call on hold.


Operation

1. You are in conversation with an internal party.
2. Press the **HOLD** button.
The indicator of **CO** or **ICM** button which is on hold will flash slowly (green color).
A confirmation tone of 2 beeps will be heard.
3. Press the **HOLD** button, again.
The indicator will flash in groups of 2 (green color).
4. To retrieve, press the **ICM** button or the **CO** button whose indicator is flashing in groups of 2 (green color).
The indicator on the **ICM** or **CO** button will return to a steady green.

Conditions

- An Intercom hold can be activated on one extension only.
- An Outside call hold can be activated on six CO's.
- If a call is on hold for more than 30 minutes, a hold time reminder will be sounded, and the call will be terminated automatically.
A hold time reminder is sounded through the built-in speaker of the extension.
- Calls on hold will be recalled either after 30 seconds, 1 minute, 1 minute and 30 seconds or 2 minutes, once handset is replaced (or the **SP-PHONE** button is pressed). If hold recall time set is set to "DISABLE", will not be recalled. Refer to "Hold Recall Time Set" on page 3-42.
- The hold time reminder is activated, even if the hold recall time set is programmed to "DISABLE".
- When lifting the handset (or press the **SP-PHONE** button):
before recalling... A dial tone will be heard with the call on hold.
You may dial another phone number.
while recalling... Only the first call on hold will be released and entered into the conversation mode.

Conference

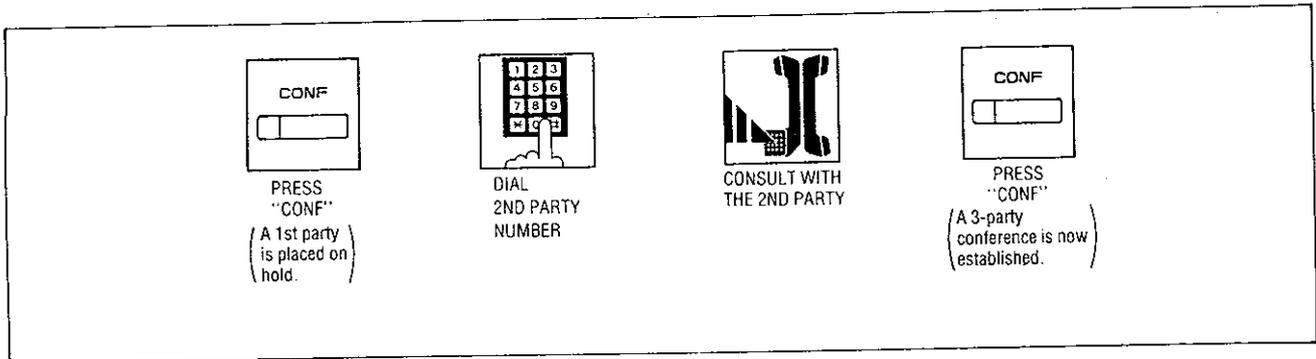

Description

Allows for up to a three party conference, (2-outside/1-inside) (1-outside/2-inside) or (3-inside).

Operation

1. Press the CONF button, to place the first party on hold.
A confirmation tone will be heard.
3 party conference is now established.
"CONF" will be displayed.
2. Dial the number of the second party.
If second party does not answer, press the CO button of the outside party concerned, or the ICM button to return to the first party.
3. Press the CONF button.

- You may press the HOLD button instead of the first CONF button.

To terminate conference

Replace the handset or press the SP-PHONE button.

- The other two parties will be directly connected together and can converse with each other. (Intercom calls and intercom to outside are OK, outside to outside is not possible.)

To terminate one caller and talk to the other caller.

- If both the conference parties are on the outside:
Press the CO button to talk to the desired party.

- If both the conference parties are on the extension:

Press the ICM button.

You will be connected to the first participant.

- If the conference parties are on the outside and extension:

To talk to the outside party, press the CO button.

To talk to the extension party, press the ICM button.

Conditions


- Pressing a CO button which is out of conference, allows you to exit from the conference and to access an outside party and the other parties to be connected together.
If the other parties are outside ones, they are disconnected.
If the other parties are on the outside and extension, they are connected.
- Pressing the ICM button for conference, allows you to exit from the conference and to access an intercom.

Call Waiting

To terminate the original call and talk to the new caller.



WILL HEAR A CALL WAITING TONE

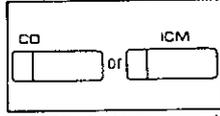

PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING QUICKLY (The original call is now terminated)



TALK


To place the original call on hold and talk to the new caller.

- If both original call and new call are intercom calls:

(The ICM indicator will change lighting into flashing quickly when new call reaches.)




WILL HEAR A CALL WAITING TONE

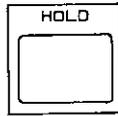

PRESS "HOLD" (The dial tone is not heard.)



CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS ON HOLD

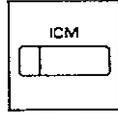

PRESS "ICM" TO TERMINATE THE 2ND CALL AND TO RETURN TO THE ORIGINAL CALL


- If original call is CO call, and new call is CO call or intercom call:

or


If original call is intercom call and new call is CO call:



WILL HEAR A CALL WAITING TONE

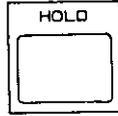


PRESS "HOLD" (The dial tone is heard.)

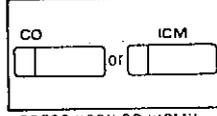

PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING QUICKLY



CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS ON HOLD

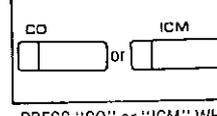

PRESS "CO" or "ICM" WHOSE INDICATOR IS FLASHING SLOWLY TO TERMINATE THE 2ND CALL AND TO RETURN TO THE ORIGINAL CALL

Description

Call waiting tone (Tone 1 or Tone 2) during a conversation indicates there is a new incoming CO line call or Intercom call.

This feature is required to be set beforehand in the KX-T61610.

For programming, see page 3-24 and 3-53.

Operation

To terminate the original call and talk to the new caller.

1. You will hear a call waiting tone.
2. Press the CO or ICM button whose indicator is flashing quickly. The original call is now terminated.
3. Start talking.

To place the original call on hold and talk to the new caller.

- If both original call and new call are intercom calls:

(The ICM indicator will change lighting into flashing quickly when new call reaches.)

1. You will hear a call waiting tone.
2. Press the HOLD button for placing a conversation on hold.

3. Consult with the new caller.

4. Press the ICM button to terminate the second call and to return to the original call.

- If original call is CO call, and new call is CO call or intercom call:

or

If original call is intercom call and new call is CO call:

1. You will hear a call waiting tone.
2. Press the HOLD button for placing a conversation on hold.
3. Press the CO or ICM button whose indicator is flashing quickly.
4. Consult with the new caller.
5. Press the CO or ICM button whose indicator is flashing slowly to terminate the second call and to return to the original call.


Conditions

- If a call waiting tone is heard and the CO or ICM indicator does not flash, this tone indicates a call waiting tone by special company service.


In this case, see "Call Waiting-Outside Line" on page 4-24.

Call Transfer

To transfer after other extension answers

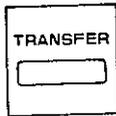

PRESS
"TRANSFER"

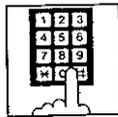

DIAL THE
EXTENSION
NUMBER



ANNOUNCE
AND WAIT
FOR AN
ANSWER




HANG UP OR
PRESS
"SP-PHONE"

To transfer without announcing the other extension



PRESS
"TRANSFER"

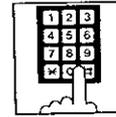

DIAL THE
EXTENSION
NUMBER



HANG UP OR
PRESS
"SP-PHONE"

To Retrieve the Call

If the other extension did not receive the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:

While the ring back is hearing.



LIFT THE HANDSET
TO RETURN TO THE
CALLING PARTY

Description

Outside or intercom calls may be transferred to any extension manually.

Operation

1. You are engaged in a call (outside or intercom).
2. Press the TRANSFER button.
3. Dial number of extension (11 through 26) to which the call is transferred.
4. For Unscreened call transfer, replace the handset or press the SP-PHONE button. For Screened call transfer, wait for new party to answer and announce call, then replace the handset or press the SP-PHONE button.

To retrieve the Call

If the other extension did not receive the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:

While the ring back is hearing, lift the handset to return to the calling party.


To change the party to whom a call is transferred before hanging up

Press the CO or ICM button whose indicator is flashing slowly to retrieve the call, then repeat the procedure of Call Transfer.

Conditions

- Upon recall to the transferring extension, if call is not answered in 30 minutes it will be terminated.
- When busy, you may access the other extension by dialing 1. Also you may return to the calling party by pressing the CO or ICM button whose indicator is flashing slowly (green color).
- The time that the call returns to you when the transferred call is not received can be changed 30 seconds into 15 seconds. For changing, see page 3-49.

Call Splitting—Between CO and Intercom

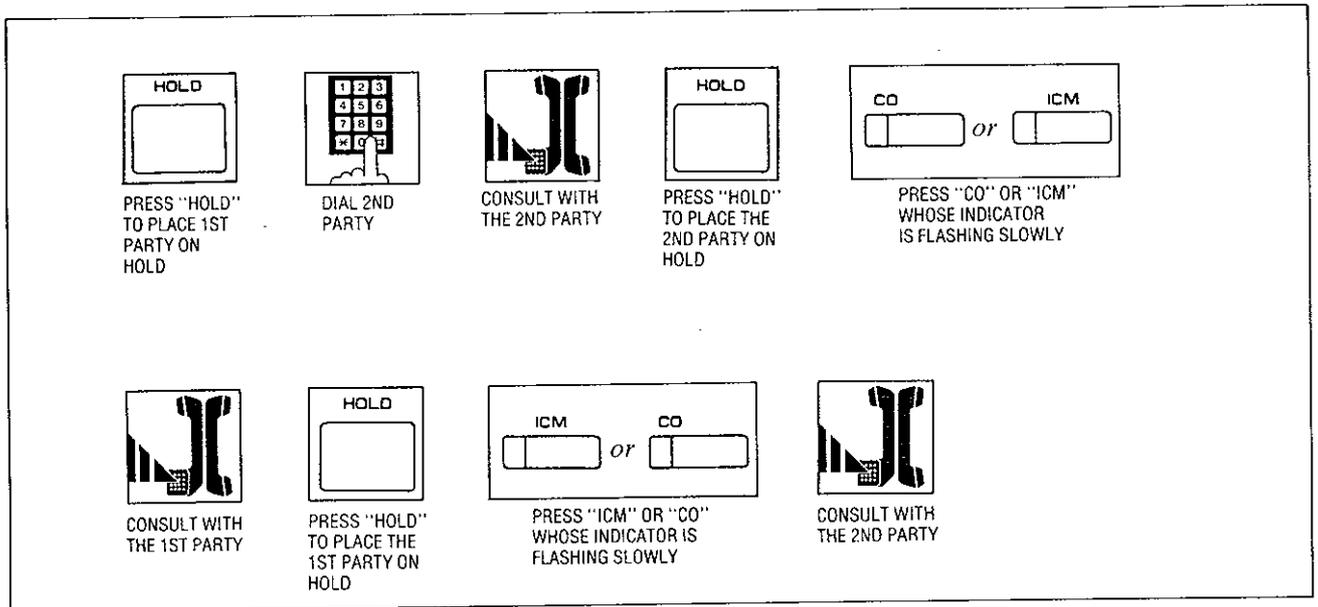

Description

Allows an extension user to alternate between a CO party and an Intercom party.

Operation

1. Press the HOLD button to place the first party on hold.
2. Dial the second party.
3. Consult with the second party.
4. Press the HOLD button to place the second party on hold.
5. Press the CO or ICM button whose indicator is flashing slowly.
6. Consult with the first party.
7. Press the HOLD button to place the first party on hold.

8. Press the ICM or CO button whose indicator is flashing slowly.


9. Consult with the second party.

10. Repeat step 4 to 9.

Conditions

- To release the call splitting mode, press the CO or ICM button without pressing the HOLD button. Conversation will be terminated and call on hold will be returned to conversation.

Call Splitting—Intercom

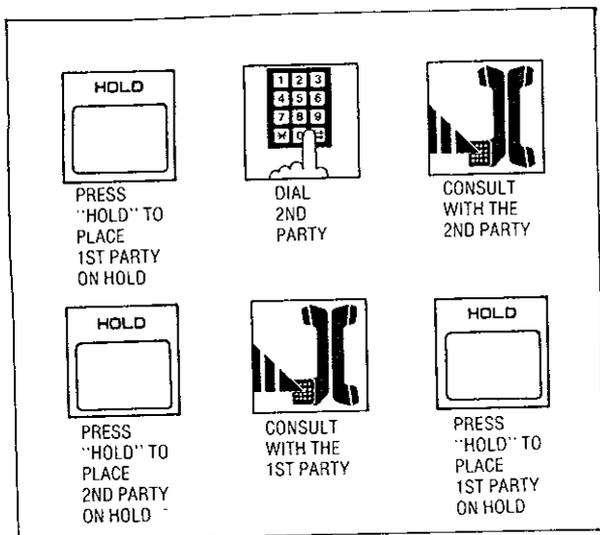

Description

Allows an extension user to alternate between two intercom parties.

Operation

1. Press the HOLD button to place the first party on hold.
2. Dial the second party.
3. Consult with the second party.
4. Press the HOLD button to place the second party on hold.
5. Consult with the first party.
6. Press the HOLD button to place the first party on hold.
7. Repeat step 3 to 6.

Conditions

- To release the call splitting mode, press the ICM button instead of the HOLD button. Conversation will be terminated and call on hold will be returned to conversation.


Paging

Paging All Extensions

To access



LIFT THE HANDSET OR PRESS "SP-PHONE"

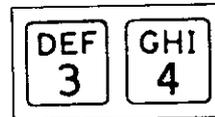

DIAL "34"



CONFIRMATION TONE OF 1 BEEP WILL BE HEARD



PAGE



WAIT FOR AN ANSWER AND TALK

- Page will be heard only from the built-in speaker of KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.



Description

Allows paging to all extensions.

Operation

To access paging;

1. Lift the handset or press the SP-PHONE button.
2. Dial (34) and wait for confirmation tone (one beep).
"PAGING (ALL)" will be displayed.
3. Start paging.
4. Wait for an answer and talk.

Conditions

- When an extension is in use, that extension cannot gain access to paging.
- When any extension is using the paging (all extensions, group or external), you cannot access to paging.


Paging Group

To access


For pickup group 1



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

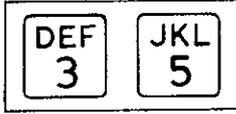

DIAL "35"

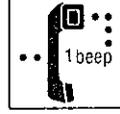

CONFIRMATION
TONE



PAGE



WAIT FOR AN
ANSWER
AND TALK

For pickup group 2:

At step 2 above, dial 36 instead of 35.

For pickup group 3:

At step 2 above, dial 37 instead of 35.

For pickup group 4:

At step 2 above, dial 38 instead of 35.

- Page will be heard only from the built-in speaker of KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.



Description

Allows paging to one of four groups.

Operation

To access paging;

1. Lift the handset or press the SP-PHONE button.
2. Dial (35) for paging the pickup group 1.
Dial (36) for paging the pickup group 2.
Dial (37) for paging the pickup group 3.
Dial (38) for paging the pickup group 4.
 - The confirmation tone (one beep) will be heard.
 - "PAGING (GRP 1)", "PAGING (GRP 2)", "PAGING (GRP 3)" or "PAGING (GRP 4)" will be displayed.
3. Start paging.
4. Wait for an answer and talk.

Conditions


- When an extension is in use, that extension cannot gain access to paging.
- Refer to "Dial Call Pickup Group Assignment" on page 3-29.

Paging—External


To access



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

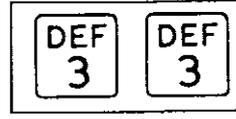


DIAL "33"

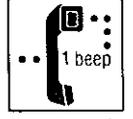

CONFIRMATION
TONE




PAGE

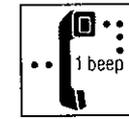

WAIT FOR CONFIRMATION
TONE AND TALK

- Page will be heard from external paging equipment.

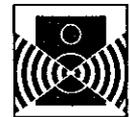

Description

Allows access to external paging equipment.

Operation

To access external paging;

1. Lift the handset or press the SP-PHONE button.
2. Dial (33) and wait for confirmation tone (on beep).
"EXTERNAL PAGING" will be displayed
3. Start paging.
When the page is answered, one beep will be heard. Start talking.

Conditions

- If external paging access tone is set to "DISABLE", confirmation tone will not be heard after accessing the external paging.
Refer to "Programmable External Paging Access Tone" on page 3-43.

Paging And Transfer


To transfer a call to the paged person




WHILE HAVING
A CONVERSATION



PRESS
"TRANSFER"

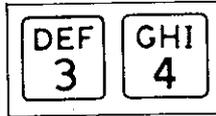

DIAL "34"

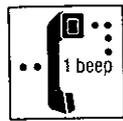

CONFIRMATION
TONE



PAGE



WAIT FOR AN
ANSWER



HANG UP OR
PRESS
"SP-PHONE"

- You may dial 35, 36, 37, 38 or 33 instead of 34.

Operation

To transfer a call to the paged person;


1. You are in conversation.
2. Press the TRANSFER button.
3. Dial (34) for paging all extensions.
Dial (35) for paging group 1.
Dial (36) for paging group 2.
Dial (37) for paging group 3.
Dial (38) for paging group 4.
Dial (33) for paging-external.
 - Wait for confirmation tone.
4. Start paging.
5. Wait for an answer.
6. Hang up or press the SP-PHONE button.

Paging—Answer


To answer



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

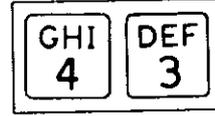

DIAL "43"

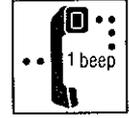

CONFIRMATION
TONE



TALK

Description

A page from the built-in speaker or external paging equipment can be answered from any extension.

Operation

To answer paging;


1. Lift the handset or press the SP-PHONE button.
2. Dial (43) and wait for confirmation tone (one beep).
3. Start talking.

Conditions

- If a call and CO number has been paged and transferred, you may answer by pressing the CO button whose number has been paged and indicator is flashing slowly (red color), instead of dialing 43.

Use of Other Features

Background Music

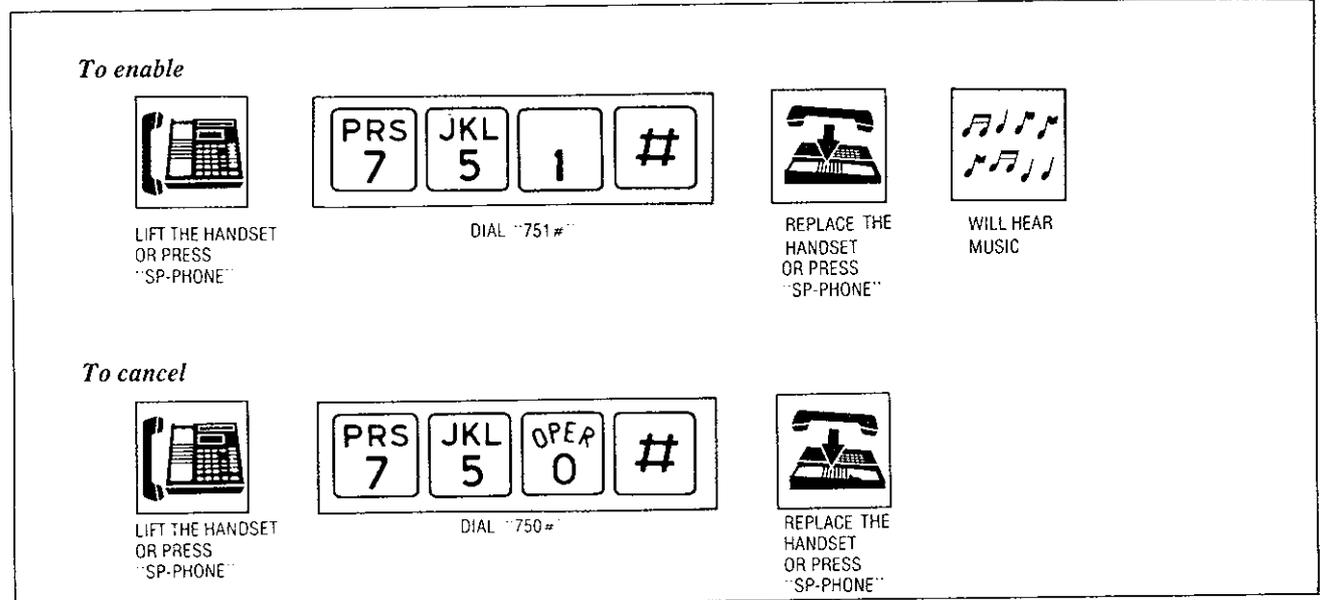

Description

Music from an external source (e.g. radio) can be listened to on the built-in speaker of the telephone.

Operation

To enable

1. Lift the handset or press the SP-PHONE button.
2. Dial (751#).
Wait for confirmation tone.
"BGM ON" will be displayed.
3. Replace handset or press the SP-PHONE button.
Music will be heard from the speaker.

To cancel

1. Lift the handset or press the SP-PHONE button.
2. Dial (750#).
Wait for confirmation tone.
"BGM OFF" will be displayed.
3. Place the handset back on the cradle or press the SP-PHONE button.
Music will be stopped.


Conditions

- When listening to the background music, the music will be interrupted by incoming calls, lifting handset or pressing the SP-PHONE button. After completion of the conversation replacing the handset back on the cradle or by pressing of the SP-PHONE button, will resume the background music.

Mute Operation

To enable

Be sure the SP-PHONE indicator is on.

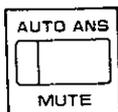

PRESS
"MUTE"

- The MUTE indicator will flash.

To cancel



PRESS
AGAIN

Description

Use when you do not want your voice to be heard by the other party.

Operation

To enable

Be sure the SP-PHONE indicator is on.
Press the MUTE button.

- The MUTE indicator will flash.

To cancel

Press the MUTE button again.

- The MUTE indicator will go out.

Conditions

- This feature can be activated in speakerphone mode only.


One Touch Access for System Features

To Program


Set the MEMORY switch of the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 to "PROGRAM".

Example:


Paging All Extensions (Dial 34).

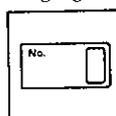

PRESS
"PROGRAMMABLE
FEATURE"

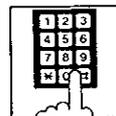

DIAL "34"

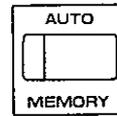


PRESS
"MEMORY"

After programming all the system features, return the MEMORY switch to "SET".

To Access



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

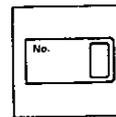

PRESS
"PROGRAMMABLE
FEATURE"

Description

Features that can be accessed by using the dialing button also can be programmed into memory.

(e.g. Paging All Extensions, Background Music.)

Operation

To Program

Set the MEMORY switch of the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 to "PROGRAM".

Example:

Paging All Extensions (Dial 34)

1. Press the PROGRAMMABLE FEATURE button.
2. Dial (34).
3. Press the MEMORY button.


- System feature described in the table on page 6-5 can be programmed into memory. After programming all the numbers, return the MEMORY switch to "SET".

To Access


1. Lift the handset or press the "SP-PHONE" button.
2. Press the PROGRAMMABLE FEATURE button.

External Feature Access

Call Waiting—Outside Line

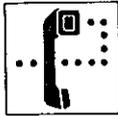


WILL HEAR
A CALL
WAITING
TONE

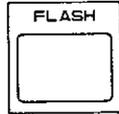

PRESS
"FLASH"



CONSULT WITH
THE NEW CALLER
WHILE THE
ORIGINAL CALL
IS ON HOLD

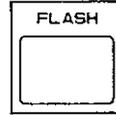

PRESS
"FLASH"



CONSULT WITH
THE ORIGINAL
CALLER WHILE
THE 2ND CALL
IS ON HOLD
(If the calling party on
hold hangs up, the
line is terminated.)

Description

Allows extension user to access features of the central office or host PBX. (example: call waiting feature can be supplied by central office.)

Operation

Call Waiting-Outside Line

1. While having a conversation, another party calls and a call waiting tone is heard.
2. Press the FLASH button.
 - The original call is placed on hold and the new call can be answered.
3. Press the FLASH button again.
 - The original caller can be spoken to again and the new call is placed on hold.
 - If the calling party on hold hangs up, the line is terminated.

Conditions

- The external feature (call waiting) can only be accessed when engaged on an outside call. The above-mentioned example shows you one of the procedures.
- "Flash" can be stored into memory in the same way as "Storage" on page 4-4.
- You may access some features of host PBX using the Flash button. If KX-T61610 is connected to host PBX and flash operation is required, follow the procedure of flash operation which is required in the host PBX.


Account Code

Forced Mode


■ Making a Call




LIFT THE HANDSET
OR PRESS
"SP-PHONE"

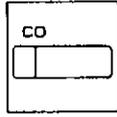

PRESS "CO"

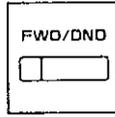


PRESS
"FWD/DND"
"F3"

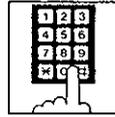

DIAL THE
ACCOUNT
CODE
(Account
code is
4 digits.)



WAIT FOR THE
C.O. DIAL TONE

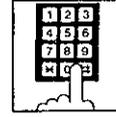


DIAL THE PHONE
NUMBER


■ Receiving a Call

If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.

- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.

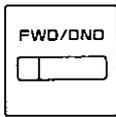

PRESS
"FWD/DND"
"F3"

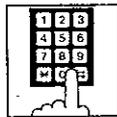


DIAL THE
ACCOUNT
CODE

Option Mode


■ Making or Receiving a Call

If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.

- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.

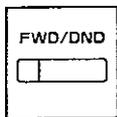

PRESS
"FWD/DND"
"F3"

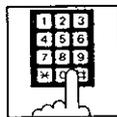

DIAL THE
ACCOUNT
CODE
(Account
code is
4 digits.)

Description

This feature gives each message of the SMDR an account code of the called or calling party.

(Station Message Detail Recording (SMDR) is cost saving feature that records all incoming and outgoing calls through the CO line.)

This feature has two modes "Forced" and "Option".

In the "Forced" mode, the account code must be entered every time the extension user dials.

In the "Option" mode, the account code may be entered when a record of the account code is needed.

When setting to the "Forced" mode, see page 3-30.

The programmable feature (F3 only) button of the KX-T61650 or KX-T30850 can also be used for "Account Code" if programming is done beforehand in the KX-T61610.

For programming, see page 3-50.

Operation

Forced Mode

■ Making a Call

1. Lift the handset or press the SP-PHONE button.
 2. Press the CO button.
The FWD/DND Indicator will flash.
 3. Press the FWD/DND (or F3) button.
"ENTER ACCNT CODE" will be displayed. The FWD/DND Indicator will light. Intermittent tone is heard.
 4. Dial the account code.
Account code must be 4 digits.
CO dial tone will be heard.
 5. Dial the phone number.
- You may dial 9 or 81 through 86 instead of pressing the CO button.

■ Receiving a call

If you want to record a calling party's account code in the SMDR follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,

The FWD/DND Indicator will flash.

1. Press the FWD/DND (or F3) button.
"ENTER ACCNT CODE" will be displayed. The FWD/DND Indicator will light.
2. Dial the account code.
Account code must be 4 digits.
 - Dialing the account code must be done before hanging up.

Option Mode

■ Making or Receiving a Call

If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,

1. Press the FWD/DND (or F3) button.
"ENTER ACCNT CODE" will be displayed. The FWD/DND Indicator will light.
2. Dial the account code.
Account code must be 4 digits.
 - Dialing the account code must be done before hanging up.

Conditions

- Account code must be required 4 numerical digits except for the **#** and **∗** buttons.
 - If you enter the wrong account code, press the FWD/DND button and enter the correct code.
- If account codes are programmed with telephone numbers for one touch dialing or system speed dialing, you need not to dial an account code when making a call. Program as follows.



Account code
(4 digits)

Telephone
number


DSS Console (KX-T61640)

DSS (Direct Station Select) Button

Inter Office Calling (Intercom)



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

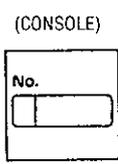

PRESS THE
DSS BUTTON



TALK



HANG UP OR
PRESS
"SP-PHONE"


Programmable Feature Button

Programming

- Be sure the handset is in the cradle and the SP-PHONE button is OFF.
- Set the MEMORY switch of a pair telephone (KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850) to "PROGRAM".

■ Storage

One Touch Dialing

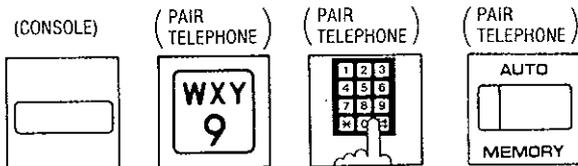

PRESS
"PROGRAMMABLE
FEATURE"

DIAL "9"

DIAL THE
PHONE
NUMBER


PRESS
"MEMORY"

- You may dial 81 through 86 instead of 9.
 - 9 Each extension can automatically select an idle CO line.
 - 81 through 86 .. Each extension can select a CO line designated.

9 or 81 through 86 must be dialed for storage.

One Touch Access for System Features

Example:
Paging All Extensions (Dial 34).

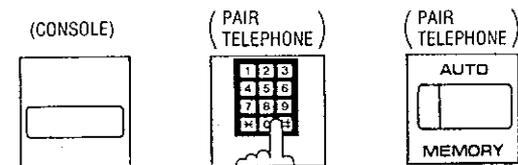

PRESS
"PROGRAMMABLE
FEATURE"

DIAL "34"

PRESS
"MEMORY"

■ To Correct an Error while Programming




PRESS
"CLEAR (TRANSFER)"
INSTEAD OF
"MEMORY"

- After pressing the CLEAR button, reprogram the correct number.
- The TRANSFER button is used as the CLEAR button.

■ To Change a Stored Number

Repeat "Storage" left side.

■ To Erase after Programming

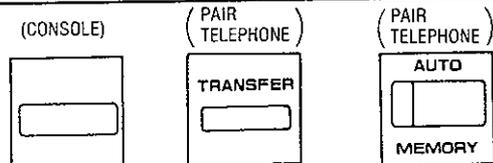

PRESS
"PROGRAMMABLE
FEATURE"

PRESS
"CLEAR
(TRANSFER)"

PRESS
"MEMORY"


- The TRANSFER button is used as the CLEAR button.

After programming all the numbers, return the MEMORY switch to "SET".

Dialing



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

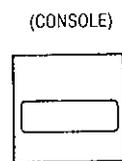

PRESS
"PROGRAMMABLE
FEATURE"

Description

- **DSS (Direct Station Select) Button:**
makes the dialing to the extensions very easy. You can reach the extension party by simply pushing the DSS Button.
- **Programmable Feature Button:**
lets you access various features of KX-T61610 and speed dialing using the CO line in addition to the numbers programmed into the KX-T61610's memory.

Operation

DSS (Direct Station Select) Button

Inter office Calling
(Intercom)

1. Lift the handset or press the SP-PHONE button of pair telephone.
2. Press the DSS button of Console.
3. Start talking.
4. Hang up or press the SP-PHONE button upon completion of the conversation.

Programmable Feature Button

Programming

- Be sure the handset is in the cradle and the SP-PHONE button is OFF.
- Set the MEMORY switch of a pair telephone (KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850) to "PROGRAM".

One Touch Dialing

1. Press a programmable feature button of Console.

2. Enter the line access number.
9: automatic line access number
81: line access number of CO1
⋮
86: line access number of CO6

3. Enter the phone number.
4. Press the MEMORY button.
5. Repeat steps 1 to 4, to program on other programmable feature button.

■ To Confirm a Stored Number

Repeat programming the same number into the same station.

When the MEMORY button is pressed, a beep will be heard.

- two beeps .. storage is correct
 - one beep .. storage is incorrect
- Repeat the procedure of programming.

One Touch Access for System Features

Example:

Paging All Extensions (Dial 34)

1. Press a programmable feature button of Console.
2. Dial (34).
3. Press the MEMORY button of pair telephone.

After programming all the numbers, return the MEMORY switch to "SET".


Dialing

1. Lift the handset or press the SP-PHONE button of pair telephone.
2. Press the programmable feature button of Console.

Conditions

Refer to "One Touch Dialing" page 4-4 and "One Touch Access for System Features" page 4-23.

Pulse/Tone Conversion

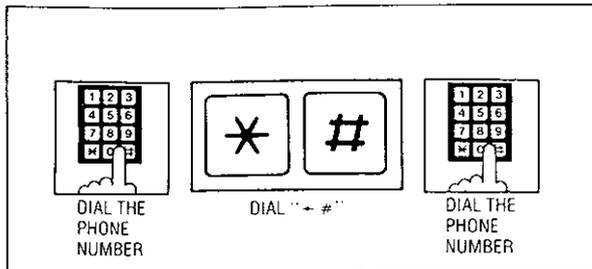

Description

When the dialing mode is required to change a pulse mode to a tone mode in one dialing sequence, this feature is used.
(e.g. computer-accessed long distance service)


Operation

1. Dial the phone number. (pulse mode)
2. Dial (* #).
3. Dial the phone number. (tone mode)

Conditions

- When you dial using this feature, you must use the line set to a pulse mode.
Phone number after dialing "* # " will change to tone mode.

Time Setting

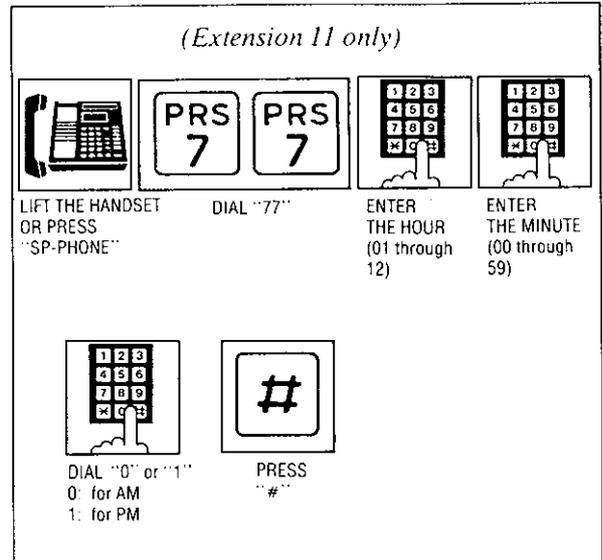

Description

When the present time is out of order, you can adjust by following procedure.


Operation

1. Lift the handset or press the SP-PHONE button on extension 11.
2. Dial (77).
3. Enter the hour with 2 digits.
(01 through 12)
4. Enter the minute with 2 digits.
(00 through 59)
5. Dial (0) for AM or (1) for PM.
6. Press the # button.
7. Wait for the confirmation tone.

Conditions

- Instantly after pressing the # button, new time counting will start.
- Time setting is done through extension 11 only.

Auto CO Hunting

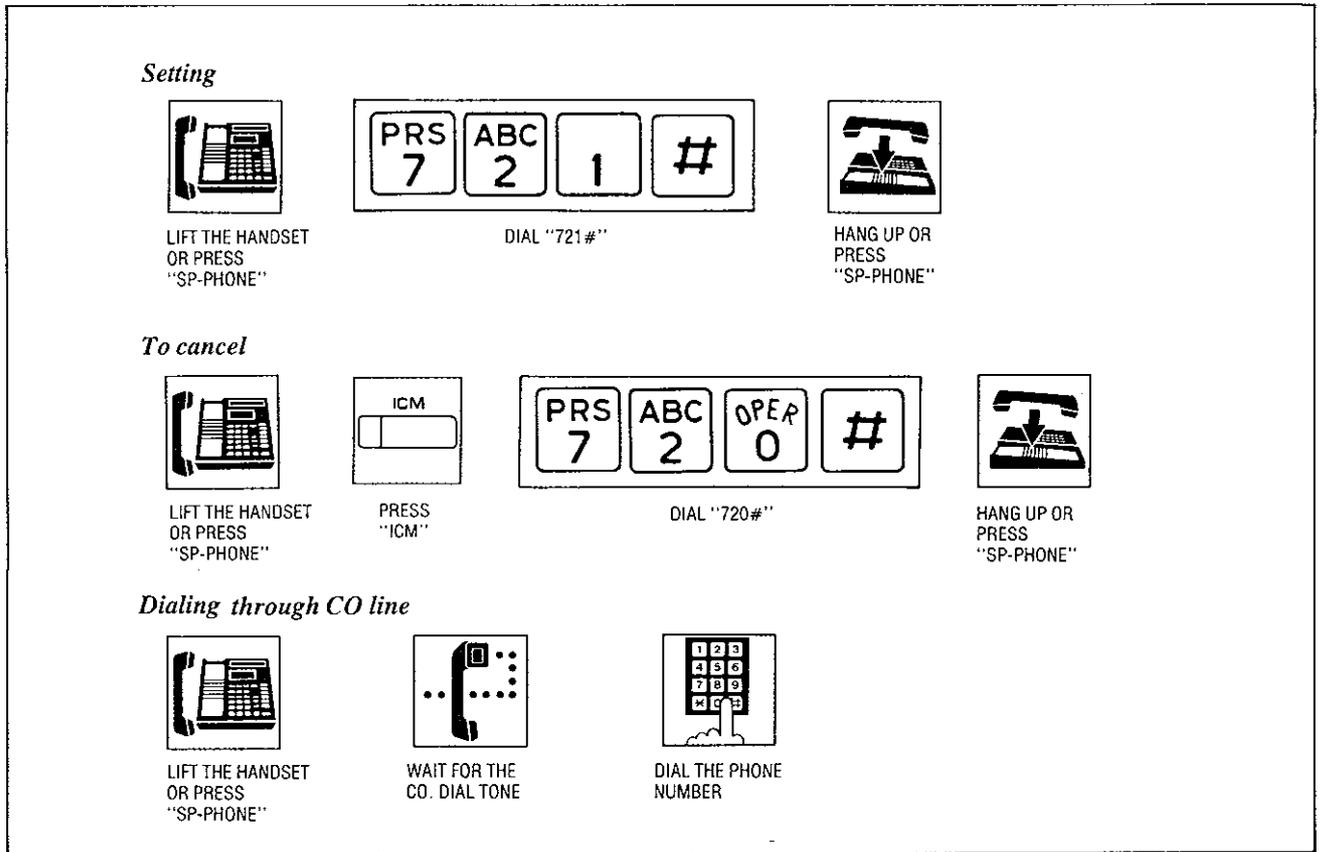

Description

Can access any CO line which is not in use directly by picking up the handset or the speakerphone on and tell an extension user which line is accessing by lighting the CO line indicator. The CO line to be accessed can be designated by programming. See page 3-52.

Operation

Setting

1. Lift the handset or press the SP-PHONE button.
2. Dial (721#).
"AUTO CO HUNT ON" will be displayed.
3. Hang up or press the SP-PHONE button.

To cancel

1. Lift the handset or press the SP-PHONE button.
2. Press the ICM button.
3. Dial (720#).
"AUTO CO HUNT OFF" will be displayed.
4. Hang up or press the SP-PHONE button.

Dialing through CO line

1. Lift the handset or press the SP-PHONE button. Dial tone from CO will be heard.
 2. Dial the phone number.
- When you access an extension in the Auto CO Hunting, press the ICM button after lifting the handset or pressing the SP-PHONE button.

Conditions


Standard telephone is not available.

Executive Override

To barge in:



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

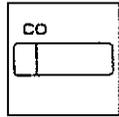

PRESS "CO"
WHOSE INDICATOR
IS RED

Description

Allows an extension user to barge in an engaged conversation for the following reasons: To establish Conference mode between two parties or to receive calls that another extension has answered.

Operation

■ To Establish the Conference Mode.

1. Lift the handset or press the SP-PHONE.
2. Press the CO button whose indicator is red. A 3 party conference is now established and you can barge in the conversation. "CONF" will be displayed.
3. Start talking.
4. Place the handset back on-hook or press the SP-PHONE Button. The other two parties will be directly connected together and can converse with each other.

■ Call Transfer using "Executive Override".

1. Push the CO button. You have barge in the conversation.
- The Call Transfer will be completed when the extension user who received the call hangs up.


Conditions

- How to use the Camp-on feature when "Executive Override" is enable at your extension. You can use the Camp-on feature without barging in the conversation.
 1. Dial the busy CO line number (81 through 86) whose indicator is red instead of pressing the CO button.
 2. Dial (6).
 3. Hang up or press the SP-PHONE button. You will be automatically called back when the CO line becomes free.
- Only one party can barge in a conversation.
- You can not barge in the extension which is in dialing.


Flexible CO button

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 to "PROGRAM".


Setting

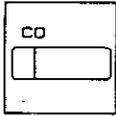

PRESS "CO" WHICH IS CHANGED INTO DIFFERENT CO NUMBER

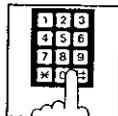

DIAL THE CO NUMBER WHICH IS SET NEWLY (1 through 6)

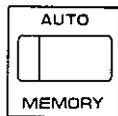

PRESS "MEMORY"

- After programming all CO buttons, return the MEMORY switch to "SET".

Description

Allows each CO button to change into CO number which is different from printed CO number.


Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
 - Set the MEMORY switch of the KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850 to "PROGRAM".
1. Press CO button which is changed into different CO number.
 2. Dial the CO number which is set newly (1 through 6).
 3. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to "SET".


Flexible DSS button

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830 to "PROGRAM".


Setting

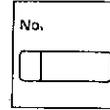

PRESS "DSS" WHICH IS CHANGED INTO DIFFERENT EXTENSION NUMBER

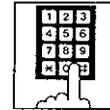

DIAL THE EXTENSION NUMBER WHICH IS SET NEWLY (11 through 26)

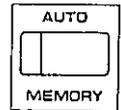

PRESS "MEMORY"

- After programming all DSS buttons, return the MEMORY switch to "SET".


Description

Allows each DSS button to change into extension number which is different from printed extension number.

Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
 - Set the MEMORY switch of the KX-T30830 to "PROGRAM".
1. Press DSS button which is changed into different.
 2. Dial the extension number which is set newly (11 through 26).
 3. Press the MEMORY button.
- After programming all DSS buttons, return the MEMORY switch to "SET".

Intercom Alerting Mode

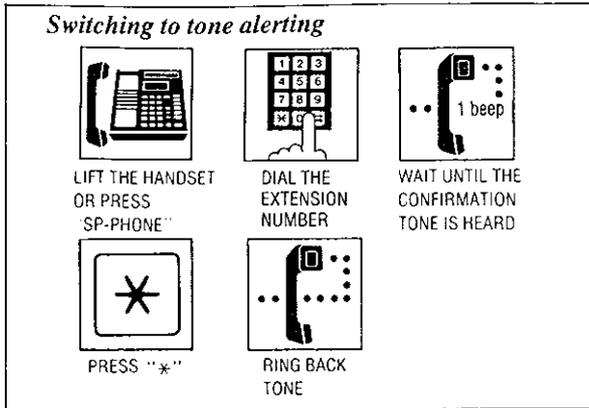

Description

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing).

This feature is required to be set beforehand in the KX-T61610. For programming, see page 3-27.

Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number.
3. Wait for a confirmation tone after inter office calling.
4. Press the * button.
The ring back tone will be heard.
Tone Ringer on the called party's extension will be ready to be activated.

Busy Lamp Field

Description

Lamp indicators corresponding to the status of the CO (Central Office) and the ICM (Intercom) buttons.

Explanation

•ICM indicator light

Light	Status
off	idle
on	<ul style="list-style-type: none"> •in use for intercom •in use for CO line to which the CO line number is not assigned.
slow flashing	on hold
flashing in groups of 2	on exclusive hold
quick flashing	<ul style="list-style-type: none"> •receiving an incoming intercom call •receiving an incoming outside call to which the CO line number is not assigned.

•CO indicator light

Light	Status
off	idle
on (green color)	in use
slow flashing (green color)	on hold
flashing in groups of 2 (green color)	on exclusive hold
on (red color)	in use at another extension
slow flashing (red color)	on hold at another extension
quick flashing (red color)	receiving an incoming outside call

Power Failure Transfer

Description

In the event of a power failure each CO will be connected to assigned extension.

- CO 1 is assigned to extension 11.
- CO 2 is assigned to extension 12.
- CO 3 is assigned to extension 13.
- CO 4 is assigned to extension 14.
- CO 5 is assigned to extension 15.
- CO 6 is assigned to extension 16.

Operation

- If extension 11 through 16 is connected with a KX-T61630 or KX-T30830, the Power failure switch on the KX-T61630 or KX-T30830 must be set to the "ON" position.

If dialing cannot be done, set the Dialing mode switch to other position (TONE or PULSE).

Conditions

- During power outage, all features are lost except for incoming and outgoing CO calls from extensions 11 through 16.
- If extension 11 through 16 is connected with a KX-T61620, KX-T61650, KX-T30820 or KX-T30850, disconnect the KX-T61620, KX-T61650, KX-T30820 or KX-T30850 and connect a KX-T61630, KX-T30830 or a standard telephone.
- There is no memory loss except for the camp-on, saved number redial and the last number redial during power failure, memory is protected by 21 day rechargeable battery. Rechargeable battery is good for 5 years.
- The Backup Adaptor (KX-A16B) is available as a Back up power supply to the KX-T61610 to operate all the features in the event of power failure. Refer to page 2-16.

Specification of the KX-A16B

- 3 "Sealed lead-acid Batteries" Backup duration is greater than 4 hours in average usage.
(one outside call and one intercom call simultaneously in continuous operation.)

Duration Time of Call Display

Description

The elapsed time (from dialing to replacing the handset) on originating an outside call will be displayed.

Operation

None

Conditions

- When intercom calls, the duration time of conversation is not displayed.
- "DURATION" will be displayed.
- Refer to "Duration Time Count Start Mode" on page 3-31.

Lockout

Description

If a handset remains off hook or is disconnected at the other end, a reorder tone will be heard. When "Calling Party Control (CPC) Signal" mode is set to "DISABLE", the reorder tone will not be heard. (see page 3-47.)

Operation

None

Conditions

- The party whose handset remains off-hook will hear a reorder tone to indicate that the call is disconnected.

Mixed Station Dialing

Description

Any telephone instrument, whether (KX-T61630, KX-T61620, KX-T61650, KX-T30820, KX-T30830, KX-T30850 for exclusive use), standard rotary phone (10 pps, 20 pps), or standard touch tone phone, may be used as an extension of the KX-T61610.

Operation

None

Station Programming

Dial Call Pickup Deny

Setting



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "731#"




HANG UP OR
PRESS
"SP-PHONE"

To cancel



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

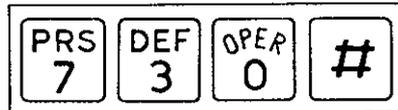

DIAL "730#"



HANG UP OR
PRESS
"SP-PHONE"

Description

Allows you to prohibit any other extension user from answering calls directed to you.

Conditions

While your extension is in the "Dial Call Pickup Deny" mode, you can place or receive outside or intercom calls.

Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (731#).
Wait for a confirmation tone. "C.PICKUP DENY" will be displayed.
3. Hang up or press the SP-PHONE button.

To cancel,


1. Lift the handset or press the SP-PHONE button.
2. Dial (730#).
Wait for a confirmation tone. "C.PICKUP ALLOW" will be displayed.
3. Hang up or press the SP-PHONE button.

Call Forwarding


Setting:



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

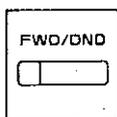

PRESS
FWD DND"
"F3"

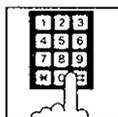

DIAL THE
EXTENSION
NUMBER




HANG UP OR
PRESS
"SP-PHONE"

To cancel:



LIFT THE HANDSET
OR PRESS
SP-PHONE"

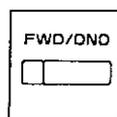

PRESS
FWD DND"
"F3"



DIAL "0"



HANG UP OR
PRESS
"SP-PHONE"

Description

Outside or intercom calls to your extension can be forwarded to another extension automatically, during your absence.

The programmable feature (F3 only) button of the KX-T61650 or KX-T30850 can also be used for "Call Forwarding" if programming is done beforehand in the KX-T61610.

For programming, see page 3-50.

Operation

To enable

1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.
3. Dial the number of the extension to which the calls are to be forwarded (11 through 26).
The indicator light of the FWD DND button will flash slowly.
A confirmation tone will be heard.
"FORWARDING EXT" will be displayed.
4. Replace the handset back on the cradle or press the SP-PHONE button.

To cancel

1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.

3. Dial (0).

The indicator light of the FWD/DND button will be off.

Confirmation tone will be heard.

"FWD/DND CANCEL" will be displayed.


4. Replace the handset back on the cradle or press the SP-PHONE button.

Conditions

- Do Not Disturb is cancelled when call forwarding is established.
- If a call is directed to the forwarding extension, the forwarded extension will ring but the originating extension will not ring.
- Recall for camp-on and Hold recall are not forwarded.


- The tone (busy tone or do not disturb tone etc.) the caller receives depends on the condition of the forwarded extension.

do not disturb tone

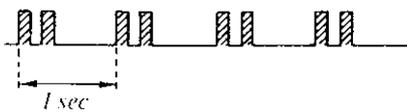


- When an intercom call to the forwarding extension is originated from the forwarded extension, the forwarded extension user will hear a reorder tone.



reorder tone: (two beeps a second)

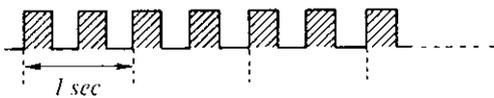

- An extension can not accommodate more than one forwarded extension. At each time of newly setting "Call Forwarding", a destination (forwarded extension code) will be renewed. Old entry will be cancelled.

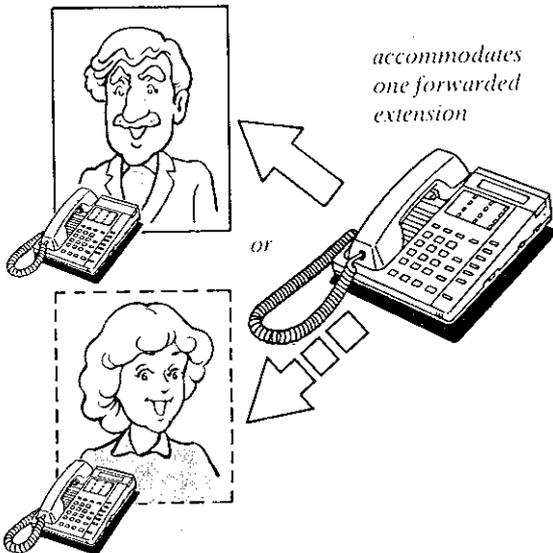

- If extension A is forwarding all calls to extension B and B is forwarding all calls to C, if any extension calls A, they will be connected to C. (If you attempt to forward a call to a forwarding extension, a reorder tone will be heard instead of a confirmation tone to prevent an endless loop.)

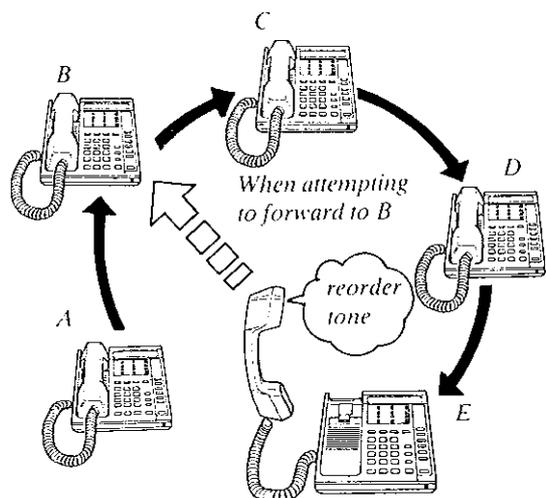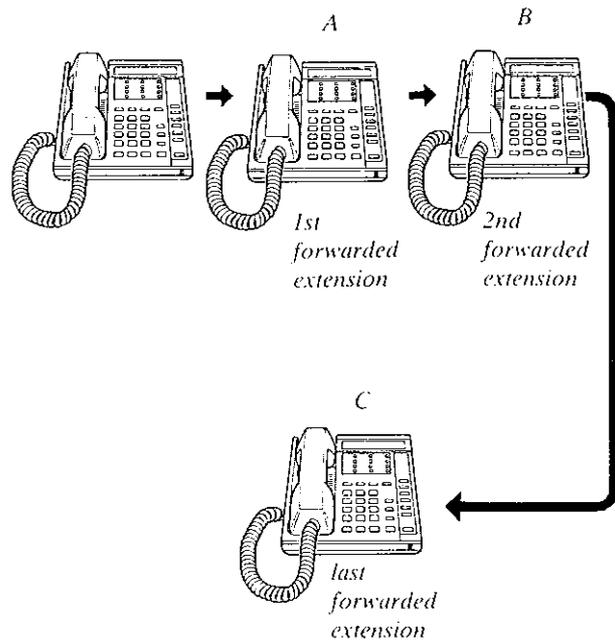


Reorder tone will be produced to prevent an endless loop.

Do not Disturb


Setting



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

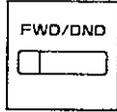

PRESS
"FWD/DND"
"F3"

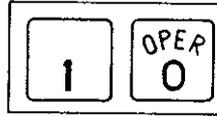

DIAL "10"




HANG UP OR
PRESS
"SP-PHONE"

To cancel



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

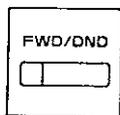

PRESS
"FWD/DND"
"F3"



DIAL "0"



HANG UP OR
PRESS
"SP-PHONE"

Description

Each extension can be individually programmed from receiving outside or intercom calls.

The programmable feature (F3 only) button of the KX-T61650 or KX-T30850 can also be used for "Do Not Disturb" if programming is done beforehand in the KX-T61610.

For programming, see page 3-50.

Conditions

- When "Do not Disturb" is entered, "Call Forwarding" will be cancelled, if entered.
- "Do not Disturb" does not prevent the extension from recalling for on-hold and camp-on.

Operation

1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.
3. For setting, dial (10).

The indicator of FWD/DND button will be lit.
"DO NOT DISTURB" will be displayed.
Wait for a confirmation tone.

For cancellation, dial (0).

The indicator of the FWD/DND button will go out.
"FWD/DND CANCEL" will be displayed.
4. Hang up or press the SP-PHONE button.

Data Line Security

Setting



PRS 7	GHI 4	1	#
----------	----------	---	---

LIFT THE HANDSET
OR PRESS
"SP-PHONE"

DIAL "741 #"



HANG UP OR
PRESS
"SP-PHONE"

To Cancel



PRS 7	GHI 4	0 PER	#
----------	----------	----------	---

LIFT THE HANDSET
OR PRESS
"SP-PHONE"

DIAL "740 #"



HANG UP OR
PRESS
"SP-PHONE"

Description

This feature provides security when transmitting data through an extension of KX-T61610.

Operation

1. Lift the handset or press the SP-PHONE button.
2. For setting, dial (741#) and wait for a confirmation tone.
"DATA MODE ON" will be displayed.
For cancellation, dial (740#) and wait for a confirmation tone.
"DATA MODE OFF" will be displayed.
3. Hang up or press the SP-PHONE button.


Conditions

- The parallel connection of the KX-T61630/ KX-T61620/ KX-T61650/ KX-T30830/ KX-T30820/ KX-T30850 and a data terminal equipment is impossible.

Saved Number Redial

Programming

When the called line is busy or while you are speaking on the CO Line;

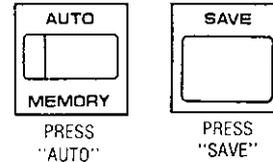

Dialing



Description

The desired phone number on an outgoing call to CO line can be stored and then redialed.

Programming

While you are speaking on the CO line or when the called party is busy.

1. Press the AUTO button.
2. Press the SAVE button.

- The phone number can not be stored even if you press the AUTO and SAVE buttons after you hang up.

Dialing

1. Lift the handset or press the SP-PHONE button.
2. Press the SAVE button.

- You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.

Conditions

- Up to 32 digits can be stored and redialed.
- The KX-T61650 or KX-T30850 will not function for Saved Number Redial.


Flexible Night Service

(Extension 11 only)

To enable night service: (To disable day service)



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

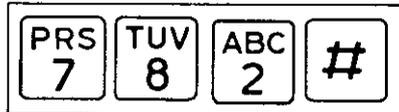

DIAL "782#"




HANG UP OR
PRESS
"SP-PHONE"

To disable night service: (To enable day service)



LIFT THE HANDSET
OR PRESS
"SP-PHONE"

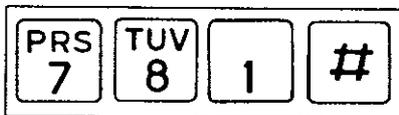

DIAL "781#"



HANG UP OR
PRESS
"SP-PHONE"

Description

Normal system operation is set for day time. Night service allows for the outward dialing and incoming ringing assignments to be rearranged via programming.

Night service is enabled or disabled through extension 11 using this feature, at any time.

Without activating this feature, the day/night services are automatically switched at pre-determined time (9:00 AM and 5:00 PM for default time) by the internal clock if the Switching Mode (Day/Night Service) is selected to the "AUTO" mode in the KX-T61610.


Refer to "Switching Mode (Day/Night Service)" page 3-12 and "Starting time (Day/Night Service)" page 3-13.

Operation

1. Lift the handset or press the SP-PHONE button of extension 11.
2. Dial (782#) and wait for a confirmation tone.
Night service is enabled.
"NIGHT MODE" will be displayed.
3. To return to day service, dial (781#) and wait for a confirmation tone.
"DAY MODE" will be displayed.
4. Hang up or press the SP-PHONE button.

When the unit is not in use, the present mode selected will be shown by pressing the # button.

Station Program Clear

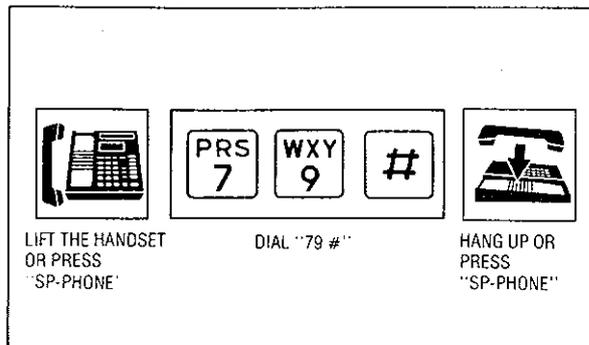

Description

Dialing (*79 #) will clear the following station programs on an extension.

Background Music
Call Forwarding
Data Line Security
Dial Call Pickup Deny
Do not Disturb
Auto CO Hunting

Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (*79#) and wait for a confirmation tone. "EXT DATA CLEAR" will be displayed.
3. Hang up or press the SP-PHONE button.

Conditions

- If Auto CO Hunting mode is set, you must push the ICM button and then dial *79 #.

OPERATION FOR A STANDARD TELEPHONE

(rotary and touch tone phones)


To Make Calls

Inter Office Calling (Intercom) (see page 4-1)


Description

Station to station dialing within the KX-T61610 system.

Operation

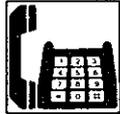

LIFT THE HANDSET

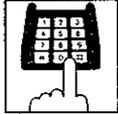

DIAL EXTENSION NUMBER (11 through 26)

Outward Dialing (see page 4-2)

Automatic Line Access

Description

Each extension can automatically select an idle CO (Central Office) line within the KX-T61610.

You can designate the idle CO line to be selected automatically by programming. See page 3-52.

Operation




LIFT THE HANDSET



DIAL "9"



WAIT FOR C. O. DIAL TONE

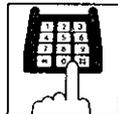

DIAL TELEPHONE NUMBER

Individual Line Access

Description

Any of the 6 CO lines may be selected by dialing the access code(s).


Operation



LIFT THE HANDSET




DIAL "8"

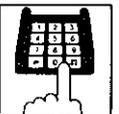

DIAL CO NUMBER (1 through 6)



WAIT FOR C. O. DIAL TONE

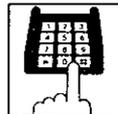

DIAL TELEPHONE NUMBER

Speed Dialing (see page 4-3)


Description

There are 100 memory locations of system speed dialing available.


Operation



LIFT THE HANDSET

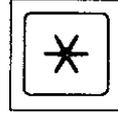

DIAL "*"*

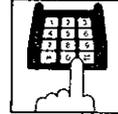

DIAL SPEED ACCESS CODE (00 through 99)

- There is no need to access a CO line.
- A rotary phone will not function for speed dialing.
- Continuous use of speed dialing is impossible.

Calling Doorphone (See page 4-6)

Description

Up to two doorphones (KX-T30865) can be connected to the KX-T61610.

Operation

Doorphone 1




LIFT THE HANDSET




DIAL "31"

Doorphone 2

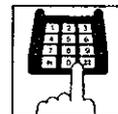

LIFT THE HANDSET

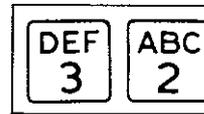

DIAL "32"

When a Line is Busy

Automatic Call Back Busy (Camp-on)

(see page 4-7)

Description

If the intercom extension or outside line you have dialed is busy, you will be automatically called back when the extension or the outside line becomes free using this function.


This feature is also known as camp-on.

Operation


For Outside Calls



DIAL "8"

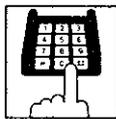


DIAL CO NUMBER
(1 through 6)

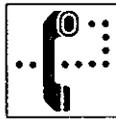

YOU WILL HEAR A BUSY TONE



DIAL "6"

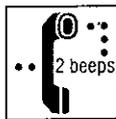


CONFIRMATION TONE




HANG UP

For Intercom Calls

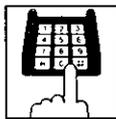


DIAL EXTENSION NUMBER
(11 through 26)

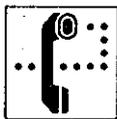

YOU WILL HEAR A BUSY TONE



DIAL "6"

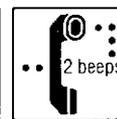


CONFIRMATION TONE



HANG UP

When hearing a ring back

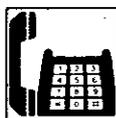

LIFT THE HANDSET

- When using an intercom call, you will hear the ring back tone.
- When using an outside call, you will hear the dial tone from the CO.


- A call back busy cannot be activated on an extension which has a call on hold.

Busy Station Signaling (see page 4-8)


Description

If the extension you have dialed is busy, you can inform that extension that another intercom call is waiting by three beeps. For use of this feature, the other extension is required to be set for this feature beforehand in the KX-T61610.


Operation

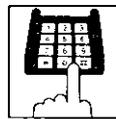

DIAL EXTENSION NUMBER
(11 through 26)

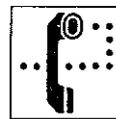

YOU WILL HEAR A BUSY TONE

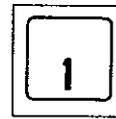

DIAL "1"

- To answer your signal, see "Call Waiting" on page 5-4.

Last Number Redial (see page 4-8)


Description

The last phone number dialed on an outgoing call (CO line) can be redialed.

Operation



LIFT THE HANDSET

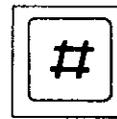

PRESS "#"

- You may dial "80" instead of pressing the "#" button.

To Receive Calls

Answer (see page 4-9)

Operation



LIFT THE
HANDSET

Dial Call Pickup (see page 4-10)

Description

An extension user can answer any ringing extension within their own pickup group.

Operation



LIFT THE HANDSET



DIAL "40"

Directed Call Pickup (see page 4-10)

Description

An extension may answer an incoming call that is ringing at another extension regardless of the pickup group.


Operation



LIFT THE HANDSET



DIAL "4"

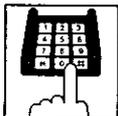

DIAL THE RINGING
EXTENSION NUMBER
(11 through 26)


Call Park Retrieve (see page 4-11)

Description


Allows extension user to retrieve a call (intercom or outside) on hold at any extension.

Operation

To Park a Call

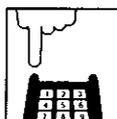

FLASH
HOOKSWITCH

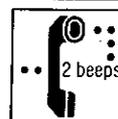

CONFIRMATION
TONE




REPLACE
HANDSET

- Do not depress hookswitch for more than one second, or party will be disconnected.


To Retrieve a Parked Call at Any Other Extension



LIFT THE
HANDSET

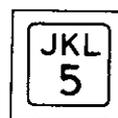

DIAL "5"

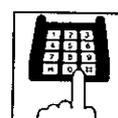


DIAL PARKED
EXTENSION
NUMBER
(11 through 26)



- Even when several outside calls are placed on hold simultaneously, you can retrieve the desired outside call from another extension as following.



LIFT THE
HANDSET

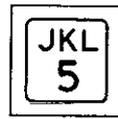

DIAL "58"

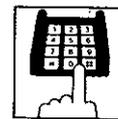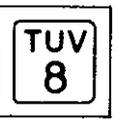

DIAL PARKED
CO NUMBER
(1 through 6)

Doorphone (see page 4-12)

Operation



LIFT THE
HANDSET

While Having a Conversation

Call on Hold (see page 4-15)

Description


If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call hold may be used. Intercom and outside calls may be placed on hold.

Operation

To Place a Call on Hold




FLASH
HOOKSWITCH

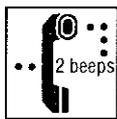

CONFIRMATION
TONE
2 beeps

- Do not depress hookswitch for more than one second, or the party will be disconnected.

To Cancel

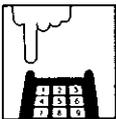


FLASH
HOOKSWITCH

Conference (see page 4-15)


Description

Allows for up to a three party conference, (2-outside/1-inside) (1-outside/2-inside) or (3-inside).

Operation

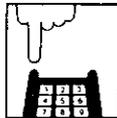


FLASH
HOOKSWITCH
PUTS 1ST PARTY
ON HOLD

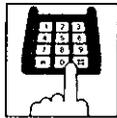


DIAL 2ND
PARTY



CONSULT WITH
2ND PARTY
1ST PARTY
ON HOLD

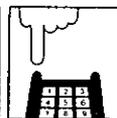


FLASH
HOOKSWITCH

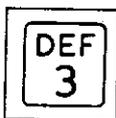

DIAL "3"
(3-party conference)
now established.

To Hold one Caller and Talk to the Other Caller

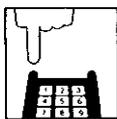

FLASH
HOOKSWITCH



2ND PARTY
ON HOLD
1ST PARTY IN
CONSULTATION


Call Waiting (see page 4-16)

Description


Calls waiting tone (Tone 1 or Tone 2) during a conversation indicates there is a new incoming CO line call or Intercom call.

This feature is required to be set beforehand in the KX-T61610. For programming, see page 3-24 and 3-53.

Operation

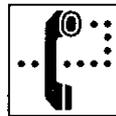

WILL HEAR
CALL WAITING
TONE

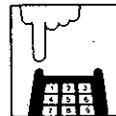

FLASH
HOOKSWITCH
PUTS 1ST PARTY
ON HOLD



HANG UP



LIFT THE
HANDSET



CONSULT NEW
CALLER
1ST PARTY
ON HOLD


- If you use the hold button of a standard telephone, the above-mentioned feature will not function.
- To terminate the original call and talk to the 2nd call, hang up and then lift the handset. (You need not flash the hookswitch.)

Call Splitting (see page 4-18)


Description

Allows station user to alternate between two parties, either intercom or outside.

Operation

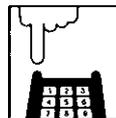


FLASH
HOOKSWITCH

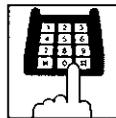

DIAL SECOND
PARTY




CONSULT 2ND PARTY
1ST PARTY ON HOLD

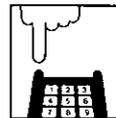

FLASH
HOOKSWITCH



2ND PARTY ON HOLD
1ST PARTY IN
CONSULTATION

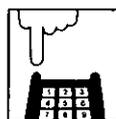

FLASH
HOOKSWITCH



1ST PARTY ON HOLD
2ND PARTY IN
CONSULTATION

While Having a Conversation

(cont.)


Call Transfer (see page 4-17)

Description


Outside or intercom calls may be transferred to any extension manually.

Operation

To Transfer After Other Extension Answers

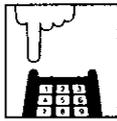

FLASH
HOOKSWITCH

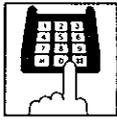

DIAL EXTENSION
NUMBER




ANNOUNCE
AND WAIT
FOR AN
ANSWER




HANG UP

To Transfer without Announcing the Other Extension

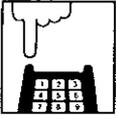

FLASH
HOOKSWITCH

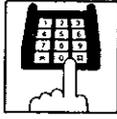

DIAL EXTENSION
NUMBER



HANG UP

To Retrieve the Call

If the other extension did not receive the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:




LIFT THE
HANDSET


- The time that the call returns to you when the transferred call is not received can be changed 30 seconds into 15 seconds.

For changing, see page 3-49.


To change the party to whom a call is transferred before hanging up

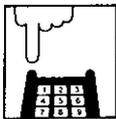

FLASH
HOOKSWITCH
TO RETRIEVE
THE CALL

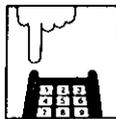

FLASH
HOOKSWITCH

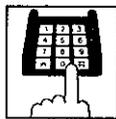

DIAL EXTENSION
NUMBER

Paging

Paging All Extensions (see page 4-19)

Description


Allows paging to all extensions.

Operation


To Access



LIFT THE HANDSET

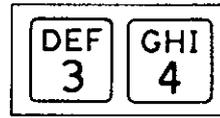

DIAL "34"

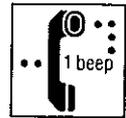

CONFIRMATION
TONE



PAGE



WAIT FOR AN
ANSWER
AND TALK

- Page will be heard only from the built-in speaker of KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850. It will not be heard from the built-in speaker of standard telephone.



Paging (cont.)

Paging Group (see page 4-20)

Description

Allows paging to one of four groups.


Operation

To Access


For Pickup Group 1



LIFT THE HANDSET

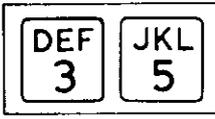

DIAL "35"

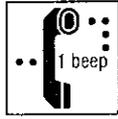

CONFIRMATION TONE



PAGE



WAIT FOR AN ANSWER AND TALK

- For Pickup Group 2: At step 2 above, dial 36 instead of 35.
- For Pickup Group 3: At step 2 above, dial 37 instead of 35.
- For Pickup Group 4: At step 2 above, dial 38 instead of 35.


- Page will be heard only from the built-in speaker of KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850. It will not be heard from the built-in speaker of standard telephone.




Paging And Transfer (see page 4-21)

Operation


To Transfer a Call to the Paged Person

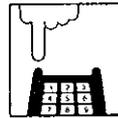

FLASH HOOKSWITCH TO PLACE A CALL ON HOLD

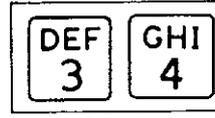

DIAL "34"

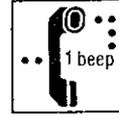

CONFIRMATION TONE



PAGE



WAIT FOR AN ANSWER AND HANG UP

- You may dial 35, 36, 37, 38 or 33 instead of 34.

Paging-Answer (see page 4-21)

Description

A page from the built-in speaker or external paging equipment can be answered from any extension.


Operation



LIFT THE HANDSET



DIAL "43"

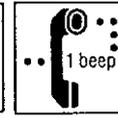

CONFIRMATION TONE



TALK


Paging-External (see page 4-20)

Description


Allows access to external paging equipment.

Operation

To Access

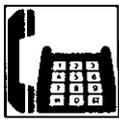

LIFT THE HANDSET

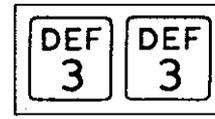


DIAL "33"



CONFIRMATION TONE



PAGE

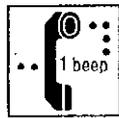

WAIT FOR CONFIRMATION TONE AND TALK OR HANG UP

- Page will be heard from external paging equipment.



Use of Other Features

External Feature Access (see page 4-24)


Description

Allows extension user to access features of the central office or host PBX. (example: call waiting feature can be supplied by central office.)


- The external feature (call waiting) can only be accessed when engaged on an outside call.
- The following example shows you one of the procedures.

Operation


Call Waiting—Outside Line

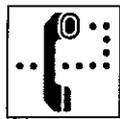

WILL HEAR A CALL WAITING TONE

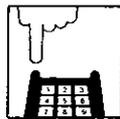


FLASH HOOKSWITCH

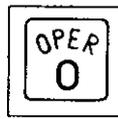

DIAL "0"



CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS ON HOLD

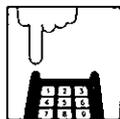

FLASH HOOKSWITCH



DIAL "0"



CONSULT WITH THE ORIGINAL CALLER WHILE THE 2ND CALL IS ON HOLD

(If the calling party on hold hangs up, the line is terminated.)

- Flashing the hookswitch and dialing 0 means flash operation.
- If KX-T61610 is connected to host PBX and flash operation is required, follow the procedure of flash operation which is required for the host PBX.

Intercom Alerting Mode (see page 4-33)


Description

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing).


- This feature required to be set beforehand in the KX-T61610. For programming, see page 3-27.
- A rotary phone will not function.

Operation


Switching to Tone Alerting

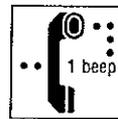

WAIT UNTIL A CONFIRMATION TONE IS HEARD

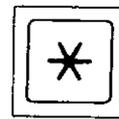

PRESS "*"

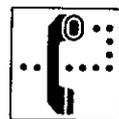

RING BACK TONE

- You should press "*" button within 10 seconds after the dialing.

Use of Other Features (cont.)

Account Code (see page 4-25)

Description

This feature gives each message of the SMDR an account code of the called or calling party. (Station Message Detail Recording (SMDR) is cost saving feature that records all incoming and outgoing calls through the CO line.)

This feature has two modes "Forced" and "Option". In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, the account code may be entered when a record of the account code is needed. When setting to the "Forced" mode, see page 3-30.

Operation

Forced Mode

■ Making a Call

LIFT THE HANDSET

DIAL "9"

DIAL "*"

AGAIN (Intermittent tone is heard.)

DIAL THE ACCOUNT CODE (Account code is 4 digits.)

WAIT FOR C.O. DIAL TONE

DIAL TELEPHONE NUMBER

■ Receiving a Call

If you want to record a calling party's account code in a SMDR, follow the below-mentioned procedure.

Within 30 seconds after calling party hangs up,

FLASH HOOKSWITCH

DIAL "*"

AGAIN

DIAL THE ACCOUNT CODE

- Dialing the account code must be done before hanging up.

Option Mode

■ Making or Receiving a Call

If you want to record a calling or called party's account code in a SMDR, follow the below-mentioned procedure.

Within 30 seconds after calling party hangs up,

FLASH HOOKSWITCH

DIAL "*"

AGAIN

DIAL THE ACCOUNT CODE (Account code is 4 digits.)

- Dialing the account code must be done before hanging up.

- You may dial 49 instead of pressing the button.
- You may dial 81 through 86 instead of dialing 9.
- Account code must be 4 numerical digits except for the and buttons.
- If you enter a wrong account code, press the button and enter a correct code.

Station Programming

■ You may dial "0" instead of pressing the "#" button.


Call Forwarding *(see page 4-36)*

Description


All outside or intercom calls to your extension can be forwarded to another extension automatically during your absence.

Operation

Setting

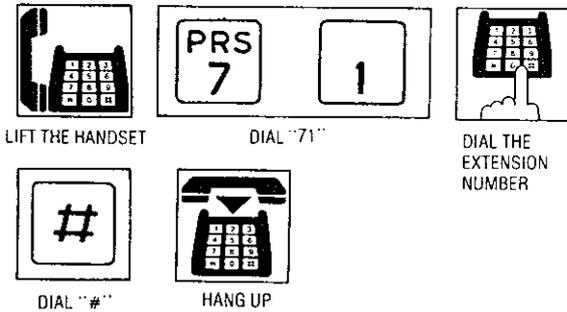

To Cancel

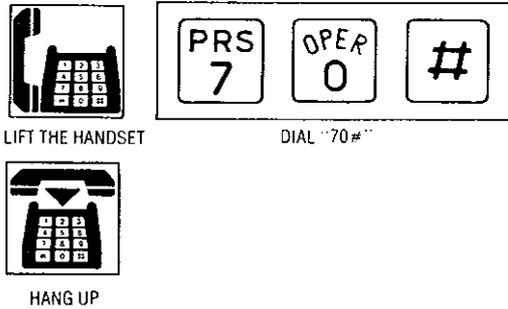


Dial Call Pickup Deny *(see page 4-35)*

Description


Allows you to prohibit any other extension user from answering calls directed to you.

Operation

Setting

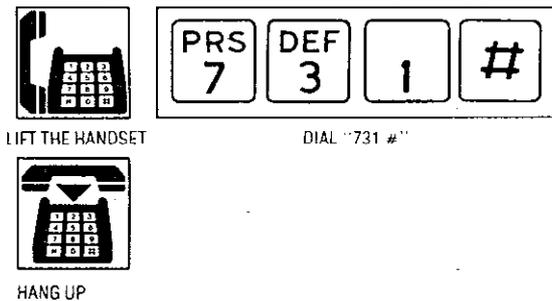

To Cancel

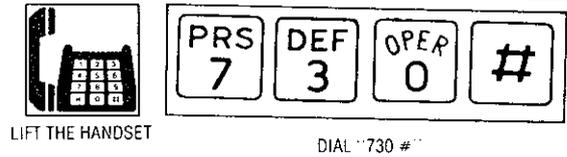


Do not Disturb *(see page 4-38)*

Description


Each extension can be individually programmed from receiving outside or intercom calls.

Operation

Setting

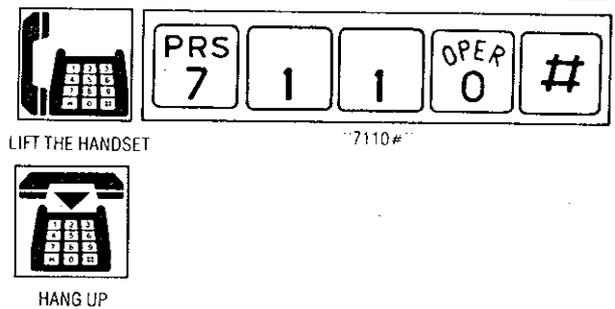

To Cancel

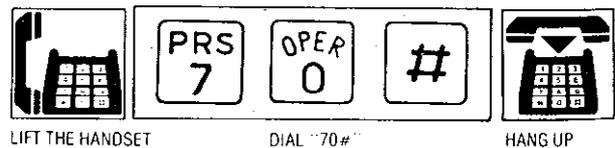

Station Programming (cont.)

Data Line Security (see page 4-39)

Description


This feature provides security when transmitting data through an extension of the KX-T61610. Call waiting or hold time reminder tone from KX-T61610 are prohibited in this mode.

Operation

Setting



LIFT THE HANDSET

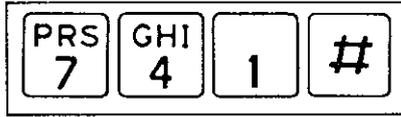

DIAL "741#"


To cancel



LIFT THE HANDSET



DIAL "740#"

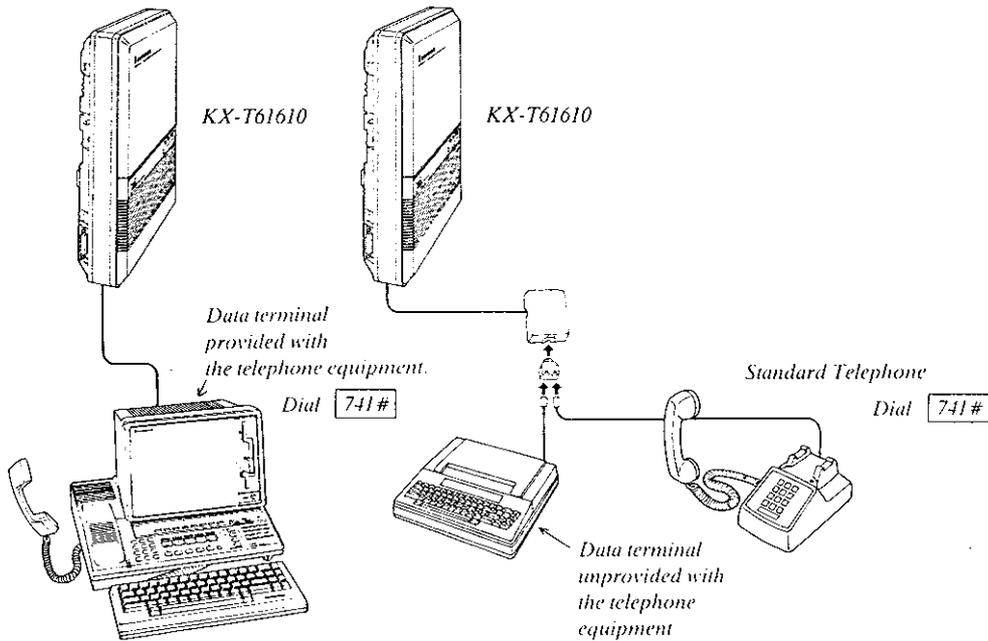

- This mode cannot prevent external call waiting tone from coming into KX-T61610 system. We recommend that this mode is established on a line which has no special telephone company services.

Station Program Clear (see page 4-41)

Description


Dialing (79 #) will clear the following station programs on an extension.

- Call Forwarding
- Data Line Security
- Dial Call Pickup Deny
- Do not Disturb
- Pickup Dial (enable mode)

Operation



LIFT THE HANDSET

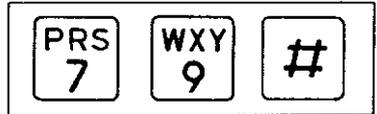

DIAL "79 #"



HANG UP

Pickup Dial

Description

Picking up the handset automatically dials a programmed phone number.

Operation


To Program




LIFT THE
HANDSET



DIAL "762"

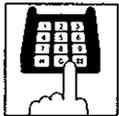

DIAL EXTENSION
NUMBER

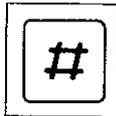

DIAL (#)


- You may dial CO number (9 or 81 through 86) instead of extension number.

To Enable or Disable

To enable pickup dial



LIFT THE
HANDSET

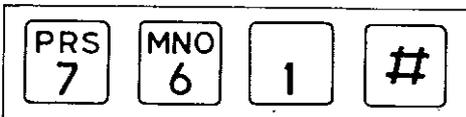


DIAL "761#"

To disable pickup dial



LIFT THE
HANDSET

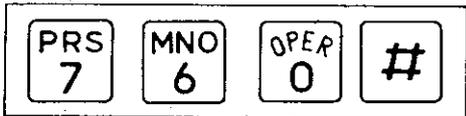

DIAL "760#"

To Dial



PICKUP HANDSET
FOR 4-SECONDS

If the "Pickup Dial" feature does not work, hang up for over 1 second, and lift the handset again.

- A rotary phone is not available for Pickup Dial.
- Dialing (speed dialing and manual dialing) is possible within 3 seconds.
- When you program an outside dialing, enter line access number, [*][*], account code, and then the desired number.
- The pickup dial will not be activated by picking up handset during a hold or when receiving a call.
- You can not dial "0" instead of pressing the "#" button.


TROUBLESHOOTING

During Installation


<i>PROBLEM</i>	<i>PROBABLE CAUSE</i>	<i>POSSIBLE SOLUTION</i>
<i>Extension does not operate.</i>	<p><i>Bad connection between the system and extension</i></p> <p><i>The system program switch of the KX-T61610 is set to PROGRAM.</i></p> <p><i>A telephone with an A-A1 relay is connected.</i></p> <p><i>Bad extension</i></p>	<p><i>Take that extension and plug it into the same extension port using a short telephone cord. If telephone does not work, connection between the system and the extension must be repaired.</i></p> <p><i>Set to SET except when programming.</i></p> <p><i>Use a 2 wires cord. Set the A-A1 relay switch of the telephone to OUT or OFF.</i></p> <p><i>Take that extension and plug it into another extension port that is working. If the telephone does not work, replace the phone.</i></p>
<i>Improper reset operation</i>		<i>Press the Reset Button.</i>
<i>Call is disconnected during connection operation.</i>	<i>Instantaneous drop of DC voltage from Central Office (or host PBX) when in operation (connection between C.O. and system.)</i>	<p><i>Program for a no CPC signal (CPC means Calling Party Control)</i></p> <p><i>Set the calling party control signal to "DISABLE".</i></p> <p><i>Refer to page 3-47.</i></p>
<i>Noise in external paging</i>	<i>Induced noise on the wire between the System and the Amplifier.</i>	<p><i>Use a shielded cable as the connection wire between the System and Amplifier.</i></p> <p><i>A short shielded cable is recommended.</i></p>
<i>Volume distortion from external music source</i>	<i>Excessive input level from external music source</i>	<i>Decrease the Output level of the external music source by using the Volume Control on the music source.</i>
<i>Speed dialing or One Touch Dialing does not function.</i>	<i>Bad programming</i>	<i>Enter the line access code (9 or 81 through 86) into programming.</i>
<i>A dial tone (short tone continuously) was heard and telephone line hung up at once when accessing an outside during the speakerphone mode.</i>	<i>The host PBX may have caused the line to hang up when the KX-T61610 was connected to it.</i>	<i>Use the handset instead of the speakerphone.</i>

During Connection


1. Connection between the Central Office and the KX-T61610

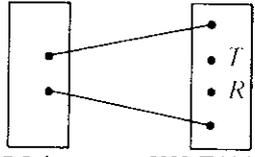PROBLEM	CAUSE	SOLUTION
Cannot make or receive calls on the CO lines.	CO lines are connected to the H/L. <div style="text-align: center; margin-top: 10px;">  <p style="margin: 0;">CO line KX-T61610</p> </div>	Reconnect the CO lines to the T/R of the telephone jack using 2-conductor wiring.


2. Connection between the KX-T61610 and the extensions (KX-T61630, KX-T61620, KX-T30820 and KX-T30830)

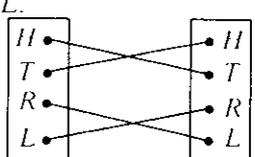PROBLEM	CAUSE	SOLUTION
Cannot make calls when the SP-Phone button on the KX-T61620 (and KX-T61630, KX-T30820, KX-T30830) is pressed. The SP-Phone indicator does not light.	The T/R is connected to the H/L. <div style="text-align: center; margin-top: 10px;">  <p style="margin: 0;">KX-T61610 extension</p> </div>	Use the correct cord (inner 2 wires are for T/R and the outer 2 wires are for H/L).

3. Connection between the KX-T61610 and a standard telephone (with no polarity)

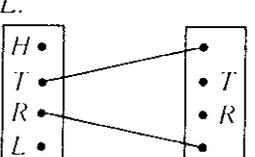PROBLEM	CAUSE	SOLUTION
When the handset is lifted, nothing is heard.	The T/R is connected to the H/L. <div style="text-align: center; margin-top: 10px;">  <p style="margin: 0;">KX-T61610 extension</p> </div>	Use the correct cord (inner 2 wires are for T/R). If a telephone equipped with an A-A1 relay is connected to the KX-T61610, set the A-A1 relay switch of the telephone to OFF.

4. Connection between the KX-T61610 and a standard telephone that is polarity sensitive

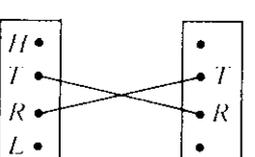PROBLEM	CAUSE	SOLUTION
Dial tone cannot be heard when the handset is lifted.	The "T" is connected to the "R". <div style="text-align: center; margin-top: 10px;">  <p style="margin: 0;">KX-T61610 extension</p> </div>	Reverse the connections of the T/R.

During Operation

PROBLEM	PROBABLE CAUSE	POSSIBLE SOLUTION
Extension does not operate.	The Power failure switch of the KX-T61630 or KX-T30830 is set to ON.	Set the Power failure switch to OFF.
When using the speakerphone mode, nothing is heard.	The HANDSET/ HEADSET selector of the KX-T61630 or KX-T30830 is set to the "HEADSET" position.	When the headset is not used, set the HANDSET/ HEADSET selector to the "HANDSET" position.
The unit does not ring.	Ringer Volume Selector is set to "OFF".	Set to "HIGH" or "LOW".
During a power interruption, extensions 11 through 26 do not operate.	<ul style="list-style-type: none"> • The Power failure switch of the KX-T61630 or KX-T30830 is set to OFF. • The dialing mode (tone or pulse) is improper. • KX-T61620, KX-T61650, KX-T30820 or KX-T30850 is connected. 	<ul style="list-style-type: none"> • Set the Power failure switch to ON. • Set the Tone/Pulse switch to the other position. • Disconnect KX-T61620, KX-T61650, KX-T30820 or KX-T30850 and connect the KX-T61630, KX-T30830 or a standard telephone.

Reset Button

If the system is not operating properly, use the Reset Button.

- Before using the Reset Button, try the system feature again which does not work several times to confirm there definitely is a problem.
- Pressing the Reset button will cause the followings.
 1. Camp-on to be cleared.
 2. Last number redial to be cleared.
 3. Saved number redial to be cleared.
 4. Calls on hold are terminated.
 5. Calls on exclusive hold are terminated.
 6. Calls in progress are terminated.
 Data that is stored in memory other than above mentioned will not be cleared by use of the Reset Button.

Note

If the system does not operate properly, push the Reset Button.


If there still is no difference, switch the power off and on again after 5 minutes. If the system still does not work, switch the power off.

The following extensions will be directly connected to each of the central office lines (C.O.).

- Extension 11...C.O.1
- Extension 12...C.O.2
- Extension 13...C.O.3
- Extension 14...C.O.4
- Extension 15...C.O.5
- Extension 16...C.O.6

If the KX-A16B is connected to the system, switch off the power of the KX-A16B.

DTMF Receiver Check

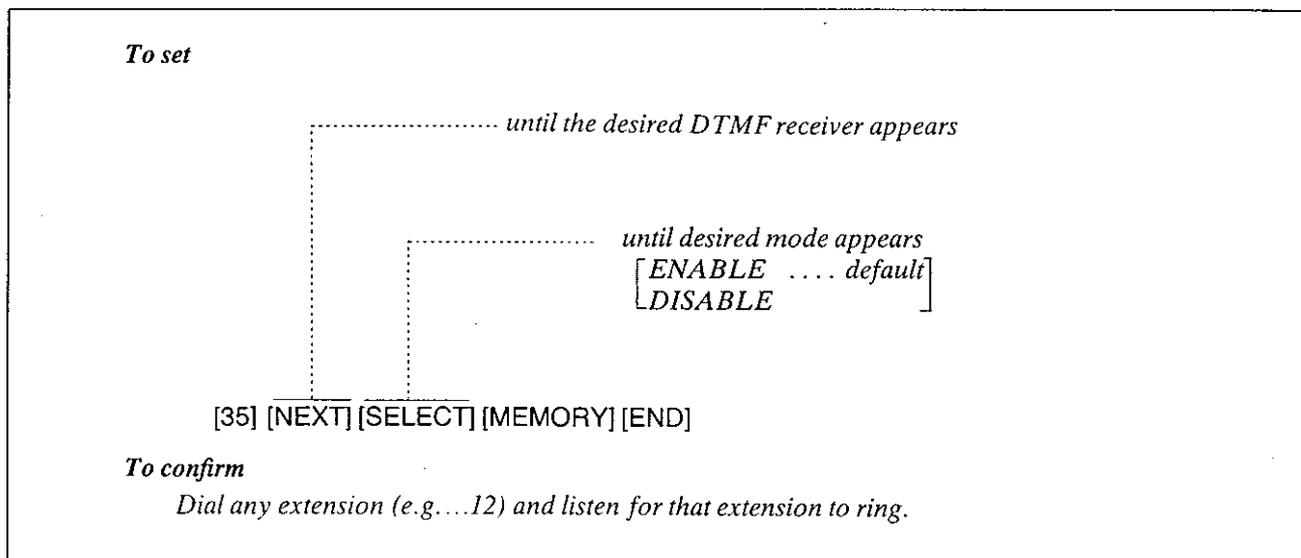

Description

DTMF (Dual Tone Multi Frequency) Receiver enables tone telephones to dial within the system.

To check the DTMF Receivers, activate the DTMF Receivers one at a time and confirm if the receiver can receive tone signals.

Operation at Extension 11

To Remove DTMF Receiver 2:

1. Set the System Program Switch to the PROGRAM position.
2. Dial (35) to enter the DTMF mode.
"DTMF RECVER SEL" will be displayed.
3. Press the NEXT button, twice.
"DTMF 1: ENABLE" and then
"DTMF 2: ENABLE" will be displayed.
4. Press the SELECT button to change to DISABLE.
"DTMF 2: DISABLE" will be displayed.
5. Press the MEMORY button.
6. Press the END button to return to the initial program mode.
7. Set the System Program Switch to the SET position.

Confirmation of DTMF Receiver 1:

1. Set the DIALING MODE (located on the rear of KX-T61630) switch to the TONE position.
2. Set the POWER FAILURE (located on the rear of KX-T61630) switch to the ON position.
3. Dial the extension number (e.g....12).
4. If DTMF Receiver is bad, do the following procedure for removing the DTMF Receiver after the next step on this section.
5. Set the POWER FAILURE Switch to the OFF position.

To check DTMF Receiver 2, remove DTMF Receiver 1 and confirm that DTMF Receiver 2 is good by the procedures of "To Remove DTMF Receiver 1" and "Confirmation of DTMF Receiver 2".

Conditions


- "DISABLE" can not be established on both DTMF Receivers 1 and 2, at the same time.

Table of System Features


The following system features can be programmed into memory.

Dial Plan Code	System Features
Extension no. (11 through 26)	Individual Inter Office Calling
DEF 3 1 or DEF 3 ABC 2	Calling Doorphone 1 or Doorphone 2
DEF 3 DEF 3	Paging—External
DEF 3 GHI 4	Paging All Extensions
DEF 3 JKL 5 DEF 3 MNO 6 DEF 3 PRS 7 or DEF 3 TUV 8	Paging Group 1, 2, 3 or 4
GHI 4 OPER 0	Dial Call Pickup
GHI 4 Extension no. (11 through 26)	Directed Call Pickup
GHI 4 DEF 3	Paging Answer
JKL 5 Extension no. (11 through 26) OR JKL 5 TUV 8 CO no. (1 through 6)	Call Park Retrieve
MNO 6	Camp-on
PRS 7 OPER 0 #	Cancelling Call Forwarding or Do Not Disturb
PRS 7 1 Extension no. (11 through 26) #	Call Forwarding
PRS 7 1 1 OPER 0 #	Do Not Disturb
PRS 7 ABC 2 1 #	Auto CO Hunting
PRS 7 ABC 2 OPER 0 #	Cancelling Auto CO Hunting
PRS 7 DEF 3 OPER 0 #	Cancelling Dial Call Pickup Deny
PRS 7 DEF 3 1 #	Dial Call Pickup Deny
PRS 7 JKL 5 OPER 0 #	Cancelling Background Music
PRS 7 JKL 5 1 #	Background Music
PRS 7 TUV 8 1 #	Flexible Night Service—Day Mode
PRS 7 TUV 8 ABC 2 #	Flexible Night Service—Night Mode

LIST OF TONES

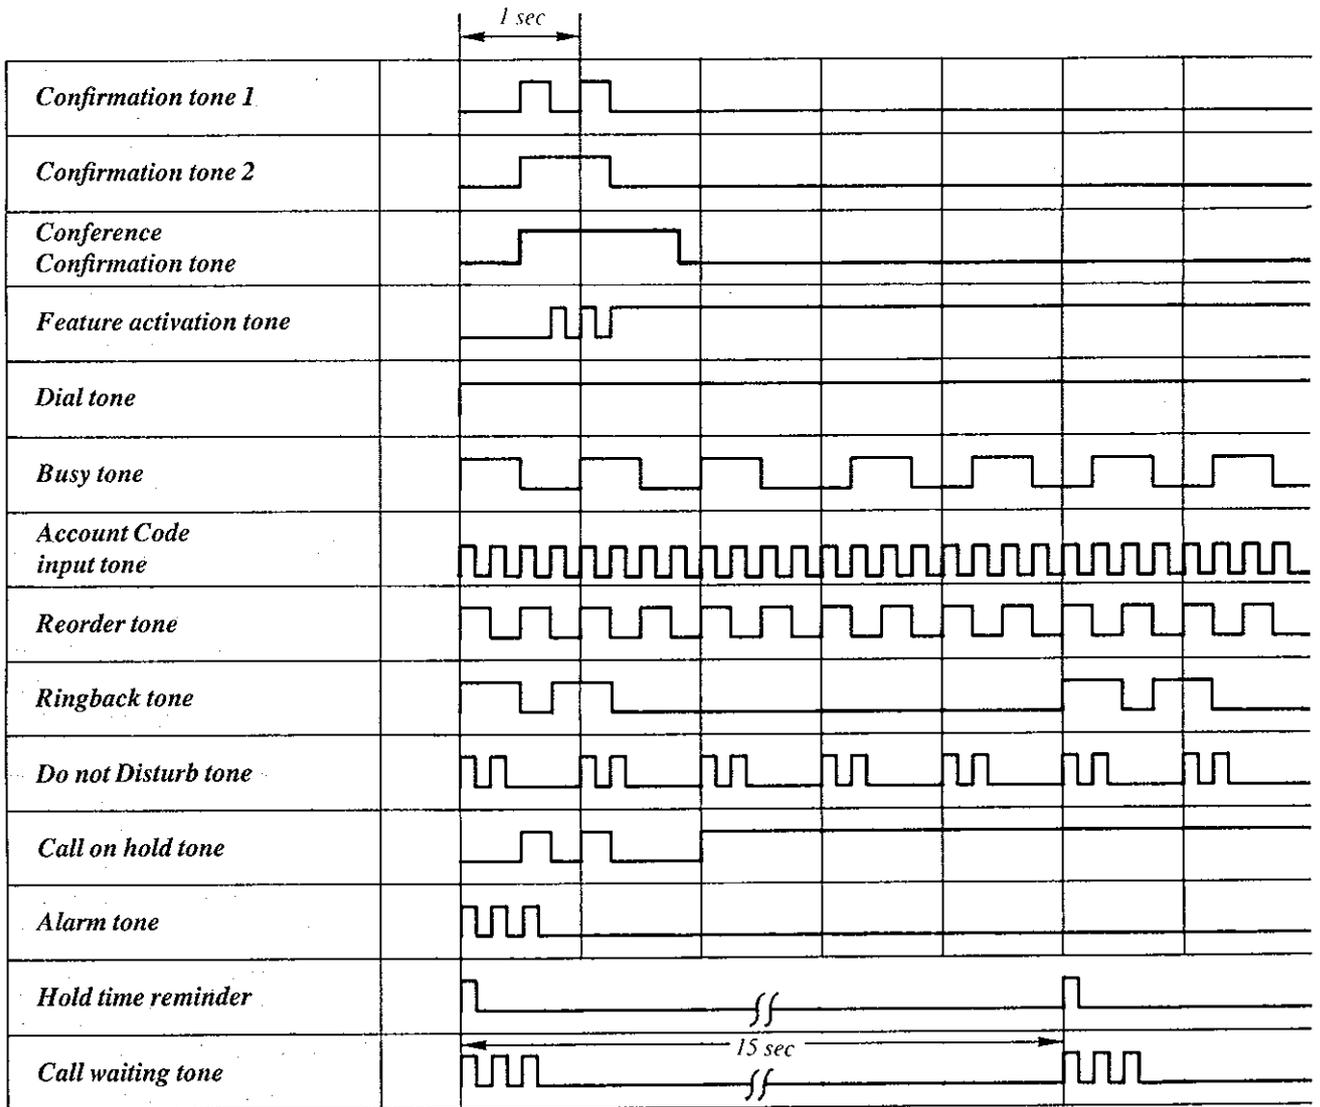

LIST OF RING TONES

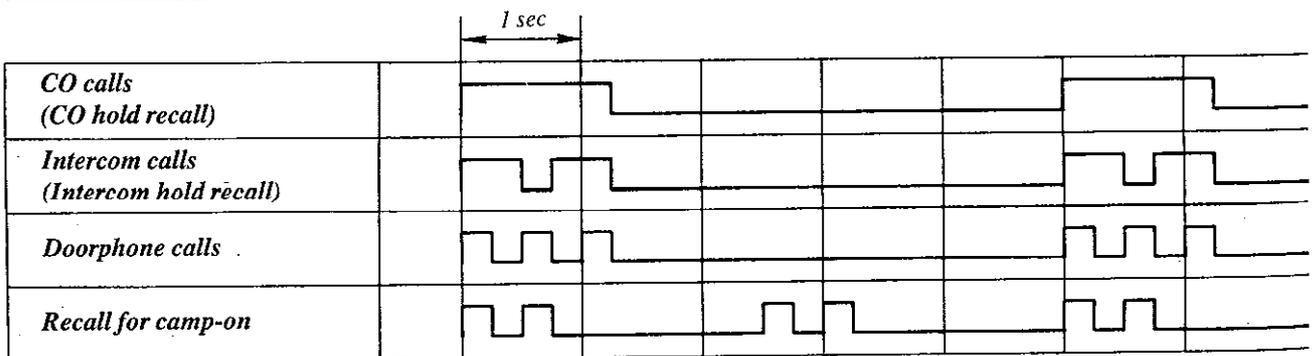

OTHERS

- *Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and television. These noise sources can interfere with the performance of the EASA-PHONE.*
- *This unit should be kept free of dust, moisture, high temperature and vibration, and should not be exposed to direct sunlight.*
- *Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.*
- *If there is trouble, disconnect the unit from the telephone line. Plug the telephone directly into the telephone line. If the telephone operates properly, do not reconnect the unit to the line until the trouble has been repaired by an authorized Panasonic Factory Service Center. If the telephone does not operate properly, chances are that the trouble is in the telephone system, and not in the unit.*
- *Do not use benzine, thinner, or similar solvents. Do not use abrasive powder to clean the cabinet. Wipe it with a soft cloth.*

“WARNING—This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications.

Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.”

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

SPECIFICATION

General Description

1. Capacity	Outsides (CO) 6 Stations 16	
2. Control Method	Stored Program CPU: 8 bits CPU, 4 bits CPU Control ROM: 64 KB, Control RAM: 16 KB	
3. Switching	Space Division CMOS Crosspoint Switch	
4. Power Supplies	Primary 230 VAC, 50 Hz Secondary Station Supply Volt: -26 V Circuit Volt: +5 V, ±7 V, ±15 V, -26 V Power Failure ●6 outsides assigned to stations (1 through 6)...power failure transfer ●System operation for 4 hours by optional Backup Adaptor.	
5. Dialing	Outward Dial Pulse 10PPS Tone Dial Internal Dial Pulse 10PPS, 20PPS Tone Dial Mode Conversion DP-DTMF, DTMF-DP	
6. Intercom paths	4	
7. Connector	Outsides (CO) Modular Jack Station Modular Jack Paging Output Pin Jack (RCA JACK) External Music Input two-conductors Jack (MINI JACK ¼ inch diameter)	
8. EXT Connection	Cable 1 pair wire (Standard Telephone) 2 pair wire (KX-T61630/KX-T61620/KX-T61650/KX-T30830/KX-T30820/KX-T30850)	
9. SMDR (Station Message) (Detail Recording)	Interface Output Equipment Detail Recording	RS-232C Printer, Data Terminal Date, Time, Ext. Number, CO Number, Calling Number, Calling Time, Account Code

Characteristics

1. Station Loop Limit	KX-T61630/KX-T61620/KX-T61650/ KX-T30830/KX-T30820/KX-T30850 40 ohms Standard Telephone 600 ohms including set Doorphone 20 ohms
2. Minimum Leak Resistance	15,000 ohms
3. Maximum Number of Station Instruments per Line	1 (KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850) or 1 (Standard telephone)
4. Ring Voltage	90 Vrms at 20 Hz depends on Ringing Load
5. Primary Power	230 VAC, 50 Hz
6. Central Office Loop Limit	1600 ohms maximum
7. Environmental Requirements	0-40°C, 10%-90%
8. Hookswitch Flash Timing Range	204-1000 msec

Panasonic

Phone Number Directory

► TELEPHONE NUMBER ◀

CO	TEL NO.	NOTE	CO	TEL NO.	NOTE
1			4		
2			5		
3			6		

► EXTENSION NUMBER ◀

No.	NAME	NOTE	No.	NAME	NOTE
11			19		
12			20		
13			21		
14			22		
15			23		
16			24		
17			25		
18			26		

► SPEED DIALING ◀

CODE	NAME	TEL NO.	CODE	NAME	TEL NO.
00			16		
01			17		
02			18		
03			19		
04			20		
05			21		
06			22		
07			23		
08			24		
09			25		
10			26		
11			27		
12			28		
13			29		
14			30		
15			31		

Panasonic

▶ SPEED DIALING ◀

CODE	NAME	TEL NO.	CODE	NAME	TEL NO.
32			66		
33			67		
34			68		
35			69		
36			70		
37			71		
38			72		
39			73		
40			74		
41			75		
42			76		
43			77		
44			78		
45			79		
46			80		
47			81		
48			82		
49			83		
50			84		
51			85		
52			86		
53			87		
54			88		
55			89		
56			90		
57			91		
58			92		
59			93		
60			94		
61			95		
62			96		
63			97		
64			98		
65			99		

PROGRAMMING TABLE

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																
Date and Time Setting	[00]	<p>[NEXT] [A] [↔] [SELECT] [↔] [B] [↔] [SELECT] [↔] [C] [↔] [D] [↔] [SELECT] [MEMORY] [END]</p> <p style="margin-left: 40px;"> year month day day of the week hour minute AM/PM </p>																																
System Speed Dialing Entry	[01] or [AUTO]	<p>[NEXT] [AB] [CD] [phone number] [MEMORY] [END]</p> <p style="margin-left: 40px;"> [9]: automatic line access number [81] through [86]: outside line access number speed access code [00 through 99] </p> <p>• There is the phone number directory on page 6-9.</p>																																
DSS Console Assignment	[02]	<p>[NEXT] [AB] [↔] [CD] [↔] [EF] [↔] [GH] [MEMORY] [END]</p> <p style="margin-left: 40px;"> Telephone extension number paired with console 2 Console 2 extension number Telephone extension number paired with console 1 Console 1 extension number </p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 30%;"></td> <td style="text-align: center;">Console 1</td> <td style="text-align: center;">Telephone paired with console 1</td> </tr> <tr> <td style="text-align: center;">Extension number</td> <td></td> <td></td> </tr> <tr> <td style="width: 30%;"></td> <td style="text-align: center;">Console 2</td> <td style="text-align: center;">Telephone paired with console 2</td> </tr> <tr> <td style="text-align: center;">Extension number</td> <td></td> <td></td> </tr> </table>		Console 1	Telephone paired with console 1	Extension number				Console 2	Telephone paired with console 2	Extension number																						
	Console 1	Telephone paired with console 1																																
Extension number																																		
	Console 2	Telephone paired with console 2																																
Extension number																																		
CO Connection Assignment	[03]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END]</p> <p style="margin-left: 40px;"> CONNECT/NO CONNECT until the desired CO number appears </p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 30%;"></th> <th style="text-align: center;">Default</th> <th colspan="6" style="text-align: center;">To make program change</th> </tr> <tr> <th style="text-align: center;">CO (s)</th> <td style="text-align: center;">all CO's</td> <td style="text-align: center;">1</td> <td style="text-align: center;">2</td> <td style="text-align: center;">3</td> <td style="text-align: center;">4</td> <td style="text-align: center;">5</td> <td style="text-align: center;">6</td> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Connect</td> <td style="text-align: center;">x</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">No connect</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change						CO (s)	all CO's	1	2	3	4	5	6	Connect	x							No connect							
	Default	To make program change																																
CO (s)	all CO's	1	2	3	4	5	6																											
Connect	x																																	
No connect																																		
Dial Mode (Tone/Pulse) Selection	[04]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END]</p> <p style="margin-left: 40px;"> TONE/PULSE until the desired CO number appears </p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 30%;"></th> <th style="text-align: center;">Default</th> <th colspan="6" style="text-align: center;">To make program change</th> </tr> <tr> <th style="text-align: center;">CO (s)</th> <td style="text-align: center;">all CO's</td> <td style="text-align: center;">1</td> <td style="text-align: center;">2</td> <td style="text-align: center;">3</td> <td style="text-align: center;">4</td> <td style="text-align: center;">5</td> <td style="text-align: center;">6</td> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Pulse mode</td> <td style="text-align: center;">x</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">Tone (DTMF) mode</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change						CO (s)	all CO's	1	2	3	4	5	6	Pulse mode	x							Tone (DTMF) mode							
	Default	To make program change																																
CO (s)	all CO's	1	2	3	4	5	6																											
Pulse mode	x																																	
Tone (DTMF) mode																																		
Switching Mode (Day/Night Service)	[05]	<p>[NEXT] [SELECT] [MEMORY] [END]</p> <p style="margin-left: 40px;"> MAN/AUTO </p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 30%;"></th> <th style="text-align: center;">Default</th> <th style="text-align: center;">To make program change</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Manual</td> <td style="text-align: center;">x</td> <td></td> </tr> <tr> <td style="text-align: center;">Automatic</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Manual	x		Automatic																									
	Default	To make program change																																
Manual	x																																	
Automatic																																		
Starting Time (Day/Night Service)	[06]	<p>[NEXT] [A] [↔] [B] [↔] [SELECT] [MEMORY] [NEXT] [C] [↔] [D] [↔] [SELECT] [MEMORY] [END]</p> <p style="margin-left: 40px;"> minute AM/PM starting time for day service (hour) minute AM/PM starting time for night service (hour) </p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 30%;"></th> <th style="text-align: center;">Default</th> <th style="text-align: center;">To make program change</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Day Plan</td> <td style="text-align: center;">9:00 AM</td> <td></td> </tr> <tr> <td style="text-align: center;">Night plan</td> <td style="text-align: center;">5:00 PM</td> <td></td> </tr> </tbody> </table>		Default	To make program change	Day Plan	9:00 AM		Night plan	5:00 PM																								
	Default	To make program change																																
Day Plan	9:00 AM																																	
Night plan	5:00 PM																																	

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																
Flexible Day Outward Dialing Assignment	[07]	<p>[NEXT] [NEXT] [C...E] [MEMORY] [END] ----- CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr><td>CO 1</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 2</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 3</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 4</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 5</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 6</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	CO 1	x																	CO 2	x																	CO 3	x																	CO 4	x																	CO 5	x																	CO 6	x																
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
CO 1	x																																																																																																																																																	
CO 2	x																																																																																																																																																	
CO 3	x																																																																																																																																																	
CO 4	x																																																																																																																																																	
CO 5	x																																																																																																																																																	
CO 6	x																																																																																																																																																	
Flexible Night Outward Dialing Assignment	[08]	<p>[NEXT] [NEXT] [C...E] [MEMORY] [END] ----- CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr><td>CO 1</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 2</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 3</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 4</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 5</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 6</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	CO 1	x																	CO 2	x																	CO 3	x																	CO 4	x																	CO 5	x																	CO 6	x																
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
CO 1	x																																																																																																																																																	
CO 2	x																																																																																																																																																	
CO 3	x																																																																																																																																																	
CO 4	x																																																																																																																																																	
CO 5	x																																																																																																																																																	
CO 6	x																																																																																																																																																	
Flexible Day Ringing Assignment	[09]	<p>[NEXT] [NEXT] [C...E] [MEMORY] [END] ----- CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr><td>CO 1</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 2</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 3</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 4</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 5</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 6</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	CO 1	x																	CO 2	x																	CO 3	x																	CO 4	x																	CO 5	x																	CO 6	x																
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
CO 1	x																																																																																																																																																	
CO 2	x																																																																																																																																																	
CO 3	x																																																																																																																																																	
CO 4	x																																																																																																																																																	
CO 5	x																																																																																																																																																	
CO 6	x																																																																																																																																																	
Flexible Night Ringing Assignment	[10]	<p>[NEXT] [NEXT] [C...E] [MEMORY] [END] ----- CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr><td>CO 1</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 2</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 3</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 4</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 5</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 6</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	CO 1	x																	CO 2	x																	CO 3	x																	CO 4	x																	CO 5	x																	CO 6	x																
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
CO 1	x																																																																																																																																																	
CO 2	x																																																																																																																																																	
CO 3	x																																																																																																																																																	
CO 4	x																																																																																																																																																	
CO 5	x																																																																																																																																																	
CO 6	x																																																																																																																																																	
Toll Restriction—Class Assignment	[11]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- CLASS 1/2/3 ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr><td>Class 1</td><td>x</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Class 2</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Class 3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Class 1	x																	Class 2																		Class 3																																																																							
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
Class 1	x																																																																																																																																																	
Class 2																																																																																																																																																		
Class 3																																																																																																																																																		

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																		
Toll Restriction— Area Code Selection	[12]	<p>[NEXT] [SELECT] [AB] [C] [MEMORY] [END]</p> <p>----- area code with 3 digits</p> <p>----- Memory location number</p> <table border="1"> <thead> <tr> <th></th> <th colspan="19">Memory location number</th> </tr> <tr> <th></th> <th>00</th><th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th> </tr> </thead> <tbody> <tr> <td>Area code entry</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Memory location number																				00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	Area code entry																																																																																																																								
	Memory location number																																																																																																																																																																			
	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19																																																																																																																																																
Area code entry																																																																																																																																																																				
Automatic Answering (Automatic/ Manual) Selection	[13]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END]</p> <p>----- AUTO ANSWER/MAN ANSWER</p> <p>----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Automatic</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Manual</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Automatic	x																	Manual																																																																																																											
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
Automatic	x																																																																																																																																																																			
Manual																																																																																																																																																																				
Host PBX Access Codes Assignment	[14]	<p>[NEXT] [NEXT] [A...D] [MEMORY] [END]</p> <p>----- up to four outside access codes each with a maximum of 2 digits</p> <p>----- until the desired CO numbers appears</p> <table border="1"> <thead> <tr> <th>CO</th> <th colspan="4">Outside access codes of the host PBX</th> </tr> </thead> <tbody> <tr><td>1</td><td></td><td></td><td></td><td></td></tr> <tr><td>2</td><td></td><td></td><td></td><td></td></tr> <tr><td>3</td><td></td><td></td><td></td><td></td></tr> <tr><td>4</td><td></td><td></td><td></td><td></td></tr> <tr><td>5</td><td></td><td></td><td></td><td></td></tr> <tr><td>6</td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	CO	Outside access codes of the host PBX				1					2					3					4					5					6																																																																																																																																			
CO	Outside access codes of the host PBX																																																																																																																																																																			
1																																																																																																																																																																				
2																																																																																																																																																																				
3																																																																																																																																																																				
4																																																																																																																																																																				
5																																																																																																																																																																				
6																																																																																																																																																																				
Preferred CO Line Assignment	[15]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END]</p> <p>----- (none) / CO 1 / CO 2 / CO 3 / CO 4 / CO 5 / CO 6</p> <p>----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>. . . . (none)</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr><td>CO 1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 2</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 4</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 5</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>CO 6</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26 (none)	x																	CO 1																		CO 2																		CO 3																		CO 4																		CO 5																		CO 6																	
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
. . . . (none)	x																																																																																																																																																																			
CO 1																																																																																																																																																																				
CO 2																																																																																																																																																																				
CO 3																																																																																																																																																																				
CO 4																																																																																																																																																																				
CO 5																																																																																																																																																																				
CO 6																																																																																																																																																																				
Programmable Call Waiting	[16]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END]</p> <p>----- EXT.-OFF, CO-OFF / EXT.-ON, CO-OFF / EXT.-OFF, CO-ON / EXT.-ON, CO-ON</p> <p>----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>EXT.-OFF, CO-OFF</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>EXT.-ON, CO-OFF</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>EXT.-OFF, CO-ON</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>EXT.-ON, CO-ON</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	EXT.-OFF, CO-OFF	x																	EXT.-ON, CO-OFF																		EXT.-OFF, CO-ON																		EXT.-ON, CO-ON																																																																							
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
EXT.-OFF, CO-OFF	x																																																																																																																																																																			
EXT.-ON, CO-OFF																																																																																																																																																																				
EXT.-OFF, CO-ON																																																																																																																																																																				
EXT.-ON, CO-ON																																																																																																																																																																				

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																		
Delayed Ringing Assignment	[17]	<p>[NEXT] [NEXT] [A...F] [MEMORY] [END] ----- dial the CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>• • • (none)</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 1</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 2</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 3</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 4</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 5</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 6</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	• • • (none)	×																	CO 1																		CO 2																		CO 3																		CO 4																		CO 5																		CO 6																	
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
• • • (none)	×																																																																																																																																																																			
CO 1																																																																																																																																																																				
CO 2																																																																																																																																																																				
CO 3																																																																																																																																																																				
CO 4																																																																																																																																																																				
CO 5																																																																																																																																																																				
CO 6																																																																																																																																																																				
Delayed Ringing Count Selection	[18]	<p>[NEXT][SELECT][MEMORY][END] ----- AFTER 1 RING/AFTER 2 RINGS/AFTER 3 RINGS/AFTER 4 RINGS</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> </thead> <tbody> <tr> <td>After 1 ring</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>After 2 rings</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>After 3 rings</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>After 4 rings</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																After 1 ring																		After 2 rings	×																	After 3 rings																		After 4 rings																																																																																									
	Default	To make program change																																																																																																																																																																		
After 1 ring																																																																																																																																																																				
After 2 rings	×																																																																																																																																																																			
After 3 rings																																																																																																																																																																				
After 4 rings																																																																																																																																																																				
Intercom Alerting Mode	[19]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- TONE CALL/VOICE CALL ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Tone call</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Voice call</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Tone call	×																	Voice call																																																																																																											
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
Tone call	×																																																																																																																																																																			
Voice call																																																																																																																																																																				
Programmable Doorphone	[20]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- D-PHONE 1, 2/1/2/ • • • (deny the ringing) ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Doorphone 1</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Doorphone 2</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Deny the ringing</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Doorphone 1	×																	Doorphone 2	×																	Deny the ringing																																																																																									
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
Doorphone 1	×																																																																																																																																																																			
Doorphone 2	×																																																																																																																																																																			
Deny the ringing																																																																																																																																																																				
Dial Call Pickup Group Assignment	[21]	<p>[NEXT] [NEXT] [A...D] [MEMORY] [END] ----- dial the pickup group number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Pickup Group 1</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Pickup Group 2</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Pickup Group 3</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Pickup Group 4</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Pickup Group 1	×																	Pickup Group 2																		Pickup Group 3																		Pickup Group 4																																																																							
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
Pickup Group 1	×																																																																																																																																																																			
Pickup Group 2																																																																																																																																																																				
Pickup Group 3																																																																																																																																																																				
Pickup Group 4																																																																																																																																																																				
Account Code Input Mode	[22]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- OPTION/FORCED ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Option</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Forced</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Option	×																	Forced																																																																																																											
	Default	To make program change																																																																																																																																																																		
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																																			
Option	×																																																																																																																																																																			
Forced																																																																																																																																																																				

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																				
Duration Time Count Start Mode	[23]	<p>[NEXT][SELECT][MEMORY][END] ----- INSTANTLY/5S AFTER DIAL/10S AFTER DIAL</p> <table border="1" data-bbox="488 439 1219 546"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Instantly</td> <td></td> <td></td> </tr> <tr> <td>5S after dial</td> <td>x</td> <td></td> </tr> <tr> <td>10S after dial</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Instantly			5S after dial	x		10S after dial																																																																										
	Default	To make program change																																																																																				
Instantly																																																																																						
5S after dial	x																																																																																					
10S after dial																																																																																						
SMDR Communication Parameters	[24]	<p>(Carriage return for a new line) [NEXT][SELECT][MEMORY] ----- CR+LF/CR</p> <table border="1" data-bbox="488 663 1219 741"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>CR+LF</td> <td>x</td> <td></td> </tr> <tr> <td>CR</td> <td></td> <td></td> </tr> </tbody> </table> <p>(Baud rate) [NEXT][SELECT][MEMORY] ----- 110B/150B/300B/600B/1200B/2400B/4800B/9600B</p> <table border="1" data-bbox="488 887 1506 965"> <thead> <tr> <th></th> <th>110B</th> <th>150B</th> <th>300B</th> <th>600B</th> <th>1200B</th> <th>2400B</th> <th>4800B</th> <th>9600B</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td></td> <td></td> <td></td> <td></td> <td>x</td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>(Word length) [NEXT][SELECT][MEMORY] ----- 7 BITS/8 BITS</p> <table border="1" data-bbox="488 1122 1219 1200"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>7 BITS</td> <td>x</td> <td></td> </tr> <tr> <td>8 BITS</td> <td></td> <td></td> </tr> </tbody> </table> <p>(Parity) [NEXT][SELECT][MEMORY] ----- NONE/MARK/SPACE/EVEN/ODD</p> <table border="1" data-bbox="488 1346 1219 1424"> <thead> <tr> <th></th> <th>None</th> <th>Mark</th> <th>Space</th> <th>Even</th> <th>Odd</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td></td> <td>x</td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>(Stop bit length) [NEXT][SELECT][MEMORY] ----- 1 BIT/2 BITS</p> <table border="1" data-bbox="504 1536 1235 1615"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>1 BIT</td> <td>x</td> <td></td> </tr> <tr> <td>2 BITS</td> <td></td> <td></td> </tr> </tbody> </table> <p>(Page length) [NEXT][AB][MEMORY] ----- 4 through 99 lines</p> <table border="1" data-bbox="504 1760 1235 1816"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Lines per page</td> <td>66</td> <td></td> </tr> </tbody> </table> <p>(Skip perforation) [NEXT][AB][MEMORY][END] ----- 0 through 95 lines</p> <table border="1" data-bbox="504 1962 1235 2018"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Skipping lines</td> <td>0</td> <td></td> </tr> </tbody> </table>		Default	To make program change	CR+LF	x		CR				110B	150B	300B	600B	1200B	2400B	4800B	9600B	Default					x				To make program change										Default	To make program change	7 BITS	x		8 BITS				None	Mark	Space	Even	Odd	Default		x				To make program change							Default	To make program change	1 BIT	x		2 BITS				Default	To make program change	Lines per page	66			Default	To make program change	Skipping lines	0	
	Default	To make program change																																																																																				
CR+LF	x																																																																																					
CR																																																																																						
	110B	150B	300B	600B	1200B	2400B	4800B	9600B																																																																														
Default					x																																																																																	
To make program change																																																																																						
	Default	To make program change																																																																																				
7 BITS	x																																																																																					
8 BITS																																																																																						
	None	Mark	Space	Even	Odd																																																																																	
Default		x																																																																																				
To make program change																																																																																						
	Default	To make program change																																																																																				
1 BIT	x																																																																																					
2 BITS																																																																																						
	Default	To make program change																																																																																				
Lines per page	66																																																																																					
	Default	To make program change																																																																																				
Skipping lines	0																																																																																					

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																							
System Data Dump	[25]	<ul style="list-style-type: none"> • SYSTEM PARA • SPEED DIAL • ALL PARA • STOP OUTPUT <p>[NEXT][SELECT][MEMORY][END]</p> <p style="margin-left: 40px;">----- SYSTEM PARA/CO PARA/EXT PARA/SPEED DIAL ALL PARA/STOP OUTPUT</p> <ul style="list-style-type: none"> • CO PARA <p>[NEXT][SELECT][MEMORY][A][END]</p> <p style="margin-left: 40px;">----- dial CO number</p> <p style="margin-left: 40px;">----- until the CO PARA appears</p> <ul style="list-style-type: none"> • EXT PARA <p>[NEXT][SELECT][MEMORY][AB][END]</p> <p style="margin-left: 40px;">----- dial extension number</p> <p style="margin-left: 40px;">----- until the EXT PARA appears</p>																																							
SMDR Incoming/Outgoing Selection	[26]	<p>[NEXT][SELECT][MEMORY][NEXT][SELECT][MEMORY][END]</p> <p style="margin-left: 40px;">----- OUTGOING: ON/OFF ----- INCOMING: ON/OFF</p> <table border="1" data-bbox="523 1131 1257 1238"> <thead> <tr> <th rowspan="2"></th> <th colspan="2">Outgoing</th> <th colspan="2">Incoming</th> </tr> <tr> <th>ON</th> <th>OFF</th> <th>ON</th> <th>OFF</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td style="text-align: center;">x</td> <td></td> <td style="text-align: center;">x</td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Outgoing		Incoming		ON	OFF	ON	OFF	Default	x		x		To make program change																								
	Outgoing			Incoming																																					
	ON	OFF	ON	OFF																																					
Default	x		x																																						
To make program change																																									
Hold Time Reminder	[27]	<p>[NEXT][SELECT][MEMORY][END]</p> <p style="margin-left: 40px;">----- 1 MIN/2 MIN...../9 MIN</p> <table border="1" data-bbox="510 1355 1241 1456"> <thead> <tr> <th rowspan="2"></th> <th colspan="9">minutes</th> </tr> <tr> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td></td> <td></td> <td style="text-align: center;">x</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		minutes									1	2	3	4	5	6	7	8	9	Default			x							To make program change									
	minutes																																								
	1	2	3	4	5	6	7	8	9																																
Default			x																																						
To make program change																																									
Hold Recall Time Set	[28]	<p>[NEXT][SELECT][MEMORY][END]</p> <p style="margin-left: 40px;">----- 30 SECI/1 MINI/1.5 MINI/2 MIN/DISABLE</p> <table border="1" data-bbox="510 1563 1241 1664"> <thead> <tr> <th></th> <th>30 seconds</th> <th>1 minute</th> <th>1 minute 30 seconds</th> <th>2 minutes</th> <th>disable</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td style="text-align: center;">x</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		30 seconds	1 minute	1 minute 30 seconds	2 minutes	disable	Default	x					To make program change																										
	30 seconds	1 minute	1 minute 30 seconds	2 minutes	disable																																				
Default	x																																								
To make program change																																									
Programmable External Paging Access Tone	[29]	<p>[NEXT][SELECT][MEMORY][END]</p> <p style="margin-left: 40px;">----- ENABLE/DISABLE</p> <table border="1" data-bbox="510 1765 1241 1843"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Enable</td> <td style="text-align: center;">x</td> <td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Enable	x		Disable																																
	Default	To make program change																																							
Enable	x																																								
Disable																																									

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																								
Programmable secret Speed Dial	[30]	<p>[NEXT] [SELECT] [MEMORY] [END] ----- NO SECRET/ SECRET</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="6">To make program change</th> </tr> </thead> <tbody> <tr> <td>No secret</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Secret</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change						No secret	x							Secret																							
	Default	To make program change																																								
No secret	x																																									
Secret																																										
Hookswitch Flash Timing	[31]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- 300 MS/600 MS/900 MS ----- until the desired CO number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="6">To make program change</th> </tr> </thead> <tbody> <tr> <td>CO(s)</td> <td>all CO's</td> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td> </tr> <tr> <td>300 msec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>600 msec</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>900 msec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change						CO(s)	all CO's	1	2	3	4	5	6	300 msec								600 msec	x							900 msec							
	Default	To make program change																																								
CO(s)	all CO's	1	2	3	4	5	6																																			
300 msec																																										
600 msec	x																																									
900 msec																																										
Disconnect Time	[32]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- 1.5 SEC/4.0 SEC ----- until the desired CO number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="6">To make program change</th> </tr> </thead> <tbody> <tr> <td>CO(s)</td> <td>all CO's</td> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td> </tr> <tr> <td>1.5 sec</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>4.0 sec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change						CO(s)	all CO's	1	2	3	4	5	6	1.5 sec	x							4.0 sec															
	Default	To make program change																																								
CO(s)	all CO's	1	2	3	4	5	6																																			
1.5 sec	x																																									
4.0 sec																																										
Calling Party Control (CPC) Signal	[33]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- ENABLE/DISABLE ----- until the desired CO number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="6">To make program change</th> </tr> </thead> <tbody> <tr> <td>CO(s)</td> <td>all CO's</td> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td> </tr> <tr> <td>Enable</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change						CO(s)	all CO's	1	2	3	4	5	6	Enable	x							Disable															
	Default	To make program change																																								
CO(s)	all CO's	1	2	3	4	5	6																																			
Enable	x																																									
Disable																																										
DSS Button Mode	[34]	<p>[NEXT] [SELECT] [MEMORY] [END] ----- WITHOUT TRANSFER/WITH TRANSFER</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="6">To make program change</th> </tr> </thead> <tbody> <tr> <td>Without transfer</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>With transfer</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change						Without transfer	x							With transfer																							
	Default	To make program change																																								
Without transfer	x																																									
With transfer																																										
DTMF Receiver Check	[35]	<p>[NEXT] [SELECT] [MEMORY] [END] ----- ENABLE/DISABLE ----- until the desired DTMF receiver appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="2">To make program change</th> </tr> </thead> <tbody> <tr> <td>DTMF receiver</td> <td>1, 2</td> <td>1</td><td>2</td> </tr> <tr> <td>Enable</td> <td>x</td> <td></td><td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td><td></td> </tr> </tbody> </table>		Default	To make program change		DTMF receiver	1, 2	1	2	Enable	x			Disable																											
	Default	To make program change																																								
DTMF receiver	1, 2	1	2																																							
Enable	x																																									
Disable																																										

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																
Transfer Recall Time	[36]	<p>[NEXT] [SELECT] [MEMORY] [END] ----- 30 SEC/15 SEC</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>30 sec</td> <td>x</td> <td></td> </tr> <tr> <td>15 sec</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	30 sec	x		15 sec																																																																																																																																									
	Default	To make program change																																																																																																																																																
30 sec	x																																																																																																																																																	
15 sec																																																																																																																																																		
M3/FWD Selection	[37]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- FEATURE KEY/FWD, DND KEY ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Feature key</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>FWD/DND key</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Feature key	x																	FWD/DND key																																																																																									
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
Feature key	x																																																																																																																																																	
FWD/DND key																																																																																																																																																		
Programmable Executive Override	[38]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- ENABLE/DISABLE ----- until the desired mode appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Disable</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Enable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Disable	x																	Enable																																																																																									
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
Disable	x																																																																																																																																																	
Enable																																																																																																																																																		
Automatic Designated CO Line Access	[39]	<p>[NEXT] [NEXT] [C...E] [MEMORY] [END] ----- dial the CO number ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>CO 1</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 2</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 3</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 4</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 5</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>CO 6</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	CO 1	x																	CO 2	x																	CO 3	x																	CO 4	x																	CO 5	x																	CO 6	x																
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
CO 1	x																																																																																																																																																	
CO 2	x																																																																																																																																																	
CO 3	x																																																																																																																																																	
CO 4	x																																																																																																																																																	
CO 5	x																																																																																																																																																	
CO 6	x																																																																																																																																																	
Programmable Call Waiting Tone	[40]	<p>[NEXT] [NEXT] [SELECT] [MEMORY] [END] ----- TONE 1/TONE 2 ----- until the desired extension number appears</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>Extensions</th> <th>all extensions</th> <th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th> </tr> </thead> <tbody> <tr> <td>Tone 1</td> <td>x</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Tone 2</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	Tone 1	x																	Tone 2																																																																																									
	Default	To make program change																																																																																																																																																
Extensions	all extensions	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																																																																	
Tone 1	x																																																																																																																																																	
Tone 2																																																																																																																																																		
Station Program Clear	[98]	[NEXT] [MEMORY] [END]																																																																																																																																																
System Clear	[99]	[NEXT] [MEMORY] [END]																																																																																																																																																

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Detach this position

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Detach this position

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

Quick Reference Card for Standard Telephone

TO MAKE CALLS

- Inter office calling: extension no.
- Outward dialing
 - Automatic line access: 9 phone no.
 - Individual line access: 8 CO no. phone no.
- Speed dialing: * speed access no.
(A rotary phone will not function this mode.)
- Calling doorphone
For doorphone 1: 3 1
For doorphone 2: 3 2

WHEN A LINE IS BUSY

- Automatic call back busy: 6
- Busy station signaling: 1
- Last number redial: # or 8 0

TO RECEIVE CALLS

- Dial call pickup: 4 0
- Directed call pickup: 4 extension no.
- Call park retrieve: 5 extension no.

WHILE HAVING A CONVERSATION

- Call on hold: Flash hookswitch
- Call splitting: Flash hookswitch
- Conference: Consult with 2nd party while 1st party is on hold
Flash hookswitch 3
- Call waiting: Flash hookswitch Hang up
Lift handset
- Call transfer: Flash hookswitch extension no.

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #

USE OF OTHER FEATURES

- Paging all extensions: 3 4
 - Paging group: 3 5
 - Paging-external: 3 3
 - Paging answer: 4 3
 - External feature access: Flash hookswitch 0
 - Intercom alerting mode: Hear 1 beep *
- (A rotary phone will not function this mode.)

STATION PROGRAMMING

You may dial "0" instead of pressing the "#" button.

- Call forwarding
 - Setting: 7 1 extension no. #
 - To cancel: 7 0 #
- Dial call pickup deny
 - Setting: 7 3 1 #
 - To cancel: 7 3 0 #
- Do not disturb
 - Setting: 7 1 1 0 #
 - To cancel: 7 0 #
- Data line security
 - Setting: 7 4 1 #
 - To cancel: 7 4 0 #
- Station programming clear: 7 9 #



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono.
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión

Cortar aquí



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

- Vd. puede discar "0" en vez de pulsar el botón "#".
- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
 - Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
 - No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
 - Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
 - Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACION

- Vd. puede discar "0" en vez de pulsar el botón "#".
- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
 - Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
 - No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
 - Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
 - Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

- Vd. puede discar "0" en vez de pulsar el botón "#".
- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
 - Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
 - No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
 - Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
 - Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACION

- Vd. puede discar "0" en vez de pulsar el botón "#".
- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
 - Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
 - No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
 - Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
 - Despeje de programación de estación: 7 9 #



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colgar
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colga
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



Tarjeta de Referencia Rápida para Teléfono Estándar

PARA HACER LLAMADAS

- Llamada de enlace: no. de extensión
- Llamada de salida
 - Acceso de línea automático: 9 no. de teléfono
 - Acceso de línea individual: 8 no. CO no. de teléfono
- Llamada rápida: * no. de acceso rápido
(No es disponible un teléfono rotatorio.)
- Llamada de teléfono de puerta
Para teléfono de puerta 1: 3 1
Para teléfono de puerta 2: 3 2

CUANDO UNA LINEA ESTA OCUPADA

- Ocupado de retrodemanda automática: 6
- Señal de estación ocupada: 1
- Redisco de último número: # o 8 0

PARA RECIBIR LLAMADAS

- Captación de llamada de disco: 4 0
- Captación de llamada directa: 4 no. de extensión
- Recuperación de llamada en estacionamiento: 5 no. de extensión

MIENTRAS SE TIENE UNA CONVERSACION

- Llamada en retención: Centellear gancho conmutador
- Partición de llamada: Centellear gancho conmutador
- Conferencia: Consultar con 2do. y 1er. usuario en retención.
Centellear gancho conmutador 3
- Espera de llamada: Centellear gancho conmutador Colga
Levantar el microteléfono
- Transferencia de llamada: Centellear gancho conmutador
no. de extensión



UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

Vd. puede discar "0" en vez de pulsar el botón "#".

- Transmisión de llamada
 - Fijación: 7 1 no. de extensión ||#
 - Para cancelar: 7 0 #
- Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
- No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
- Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
- Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

Vd. puede discar "0" en vez de pulsar el botón "#".

- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
- Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
- No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
- Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
- Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

Vd. puede discar "0" en vez de pulsar el botón "#".

- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
- Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
- No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: 7 0 #
- Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
- Despeje de programación de estación: 7 9 #

UTILIZACIÓN DE OTRAS CARACTERÍSTICAS

- Busca de personas en todas las extensiones: 3 4
- Busca en grupos: 3 5
- Busca externa: 3 3
- Busca contestación: 4 3
- Acceso de característica externa:
Centellear gancho conmutador 0
- Modalidad de aviso de interfono: Oír 1 pitido *
(No es disponible un teléfono rotatorio.)

PROGRAMACIÓN DE ESTACIÓN

Vd. puede discar "0" en vez de pulsar el botón "#".

- Transmisión de llamada
 - Fijación: 7 1 no. de extensión #
 - Para cancelar: 7 0 #
- Bloqueo de captación de llamada de disco
 - Fijación: 7 3 1 #
 - Para cancelar: 7 3 0 #
- No perturbar
 - Fijación: 7 1 1 0 #
 - Para cancelar: |7||0 #
- Seguridad de línea de datos
 - Fijación: 7 4 1 #
 - Para cancelar: 7 4 0 #
- Despeje de programación de estación: 7 9 #



إستخدام المميزات الأخرى
● منادات كافة الفروع : 3 4
● منادات مجموعة : 3 5
● منادات - خارجية : 3 3
● إجابة المنادات : 4 3
● نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
● حالة التنبيه للهاتف الداخلي : ستمع نفمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة
بامكانك طلب «0» بدلا من كبس زر «#» .
● توجيه النداء
● للتحريض : # رقم الفرع 7 1
● للتبديل : # 7 0
● طلب منع إلتقاط النداء
● للتحريض : # 7 3 1
● للتبديل : # 7 3 0
● عدم الأزعاج
● للتحريض : # 7 1 1 0
● للتبديل : # 7 0
● أمان بيانات الخط
● للتحريض : # 7 4 1
● للتبديل : # 7 4 0
● إلغاء برمجة المحطة : # 7 9

إستخدام المميزات الأخرى
● منادات كافة الفروع : 3 4
● منادات مجموعة : 3 5
● منادات - خارجية : 3 3
● إجابة المنادات : 4 3
● نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
● حالة التنبيه للهاتف الداخلي : ستمع نفمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة
بامكانك طلب «0» بدلا من كبس زر «#» .
● توجيه النداء
● للتحريض : # رقم الفرع 7 1
● للتبديل : # 7 0
● طلب منع إلتقاط النداء
● للتحريض : # 7 3 1
● للتبديل : # 7 3 0
● عدم الأزعاج
● للتحريض : # 7 1 1 0
● للتبديل : # 7 0
● أمان بيانات الخط
● للتحريض : # 7 4 1
● للتبديل : # 7 4 0
● إلغاء برمجة المحطة : # 7 9



إستخدام المميزات الأخرى
● منادات كافة الفروع : 3 4
● منادات مجموعة : 3 5
● منادات - خارجية : 3 3
● إجابة المنادات : 4 3
● نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
● حالة التنبيه للهاتف الداخلي : ستمع نفمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة
بامكانك طلب «0» بدلا من كبس زر «#» .
● توجيه النداء
● للتحريض : # رقم الفرع 7 1
● للتبديل : # 7 0
● طلب منع إلتقاط النداء
● للتحريض : # 7 3 1
● للتبديل : # 7 3 0
● عدم الأزعاج
● للتحريض : # 7 1 1 0
● للتبديل : # 7 0
● أمان بيانات الخط
● للتحريض : # 7 4 1
● للتبديل : # 7 4 0
● إلغاء برمجة المحطة : # 7 9

إستخدام المميزات الأخرى
● منادات كافة الفروع : 3 4
● منادات مجموعة : 3 5
● منادات - خارجية : 3 3
● إجابة المنادات : 4 3
● نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
● حالة التنبيه للهاتف الداخلي : ستمع نفمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة
بامكانك طلب «0» بدلا من كبس زر «#» .
● توجيه النداء
● للتحريض : # رقم الفرع 7 1
● للتبديل : # 7 0
● طلب منع إلتقاط النداء
● للتحريض : # 7 3 1
● للتبديل : # 7 3 0
● عدم الأزعاج
● للتحريض : # 7 1 1 0
● للتبديل : # 7 0
● أمان بيانات الخط
● للتحريض : # 7 4 1
● للتبديل : # 7 4 0
● إلغاء برمجة المحطة : # 7 9





إستخدام المميزات الأخرى

- منادات كافة الفروع : 3 4
- منادات مجموعة : 3 5
- منادات - خارجية : 3 3
- إجابة المنادات : 4 3
- نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
- حالة التنبيه للهاتف الداخلي : ستمسع نغمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة

- بإمكانك طلب «0» بدلا من كبس زر «#».
- توجيه النداء
- للتحريض : # رقم الفرع 7 1
- للتبديل : # 7 0
- طلب منع التقاط النداء
- للتحريض : # 7 3 1
- للتبديل : # 7 3 0
- عدم الأزعاج
- للتحريض : # 7 1 1 0
- للتبديل : # 7 0
- أمان بيانات الخط
- للتحريض : # 7 4 1
- للتبديل : # 7 4 0
- إلغاء برمجة المحطة : # 7 9

إستخدام المميزات الأخرى

- منادات كافة الفروع : 3 4
- منادات مجموعة : 3 5
- منادات - خارجية : 3 3
- إجابة المنادات : 4 3
- نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
- حالة التنبيه للهاتف الداخلي : ستمسع نغمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة

- بإمكانك طلب «0» بدلا من كبس زر «#».
- توجيه النداء
- للتحريض : # رقم الفرع 7 1
- للتبديل : # 7 0
- طلب منع التقاط النداء
- للتحريض : # 7 3 1
- للتبديل : # 7 3 0
- عدم الأزعاج
- للتحريض : # 7 1 1 0
- للتبديل : # 7 0
- أمان بيانات الخط
- للتحريض : # 7 4 1
- للتبديل : # 7 4 0
- إلغاء برمجة المحطة : # 7 9

قص من هنا



إستخدام المميزات الأخرى

- منادات كافة الفروع : 3 4
- منادات مجموعة : 3 5
- منادات - خارجية : 3 3
- إجابة المنادات : 4 3
- نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
- حالة التنبيه للهاتف الداخلي : ستمسع نغمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة

- بإمكانك طلب «0» بدلا من كبس زر «#».
- توجيه النداء
- للتحريض : # رقم الفرع 7 1
- للتبديل : # 7 0
- طلب منع التقاط النداء
- للتحريض : # 7 3 1
- للتبديل : # 7 3 0
- عدم الأزعاج
- للتحريض : # 7 1 1 0
- للتبديل : # 7 0
- أمان بيانات الخط
- للتحريض : # 7 4 1
- للتبديل : # 7 4 0
- إلغاء برمجة المحطة : # 7 9

إستخدام المميزات الأخرى

- منادات كافة الفروع : 3 4
- منادات مجموعة : 3 5
- منادات - خارجية : 3 3
- إجابة المنادات : 4 3
- نفوذ الى ميزة خارجية : تومض المفتاح الانعقافي 0
- حالة التنبيه للهاتف الداخلي : ستمسع نغمة واحدة * (غير متوفر مع الهاتف الدوار.)

برمجة المحطة

- بإمكانك طلب «0» بدلا من كبس زر «#».
- توجيه النداء
- للتحريض : # رقم الفرع 7 1
- للتبديل : # 7 0
- طلب منع التقاط النداء
- للتحريض : # 7 3 1
- للتبديل : # 7 3 0
- عدم الأزعاج
- للتحريض : # 7 1 1 0
- للتبديل : # 7 0
- أمان بيانات الخط
- للتحريض : # 7 4 1
- للتبديل : # 7 4 0
- إلغاء برمجة المحطة : # 7 9



